

CAPP/USA'S Bell & Gossett Product Page

CAPP/USA • 201 Marple Ave. Clifton Heights, Pa 19018

Call CAPP/USA Today for Pricing and Availability! 1-800-356-8000

Visit us on the web at www.cappusa.com

BELL & GOSSETT PART No.	DESCRIPTION	PHONE No.
101001	IB 3/4 FLANGE	(800)356-8000
101002	IB 1 FLANGE 12/PKG	(800)356-8000
101003	IB 1-1/4 FLANGE	(800)356-8000
101004	IB 1-1/2 FLANGE	(800)356-8000
101005	IB 1 FLANGE 12/PKG	(800)356-8000
101006	HV 1-1/4 BRZ FLANGE	(800)356-8000
101007	HV 1-1/2 BRZ FLANGE	(800)356-8000
101011	3/4 FLANGES	(800)356-8000
101012	1 FLANGE 12/PKG	(800)356-8000
101013	1-1/4 BRZ FLANGE	(800)356-8000
101014	1-1/2 BRZ FLANGE	(800)356-8000
101015	1 BRZ FLANGE 12/PKG	(800)356-8000
101016	1-1/4 BRZ FLANGE	(800)356-8000
101017	1-1/2 BRZ FLANGE	(800)356-8000
101215	C/I BOOSTER PUMP FLG-PR	(800)356-8000
101216	BRZ BOOSTER PUMP FLG-PR	(800)356-8000
101217	C/I BOOSTER PUMP FLG-PR	(800)356-8000
101218	BRZ BOOSTER PUMP FLG-PR	(800)356-8000
101219	BRZ BOOSTER PUMP FLG-PR	(800)356-8000
101220	BRZ BOOSTER PUMP FLG-PR	(800)356-8000
101221	3/4 ISOLATION FLG	(800)356-8000
101222	1IN ISOLATION FLG	(800)356-8000
101223	1-1/4 ISOLATION FLG	(800)356-8000
101224	1IN ISOLATION FLG	(800)356-8000
101225	1-1/4 ISOLATION FLG	(800)356-8000
101226	3/4 ISOLATION FLG	(800)356-8000
101227	1IN ISOLATION FLG	(800)356-8000
101228	1-1/4 ISOLATION FLG	(800)356-8000
101229	1IN ISOLATION FLG	(800)356-8000
101230	1-1/4 ISOLATION FLG	(800)356-8000
102206	PR IB PUMP L/FLG	(800)356-8000
102207	PRBI PUMP L/FLG	(800)356-8000
102208	3IN PRAB PUMP W/FLG	(800)356-8000
102210	HVNFI 1IN 115V PUMP	(800)356-8000
102213	1-1/2" BST PUMP L/FLG 1/6HP	(800)356-8000
102214	2NFI 115V PUMP W/FLG	(800)356-8000

102217	2IN BOOST PUMP W/FLG 1/12HP	(800)356-8000
102218	2-1/2 115V PUMP W/FLG	(800)356-8000
102219	2-1/2BI BOOSTER PUMP	(800)356-8000
102220	2-1/2AB PUMP W/FLG	(800)356-8000
102222	LD3 115V PUMP W/FLG	(800)356-8000
102223	LD3BI 115V PUMP W/FLG	(800)356-8000
102224	3IN BOOST PUMP W/FLG 1/4HP	(800)356-8000
102226	HD3 115V PUMP W/FLG	(800)356-8000
102227	HD3BI 115V PUMP W/FLG	(800)356-8000
102228	3IN BOOST PUMP W/FLG 1/3HP	(800)356-8000
102230	1-1/2" BST PUMP L/FLG 1/6HP	(800)356-8000
102231	HVAB PUMP L/FLG	(800)356-8000
102232	2BI 1/6HP W/FLG	(800)356-8000
102233	2IN BOOST PUMP W/FLG 1/12HP	(800)356-8000
103203	C/I SYS LUBE CIRCULATOR	(800)356-8000
103204	BRZ SYS LUBE CIRCULATOR	(800)356-8000
103251	IB CIRCULTR	(800)356-8000
103252	BB CIRCULTR	(800)356-8000
103254	BRZ HOT WATER CIRCULATOR	(800)356-8000
103255	BB CRCULTR	(800)356-8000
103256	LEAD FREE BRZ CIRCULATOR	(800)356-8000
103257	BRZ HOT WATER CIRCULATOR	(800)356-8000
103258	BRZ HOT WATER CIRCULATOR	(800)356-8000
103259	BRZ HOT WATER CIRCULATOR	(800)356-8000
103260	BRZ HOT WATER CIRCULATOR	(800)356-8000
103261	BRZ HOT WATER CIRCULATOR	(800)356-8000
103267	CI HYDRONIC CIRCULATOR	(800)356-8000
103268	CAST IRON CIRCULATOR	(800)356-8000
103310	LEAD FREE BRZ CIRCULATOR	(800)356-8000
103311	LEAD FREE BRZ CIRCULATOR	(800)356-8000
103312	LEAD FREE BRZ CIRCULATOR	(800)356-8000
103314	LEAD FREE BRZ CIRCULATOR	(800)356-8000
103316	BRZ HOT WATER CIRCULATOR	(800)356-8000
103350	CI HYDRONIC CIRCULATOR	(800)356-8000
103351	BRZ HOT WATER CIRCULATOR	(800)356-8000
103352	CI HYDRONIC CIRCULATOR	(800)356-8000
103353	BRZ HOT WATER CIRCULATOR	(800)356-8000
103357	CIRCULATOR	(800)356-8000
105089	PD35S 115/230V 1/2HP	(800)356-8000
105090	PD35SBI 115/230V 1/2HP	(800)356-8000
105091	HYDRONIC BOOSTER PUMP	(800)356-8000
105092	3IN BOOSTER PUMP W/FLG 1/2HP	(800)356-8000
105093	PD35T 208-230/460V 1/2HP	(800)356-8000
105094	PD35TBI 208-230/460V	(800)356-8000

105095	HYDRONIC BOOSTER PUMP	(800)356-8000
105096	3IN BOOSTER PUMP W/FLG 1/2HP	(800)356-8000
105097	PD37S 115/230V 3/4HP	(800)356-8000
105098	PD37SBI 115/230V 3/4HP	(800)356-8000
105099	HYDRONIC BOOSTER PUMP	(800)356-8000
105100	3IN BOOSTER PUMP W/FLG 3/4HP	(800)356-8000
105101	PD37T 208-230/460V 3/4HP	(800)356-8000
105102	PD37TBI 208-230/460V	(800)356-8000
105103	HYDRONIC BOOSTER PUMP	(800)356-8000
105104	3IN BOOSTER PUMP W/FLG 3/4HP	(800)356-8000
105121	PD38S 115/230V 1HP	(800)356-8000
105122	PD38SBI 115/230V 1HP	(800)356-8000
105123	3IN BOOSTER PUMP W/FLG 1HP	(800)356-8000
105124	HYDRONIC BOOSTER PUMP	(800)356-8000
105133	PD38T BOOSTER PUMP	(800)356-8000
105134	PD38T-BI BOOSTER PUMP	(800)356-8000
105135	3IN BOOSTER PUMP W/FLG 1HP	(800)356-8000
105136	HYDRONIC BOOSTER PUMP	(800)356-8000
105137	PD40T BOOSTER PUMP	(800)356-8000
105138	PD40T-BI BOOSTER PUMP	(800)356-8000
105139	3IN BOOSTER PUMP W/FLG 1-1/2HP	(800)356-8000
105151	PD40S 115/230V 1-1/2HP	(800)356-8000
105152	PD40SBI 115/230V 1-1/2HP	(800)356-8000
105153	3IN BOOSTER PUMP W/FLG 1-1/2HP	(800)356-8000
105154	HYDRONIC BOOSTER PUMP	(800)356-8000
106189	100NFI PUMP L/FLG	(800)356-8000
106190	100BI 115V PUMP L/FLG	(800)356-8000
106192	3/4-1-1/2" L/FLG 1/12HP PUMP	(800)356-8000
106193	CIRCULATOR	(800)356-8000
106194	CIRCULATOR	(800)356-8000
106197	3/4-1-1/2" L/FLG 1/12HP PUMP	(800)356-8000
106502	110V 1/20HP BOOSTER PUMP	(800)356-8000
106504	220V 1/20HP BOOSTER PUMP	(800)356-8000
106506	LR-20BF PUMP L/FLG	(800)356-8000
106513	LR-15B PUMP	(800)356-8000
107004	S-4IN FLOW CONTROL VALVE	(800)356-8000
107006	A-2-1/2 FLOW CONTROL VALVE	(800)356-8000
107007	A-3 FLOW CONTROL VALVE	(800)356-8000
107014	S-2-1/2 FLOW CONTROL VALVE	(800)356-8000
107015	S-3IN FLOW CONTROL VALVE	(800)356-8000
107018	SA-1IN FLOW CONTROL VALVE	(800)356-8000
107019	SA-1-1/4 FLOW CONTROL VALVE	(800)356-8000
107020	SA-1-1/2 FLOW CONTROL VALVE	(800)356-8000
107021	SA-2IN FLOW CONTROL VALVE	(800)356-8000

107024	SB-3/4 FLOW CONTROL VALVE	(800)356-8000
107034	SA-3/4 FLOW CONTROL VALVE	(800)356-8000
107035	FLOW CONTROL VALVE	(800)356-8000
107037	1IN FLOW CONTROL VALVE	(800)356-8000
107038	1-1/4 FLOW CONTROL VALVE	(800)356-8000
108119	3/4X1/2 COPPER RED RING	(800)356-8000
108120	1INX1/2 COPPER RED RING	(800)356-8000
108121	1INX3/4 COPPER RED RING	(800)356-8000
108122	1-1/4X1/2 COPPER RED RING	(800)356-8000
108123	1-1/4X3/4 COPPER RED RING	(800)356-8000
108124	1-1/2X3/4 COPPER RED RING	(800)356-8000
108125	1-1/2X1IN COPPER RED RING	(800)356-8000
108126	2INX3/4 COPPER RED RING	(800)356-8000
108127	2INX1IN COPPER RED RING	(800)356-8000
109017	CTS-7524 24V 3/4 ZONE CNTL VLV	(800)356-8000
109024	CT-24V ZONE CONTROL VALVE	(800)356-8000
109037	CTF-10024 24V ZONE CONTROL VLV	(800)356-8000
109038	FLARE VALVE CONNECTOR	(800)356-8000
109039	FLARE CONNECTOR VALVE	(800)356-8000
109040	FLARE CONNECTOR VALVE	(800)356-8000
109051	CT-75S 3/4 ZONE CNTRL VLV	(800)356-8000
109053	VALVE BODY	(800)356-8000
109054	CONVERSION KIT	(800)356-8000
109235	1/2 ANG PTN VLV BDY W/O TPC	(800)356-8000
109236	3/4 ANG PTN VLV BDY W/O TPC	(800)356-8000
109237	1IN ANG PTN VLV BDY W/O TPC	(800)356-8000
109239	1/2 STR PTN VLV BDY W/O TPC	(800)356-8000
109240	3/4 STR PTN VLV BDY W/O TPC	(800)356-8000
109241	1IN STR PTN VLV BDY W/O TPC	(800)356-8000
109243	TM42-50 THERMO CONTROL VALVE	(800)356-8000
109244	TM42-75 THERMO CONTROL VALVE	(800)356-8000
109247	1/2 NPT VALVE TAILPIECE	(800)356-8000
109248	3/4 NPT VALVE TAILPIECE	(800)356-8000
109249	1IN NPT VALVE TAILPIECE	(800)356-8000
109251	1/2 SWEAT VALVE TAILPIECE	(800)356-8000
109252	3/4 SWEAT VALVE TAILPIECE	(800)356-8000
109253	1IN SWEAT VALVE TAILPIECE	(800)356-8000
109254	2PC-3 ZONE PUMP CNTRL	(800)356-8000
109401	ZONE VALVE CONTROLLER	(800)356-8000
109402	ZONE VALVE CONTROLLER	(800)356-8000
109403	ZONE VALVE CONTROLLER	(800)356-8000
109404	ZONE VALVE CONTROLLER	(800)356-8000
109405	ZONE VALVE CONTROLLER	(800)356-8000
109406	ZONE VALVE CONTROLLER	(800)356-8000

109407	ZONE VALVE CONTROLLER	(800)356-8000
109408	ZONE VALVE CONTROLLER	(800)356-8000
109409	ZONE VALVE CONTROLLER	(800)356-8000
110033	1-1/2" 30PSIG IN&OUT RLF VALVE	(800)356-8000
110034	2IN 30PSIG IN&OUT RLF VALVE	(800)356-8000
110080	1-1/2" 36PSIG IN&OUT RLF VALVE	(800)356-8000
110081	1-1/2" 45PSIG IN&OUT RLF VALVE	(800)356-8000
110082	1-1/2" 50PSIG IN&OUT RLF VALVE	(800)356-8000
110084	2IN 36PSIG IN&OUT RLF VALVE	(800)356-8000
110085	2IN 45PSIG IN&OUT RLF VALVE	(800)356-8000
110086	2IN 50PSIG IN&OUT RLF VALVE	(800)356-8000
110120	3/4 BRZ SAFETY RLF VALVE	(800)356-8000
110121	3/4 IN&OUT 30PSIG RLF VALVE	(800)356-8000
110122	3/4 IN&OUT 36PSIG RLF VALVE	(800)356-8000
110123	3/4 IN&OUT 45PSIG RLF VALVE	(800)356-8000
110124	3/4 IN&OUT 50PSIG RLF VALVE	(800)356-8000
110125	3/4 IN&OUT 75PSIG RLF VALVE	(800)356-8000
110126	3/4 IN&OUT 100PSIG RLF VALVE	(800)356-8000
110127	3/4 IN&OUT 125PSIG RLF VALVE	(800)356-8000
110129	1IN IN&OUT 30PSIG RLF VALVE	(800)356-8000
110130	1IN IN&OUT 36PSIG RLF VALVE	(800)356-8000
110131	1IN IN&OUT 45PSIG RLF VALVE	(800)356-8000
110132	1IN IN&OUT 50PSIG RLF VALVE	(800)356-8000
110133	1IN IN&OUT 75PSIG RLF VALVE	(800)356-8000
110134	1IN IN&OUT 100PSIG RLF VALVE	(800)356-8000
110135	1IN IN&OUT 125PSIG RLF VALVE	(800)356-8000
110190	B-38 PRESSURE REDUCING VALVE	(800)356-8000
110191	B-38TU PRESSURE REDUCING VALVE	(800)356-8000
110192	FB-38 PRESSURE REDUCING VALVE	(800)356-8000
110193	FB-38TU PRESSURE RED VALVE	(800)356-8000
110194	1/2 BRASS HI-PRS RELIEF VALVE	(800)356-8000
110195	3/4 BRASS HI-PRS RELIEF VALVE	(800)356-8000
110196	B7-12 PRESSURE REDUCING VALVE	(800)356-8000
110197	1/2 BRASS W/FAST FILL DUAL VLV	(800)356-8000
110198	F-3TU DUAL UNIT VLV	(800)356-8000
110199	8 DUAL UNIT VLV	(800)356-8000
110200	8TU DUAL UNIT VLV	(800)356-8000
110201	1/2 IRON W/FAST FILL DUAL VLV	(800)356-8000
110202	F-STU DUAL UNIT VLV	(800)356-8000
110750	SAFETY RELIEF VALVE	(800)356-8000
110751	SAFETY RELIEF VALVE	(800)356-8000
110752	SAFETY RELIEF VALVE	(800)356-8000
110753	SAFETY RELIEF VALVE	(800)356-8000
110754	SAFETY RELIEF VALVE	(800)356-8000

110755	SAFETY RELIEF VALVE	(800)356-8000
110756	SAFETY RELIEF VALVE	(800)356-8000
110757	SAFETY RELIEF VALVE	(800)356-8000
110758	SAFETY RELIEF VALVE	(800)356-8000
110759	SAFETY RELIEF VALVE	(800)356-8000
110760	SAFETY RELIEF VALVE	(800)356-8000
110761	SAFETY RELIEF VALVE	(800)356-8000
110762	SAFETY RELIEF VALVE	(800)356-8000
110763	SAFETY RELIEF VALVE	(800)356-8000
110764	SAFETY RELIEF VALVE	(800)356-8000
110765	SAFETY RELIEF VALVE	(800)356-8000
110766	SAFETY RELIEF VALVE	(800)356-8000
110767	SAFETY RELIEF VALVE	(800)356-8000
110768	SAFETY RELIEF VALVE	(800)356-8000
110769	SAFETY RELIEF VALVE	(800)356-8000
110770	SAFETY RELIEF VALVE	(800)356-8000
110771	SAFETY RELIEF VALVE	(800)356-8000
110772	SAFETY RELIEF VALVE	(800)356-8000
110773	SAFETY RELIEF VALVE	(800)356-8000
110774	SAFETY RELIEF VALVE	(800)356-8000
110775	SAFETY RELIEF VALVE	(800)356-8000
110776	SAFETY RELIEF VALVE	(800)356-8000
110777	SAFETY RELIEF VALVE	(800)356-8000
110778	SAFETY RELIEF VALVE	(800)356-8000
110779	SAFETY RELIEF VALVE	(800)356-8000
111031	P-P 1/6HP	(800)356-8000
111032	P-P 1/6HP	(800)356-8000
111033	P-P 1/6HP	(800)356-8000
111034	P-P 1/12HP	(800)356-8000
111035	P-P 1/12HP	(800)356-8000
111039	P-P 1/6HP	(800)356-8000
111040	P-P 1/4HP	(800)356-8000
111041	P-P 1/4HP	(800)356-8000
111042	P-P 1/3HP	(800)356-8000
111044	P-P 1/2HP	(800)356-8000
111046	P-P 1/2HP	(800)356-8000
111047	P-P 3/4HP	(800)356-8000
111049	P-P 3/4HP	(800)356-8000
111050	P-P 1HP	(800)356-8000
111057	BSTR PUMP MOTOR PWR PACK	(800)356-8000
111061	P-P 1/6HP	(800)356-8000
112001	1IN TOP OUTLET BOILER FTG	(800)356-8000
112002	1-1/4 TOP OUTLET BOILER FTG	(800)356-8000
112003	1-1/2" TOP OUTLET BOILER FTG	(800)356-8000

112004	2IN TOP OUTLET BOILER FTG	(800)356-8000
112005	2-1/2 TOP OUTLET BOILER FTG	(800)356-8000
112006	3IN TOP OUTLET BOILER FTG	(800)356-8000
112007	4IN TOP OUTLET BOILER FTG	(800)356-8000
112008	1/2X3/4 MXFM 9IN TANK DIAMETER	(800)356-8000
112010	1/2X3/4 MXFM 12,13,14" TNK DIA	(800)356-8000
112011	1/2X3/4 MXFM 16 & 18" TNK DIAM	(800)356-8000
112013	1/2X3/4 MXFM 24IN TANK DIAMETR	(800)356-8000
112014	1 FMXFM 100 GAL+ TANK DIAMETER	(800)356-8000
112026	1/2X3/4 MXFM 20 & 22" TNK DIAM	(800)356-8000
112041	3IN AIRTROL FTG	(800)356-8000
112042	4IN AIRTROL FTG	(800)356-8000
112085	IAF-2 AIRTROL FTG	(800)356-8000
112097	IAS-1-1/2 AIR SEPARATOR	(800)356-8000
112098	IAS-2 AIR SEPARATOR	(800)356-8000
112099	IAS-2-1/2 AIR SEPARATOR	(800)356-8000
112100	IAS-3 AIR SEPARATOR	(800)356-8000
112105	1IN ENHCD AIR SEP	(800)356-8000
112106	1-1/4IN ENHCD AIR SEP	(800)356-8000
112107	AIR SEPARATOR	(800)356-8000
112108	AIR SEPARATOR	(800)356-8000
112111	AIR SEPARATOR	(800)356-8000
112112	AIR SEPARATOR	(800)356-8000
112113	AIR SEPARATOR	(800)356-8000
112114	AIR SEPARATOR	(800)356-8000
112115	AIR SEPARATOR	(800)356-8000
112116	AIR SEPARATOR	(800)356-8000
112117	AIR SEPARATOR	(800)356-8000
112118	IAS-1 AIR SEPARATOR	(800)356-8000
112119	IAS-1-1/4 AIR SEPARATOR	(800)356-8000
113001	7 AUTO AIR VENT AIR VALVE	(800)356-8000
113004	17SR AUTO HOT WTR DLX AIR VLV	(800)356-8000
113020	67 AUTO VENT AIR ELIMINATOR	(800)356-8000
113021	87 AUTO AIR VENT AIR VALVE	(800)356-8000
113023	OVERFLOW CONN 24-BAG	(800)356-8000
113041	DT-2 DRAIN-O-TANK	(800)356-8000
113042	17JR AUTO HOT WTR DLX W/O SO	(800)356-8000
113055	4V COIN OPERATED AIR VENT	(800)356-8000
113075	26 VACUUM BREAKER	(800)356-8000
113076	107A AIR VLV	(800)356-8000
113077	SGL ZONE PUMP CONTROLLER	(800)356-8000
113078	SGL ZONE PUMP CONTROLLER	(800)356-8000
113100	RV-125A READOUT VALVE	(800)356-8000
113102	RP-2508 R/O PRB P/PCT	(800)356-8000

113201	HALF UNION CONNECTIONS	(800)356-8000
113202	HLF UNION CONNECTIONS	(800)356-8000
113203	HALF UNION CONNECTIONS	(800)356-8000
113210	AUTOMATIC TIMER KIT	(800)356-8000
113220	THERMOSTATIC AQUASTATS	(800)356-8000
113221	THERMOSTATIC AQUASTATS	(800)356-8000
113223	1/2 THERMOSTATIC SWITCH	(800)356-8000
113224	3/4 THERMOSTATIC SWITCH	(800)356-8000
115019	BA-3 1-1/2 SUCT DPS	(800)356-8000
115021	DA-3 1-1/2 SUCT DPS	(800)356-8000
115022	DB-3 2IN SUCT DPS	(800)356-8000
115024	DD-3 3IN SUCT DPS	(800)356-8000
115025	ED-3 3IN SUCT DPS	(800)356-8000
115026	EE-3 4IN SUCT DPS	(800)356-8000
115027	FE-3 4IN SUCT DPS	(800)356-8000
115028	GE-3 4IN SUCT DPS	(800)356-8000
115029	FF-3 5IN SUCT DPS	(800)356-8000
115030	GF-3 5IN SUCT DPS	(800)356-8000
115031	GG-3 6IN SUCT DPS	(800)356-8000
115032	HG-3 6IN SUCT DPS	(800)356-8000
115033	HH-3 6IN SUCT DPS	(800)356-8000
115034	JJ-3 10IN SUCT DPS	(800)356-8000
115035	JH-3 8IN SUCT DPS	(800)356-8000
115036	BB-3 8IN SUCT DPS	(800)356-8000
115037	CB-3 2IN SUCT DPS	(800)356-8000
115038	CC-3 2-1/2 SUCT DPS	(800)356-8000
115039	DC-3 2-1/2 SUCT DPS	(800)356-8000
115040	SDG-2-1/2 SUCTION DFFSR	(800)356-8000
115041	SDG-3 SUCTION DFFSR	(800)356-8000
115042	SDG-4 SUCTION DFFSR	(800)356-8000
115043	SDG-5 SUCTION DFFSR	(800)356-8000
115044	SDG-6 SUCTION DFFSR	(800)356-8000
115045	SDG-8 SUCTION DFFSR	(800)356-8000
115046	SDG-10 SUCTION DFFSR	(800)356-8000
115050	SUCTION DIFFUSER	(800)356-8000
115051	SUCTION DIFFUSER	(800)356-8000
115052	SUCTION DIFFUSER	(800)356-8000
115053	SUCTION DIFFUSER	(800)356-8000
115060	SUCTION DIFFUSER	(800)356-8000
115061	SUCTION DIFFUSER	(800)356-8000
115062	SUCTION DIFFUSER	(800)356-8000
115063	SUCTION DIFFUSER	(800)356-8000
115064	SUCTION DIFFUSER	(800)356-8000
115065	SUCTION DIFFUSER	(800)356-8000

115066	SUCTION DIFFUSER	(800)356-8000
115067	SUCTION DIFFUSER	(800)356-8000
115068	SUCTION DIFFUSER	(800)356-8000
115069	SUCTION DIFFUSER	(800)356-8000
115070	SUCTION DIFFUSER	(800)356-8000
115071	SUCTION DIFFUSER	(800)356-8000
115072	SUCTION DIFFUSER	(800)356-8000
115073	SUCTION DIFFUSER	(800)356-8000
115074	SUCTION DIFFUSER	(800)356-8000
115075	SUCTION DIFFUSER	(800)356-8000
115076	SUCTION DIFFUSER	(800)356-8000
116029	ASME COMPRESS TANK	(800)356-8000
116030	ASME COMPRESS TANK	(800)356-8000
116031	ASME COMPRESS TANK	(800)356-8000
116032	ASME COMPRESS TANK	(800)356-8000
116033	ASME COMPRESS TANK	(800)356-8000
116034	ASME COMPRESS TANK	(800)356-8000
116035	ASME COMPRESS TANK	(800)356-8000
116036	ASME COMPRESS TANK	(800)356-8000
116037	ASME COMPRESS TANK	(800)356-8000
116038	ASME COMPRESS TANK	(800)356-8000
116039	ASME COMPRESS TANK	(800)356-8000
116040	ASME COMPRESS TANK	(800)356-8000
116041	ASME COMPRESS TANK	(800)356-8000
116042	ASME COMPRESS TANK	(800)356-8000
116491	VERTICAL DIAPHRAGM TANK	(800)356-8000
116492	VERTICAL DIAPHRAGM TANK	(800)356-8000
116493	VERTICAL DIAPHRAGM TANK	(800)356-8000
116500	7G HORIZ ASME TANK	(800)356-8000
116501	10G HORIZ ASME TANK	(800)356-8000
116502	21G HORIZ ASME TANK	(800)356-8000
116503	33G HORIZ ASME TANK	(800)356-8000
116504	44G HORIZ ASME TANK	(800)356-8000
116505	55G HORIZ ASME TANK	(800)356-8000
116506	68G HORIZ ASME TANK	(800)356-8000
116507	77G HORIZ ASME TANK	(800)356-8000
116508	90G HORIZ ASME TANK	(800)356-8000
116509	110G HORIZ ASME TANK	(800)356-8000
116510	131G HORIZ ASME TANK	(800)356-8000
116525	33G VERTICAL ASME TANK	(800)356-8000
116526	44G VERTICAL ASME TANK	(800)356-8000
116527	55G VERTICAL ASME TANK	(800)356-8000
116528	68G VERTICAL ASME TANK	(800)356-8000
116529	77G VERTICAL ASME TANK	(800)356-8000

116530	90G VERTICAL ASME TANK	(800)356-8000
116531	110G VERTICAL ASME TANK	(800)356-8000
116532	131G VERTICAL ASME TANK	(800)356-8000
116550	53G PRESS EXPAN TANK	(800)356-8000
116551	79G PRESS EXPAN TANK	(800)356-8000
116552	105G PRESS EXPAN TANK	(800)356-8000
116553	132G PRESS EXPAN TANK	(800)356-8000
116554	158G PRESS EXPAN TANK	(800)356-8000
116555	211G PRESS EXPAN TANK	(800)356-8000
116556	264G PRESS EXPAN TANK	(800)356-8000
116557	317G PRESS EXPAN TANK	(800)356-8000
116558	370G PRESS EXPAN TANK	(800)356-8000
116559	422G PRESS EXPAN TANK	(800)356-8000
116560	528G PRESS EXPAN TANK	(800)356-8000
116700	SERIES D DIAPHRAGM TANK	(800)356-8000
116701	SERIES D DIAPHRAGM TANK	(800)356-8000
116702	SERIES D DIAPHRAGM TANK	(800)356-8000
116703	SERIES D DIAPHRAGM TANK	(800)356-8000
116704	SERIES D DIAPHRAGM TANK	(800)356-8000
116705	SERIES D DIAPHRAGM TANK	(800)356-8000
116706	SERIES D DIAPHRAGM TANK	(800)356-8000
116707	SERIES D DIAPHRAGM TANK	(800)356-8000
116708	SERIES D DIAPHRAGM TANK	(800)356-8000
116709	SERIES D DIAPHRAGM TANK	(800)356-8000
116710	SERIES D DIAPHRAGM TANK	(800)356-8000
116725	SERIES D DIAPHRAGM TANK	(800)356-8000
116726	SERIES D DIAPHRAGM TANK	(800)356-8000
116727	SERIES D DIAPHRAGM TANK	(800)356-8000
116728	SERIES D DIAPHRAGM TANK	(800)356-8000
116729	SERIES D DIAPHRAGM TANK	(800)356-8000
116730	SERIES D DIAPHRAGM TANK	(800)356-8000
116731	SERIES D DIAPHRAGM TANK	(800)356-8000
116732	SERIES D DIAPHRAGM TANK	(800)356-8000
116750	PRESSURE EXPANSION TANK	(800)356-8000
116751	PRESSURE EXPANSION TANK	(800)356-8000
116752	PRESSURE EXPANSION TANK	(800)356-8000
116753	PRESSURE EXPANSION TANK	(800)356-8000
116754	PRESSURE EXPANSION TANK	(800)356-8000
116755	PRESSURE EXPANSION TANK	(800)356-8000
116756	PRESSURE EXPANSION TANK	(800)356-8000
116757	PRESSURE EXPANSION TANK	(800)356-8000
116761	ASME COMPRESS TANK	(800)356-8000
116762	ASME COMPRESS TANK	(800)356-8000
116763	ASME COMPRESS TANK	(800)356-8000

116764	ASME COMPRESS TANK	(800)356-8000
116765	ASME COMPRESS TANK	(800)356-8000
116766	ASME COMPRESS TANK	(800)356-8000
116767	ASME COMPRESS TANK	(800)356-8000
116768	ASME COMPRESS TANK	(800)356-8000
116769	ASME COMPRESS TANK	(800)356-8000
116770	ASME COMPRESS TANK	(800)356-8000
116771	ASME COMPRESS TANK	(800)356-8000
116772	ASME COMPRESS TANK	(800)356-8000
116773	ASME COMPRESS TANK	(800)356-8000
116774	ASME COMPRESS TANK	(800)356-8000
116775	SERIES D DIAPHRAGM TANK	(800)356-8000
116776	SERIES D DIAPHRAGM TANK	(800)356-8000
116777	SERIES D DIAPHRAGM TANK	(800)356-8000
116778	HORIZONTAL EXPANSION TNK	(800)356-8000
116779	HORIZONTAL EXPANSION TNK	(800)356-8000
116780	VERTICAL DIAPHRAGM TANK	(800)356-8000
116781	VERTICAL DIAPHRAGM TANK	(800)356-8000
117017	READOUT METER	(800)356-8000
117018	READOUT METER	(800)356-8000
117019	READOUT METER	(800)356-8000
117020	READOUT METER	(800)356-8000
117035	4IN CIR-SET BALANCE VLV	(800)356-8000
117050	2-1/2 FLOW METER	(800)356-8000
117051	3IN FLOW METER	(800)356-8000
117052	4IN FLOW METER	(800)356-8000
117053	5IN FLOW METER	(800)356-8000
117054	6IN FLOW METER	(800)356-8000
117055	8IN FLOW METER	(800)356-8000
117056	10IN FLOW METER	(800)356-8000
117057	12IN FLOW METER	(800)356-8000
117103	CB-1-1/4" BALANCE VALVE	(800)356-8000
117104	CB-1-1/2" BALANCE VALVE	(800)356-8000
117105	CB-2" BALANCE VALVE	(800)356-8000
117106	CB-2-1/2" BALANCE VALVE	(800)356-8000
117107	CB-3" BALANCE VALVE	(800)356-8000
117112	CB-4F BALANCE VALVE	(800)356-8000
117113	CB-5F BALANCE VALVE	(800)356-8000
117114	CB-6F BALANCE VALVE	(800)356-8000
117115	CB-8F BALANCE VALVE	(800)356-8000
117116	CB-2-1/2F BALANCE VALVE	(800)356-8000
117117	CB-3F BALANCE VALVE	(800)356-8000
117118	CB-4G BALANCE VALVE	(800)356-8000
117119	CB-5G BALANCE VALVE	(800)356-8000

117120	CB-6G BALANCE VALVE	(800)356-8000
117121	CB-8G BALANCE VALVE	(800)356-8000
117205	SWT CALIB BALANCE VALVE	(800)356-8000
117206	SWT CALIB BALANCE VALVE	(800)356-8000
117401	1IN S CALBRD BAL VALVE	(800)356-8000
117402	1-1/4S CALBRD BAL VALVE	(800)356-8000
117403	1-1/2S CALBRD BAL VALVE	(800)356-8000
117404	2IN S CALBRD BAL VALVE	(800)356-8000
117410	1/2S CALBRD BAL VALVE	(800)356-8000
117411	3/4S CALBRD BAL VALVE	(800)356-8000
117412	CB-1/2S BALANCE VALVE	(800)356-8000
117413	CB-3/4S BALANCE VALVE	(800)356-8000
117414	CB-1/2" BALANCE VALVE	(800)356-8000
117415	CB-3/4" BALANCE VALVE	(800)356-8000
117416	CB-1" BALANCE VALVE	(800)356-8000
117420	FLG CALIB BALANCE VALVE	(800)356-8000
117422	FLG CALIB BALANCE VALVE	(800)356-8000
118028	DIAPHRAGM	(800)356-8000
118029	DIAPHRAGM	(800)356-8000
118035	GASKET	(800)356-8000
118036	STRAINER	(800)356-8000
118054	GASKET SET	(800)356-8000
118056	NUT	(800)356-8000
118057	PACKING	(800)356-8000
118060	GASKET SET	(800)356-8000
118062	GASKET SET	(800)356-8000
118065	GASKET-MODEL NUMBER 2 PUMPS	(800)356-8000
118070	GASKET SET	(800)356-8000
118094	DYNA-DISC	(800)356-8000
118095	DYNA-DISC	(800)356-8000
118096	DYNA-DISC	(800)356-8000
118098	REPAIR KIT	(800)356-8000
118116	DYNA-DISC	(800)356-8000
118117	DYNA-DISC	(800)356-8000
118118	DYNA-DISC	(800)356-8000
118129	GASKET SET	(800)356-8000
118153	OIL TUBE	(800)356-8000
118154	OIL TUBE	(800)356-8000
118181	PROTECTOR	(800)356-8000
118201	PROTECTOR	(800)356-8000
118223	RING SET	(800)356-8000
118228	RING SET	(800)356-8000
118242	RING SET	(800)356-8000
118253	SWITCH PLATE	(800)356-8000

118254	CENTRIFUGAL SWITCH	(800)356-8000
118262	SWITCH PLATE	(800)356-8000
118339	BODY	(800)356-8000
118340	RED SPRAY PAINT	(800)356-8000
118341	BLACK SPRAY PAINT	(800)356-8000
118351	GASKET SET	(800)356-8000
118368	GASKET-ALL STYLE 100-PUMP SIZE	(800)356-8000
118373	GASKET-HV 1-1/2" STYLE PUMP	(800)356-8000
118378	GASKET SET	(800)356-8000
118395	WICK SET	(800)356-8000
118413	BODY	(800)356-8000
118431	IMPELLER ALL STYLE 100 PUMP SZ	(800)356-8000
118434	IMPELLER	(800)356-8000
118435	IMPELLER	(800)356-8000
118436	IMPELLER HV 1-1/2" & 2" PUMP	(800)356-8000
118439	IMPELLER	(800)356-8000
118440	IMPELLER	(800)356-8000
118449	BODY	(800)356-8000
118452	IMPELLER	(800)356-8000
118453	IMPELLER	(800)356-8000
118469	SHAFT	(800)356-8000
118473	118473 CPLR-MDL 60 & 1522 PUMP	(800)356-8000
118474	COUPLER MNT SET	(800)356-8000
118602	SERVICE PARTS KIT	(800)356-8000
118612	IMPELLER	(800)356-8000
118626	118626 IMPLR MDL 60 & 1522 PMP	(800)356-8000
118627	IMPELLER	(800)356-8000
118629	IMPELLER	(800)356-8000
118630	IMPELLER	(800)356-8000
118635	COUPLER	(800)356-8000
118637	BODY	(800)356-8000
118644	BODY	(800)356-8000
118665	IMPELLER	(800)356-8000
118666	IMPELLER	(800)356-8000
118668	IMPELLER	(800)356-8000
118675	IMPELLER	(800)356-8000
118676	IMPELLER	(800)356-8000
118680	SEAL	(800)356-8000
118681	SEAL KIT NO 7	(800)356-8000
118682	SEAL	(800)356-8000
118697	BEARING	(800)356-8000
118705	COUPLER-UNIVERSAL STYLE-IRON	(800)356-8000
118706	COUPLER MNT SET	(800)356-8000
118707	COUPLER MNT SET	(800)356-8000

118708	118708 CPLR-MDL 60 & 1522 PUMP	(800)356-8000
118709	118709 CPLR-MDL 60 & 1522 PUMP	(800)356-8000
118723	COUPLER	(800)356-8000
118724	COUPLER MNT SET	(800)356-8000
118732	COUPLER	(800)356-8000
118820	REPAIR KIT	(800)356-8000
118822	REPAIR KIT	(800)356-8000
118830	IMPELLER	(800)356-8000
118844	BEARING ASSY-100 ALL SIZES	(800)356-8000
118845	COUPLER MNT SET	(800)356-8000
118846	COUPLER MNT SET	(800)356-8000
118848	RING MOUNT	(800)356-8000
118855	LEVER/BUTTON&GSKT	(800)356-8000
118858	REPAIR KIT	(800)356-8000
118859	REPAIR KIT	(800)356-8000
118860	REPAIR KIT	(800)356-8000
118861	REPAIR KIT	(800)356-8000
118862	RELAY PLUG	(800)356-8000
118864	DYNA-DISC ASSEMBLY	(800)356-8000
127001	3/4 THERMOFLO BALANCER	(800)356-8000
127002	1IN THERMOFLO BALANCER	(800)356-8000
132072	3DX-1 ANGLE/PATTERN VALVE	(800)356-8000
132074	3DX-1-1/2 ANGLE/PATTERN VALVE	(800)356-8000
132120	3DS-14S STR PTTRN VLV	(800)356-8000
132121	3DS-2S STR PTTRN VLV	(800)356-8000
132122	3DS-2-1/2S STR PTTRN VLV	(800)356-8000
132123	3DS-3S STR PTTRN VLV	(800)356-8000
132124	3DS-4S STR PTTRN VLV	(800)356-8000
132125	3DS-5S STR PTTRN VLV	(800)356-8000
132126	3DS-6S STR PTTRN VLV	(800)356-8000
132127	3DS-8S STR PTTRN VLV	(800)356-8000
132128	3DS-10S STR PTTRN VLV	(800)356-8000
132129	3DS-12S STR PTTRN VLV	(800)356-8000
132131	3DS-2S ANG PTTRN VLV	(800)356-8000
132132	3D-2-1/2S ANG PTTRN VLV	(800)356-8000
132133	3D-3S ANG PTTRN VLV	(800)356-8000
132134	3D-4S ANG PTTRN VLV	(800)356-8000
132135	3D-5S ANG PTTRN VLV	(800)356-8000
132136	3D-6S ANG PTTRN VLV	(800)356-8000
132137	3D-8S ANG PTTRN VLV	(800)356-8000
132138	3D-10S ANG PTTRN VLV	(800)356-8000
132150	DS-2G STR PTTRN VLV	(800)356-8000
132151	DS-2-1/2G STR PTTRN VLV	(800)356-8000
132152	DS-3G STR PTTRN VLV	(800)356-8000

132153	DS-4G STR PTTRN VLV	(800)356-8000
132154	DS-5G STR PTTRN VLV	(800)356-8000
132155	DS-6G STR PTTRN VLV	(800)356-8000
132156	DS-8G STR PTTRN VLV	(800)356-8000
132157	DS-10G STR PTTRN VLV	(800)356-8000
132158	DS-12G STR PTTRN VLV	(800)356-8000
132159	TRIPLE DUTY VALVE	(800)356-8000
132160	TRIPLE DUTY VALVE	(800)356-8000
132161	TRIPLE DUTY VALVE	(800)356-8000
132162	TRIPLE DUTY VALVE	(800)356-8000
132163	TRIPLE DUTY VALVE	(800)356-8000
132164	TRIPLE DUTY VALVE	(800)356-8000
132165	TRIPLE DUTY VALVE	(800)356-8000
132166	TRIPLE DUTY VALVE	(800)356-8000
132167	TRIPLE DUTY VALVE	(800)356-8000
137116	4.8A 460V 3HP SYS PUMP	(800)356-8000
137117	7.2A 460V 5HP SYS PUMP	(800)356-8000
137118	11A 460V 7.5HP SYS PUMP	(800)356-8000
137119	14A 460V 10HP SYS PUMP	(800)356-8000
137120	21A 460V 15HP SYS PUMP	(800)356-8000
137121	27A 460V 20HP SYS PUMP	(800)356-8000
137122	30A 460V 25HP SYS PUMP	(800)356-8000
137123	40A 460V 30HP SYS PUMP	(800)356-8000
137124	52A 460V 40HP SYS PUMP	(800)356-8000
137192	SYSTEM PUMP	(800)356-8000
137193	SYSTEM PUMP	(800)356-8000
137194	SYSTEM PUMP	(800)356-8000
137195	SYSTEM PUMP	(800)356-8000
137196	SYSTEM PUMP	(800)356-8000
137197	SYSTEM PUMP	(800)356-8000
137198	SYSTEM PUMP	(800)356-8000
137199	SYSTEM PUMP	(800)356-8000
138022	230V 1PHASE PRES BOOSTER	(800)356-8000
140001	THERMOFLO INDICATOR	(800)356-8000
140002	THERMOFLO INDICATOR	(800)356-8000
140003	THERMOFLO INDICATOR	(800)356-8000
140004	THERMOFLO INDICATOR	(800)356-8000
140005	THERMOFLO INDICATOR	(800)356-8000
140006	THERMOFLO INDICATOR	(800)356-8000
140007	TFI-5 THERMFLO IND	(800)356-8000
140008	TFI-6 THERMFLO IND	(800)356-8000
140009	TFI-8 THERMFLO IND	(800)356-8000
145100	CHECK VALVE BODY	(800)356-8000
145101	1X1 CHECK VALVE	(800)356-8000

145102	1-1/2X1-1/2 CHECK VALVE	(800)356-8000
145103	2X2 CHECK VALVE	(800)356-8000
145104	3X2 CHECK VALVE	(800)356-8000
145201	6IN CHECK VALVE BODY	(800)356-8000
145210	3X2 BRZ CHECK VALVE	(800)356-8000
145211	2X2 BRZ CHECK VALVE	(800)356-8000
145212	1-1/2X1-1/2 BRZ CHCK VLV	(800)356-8000
145300	4IN CHCK VLV HEAD&GASKET	(800)356-8000
145301	6IN CHCK VLV HEAD&GASKET	(800)356-8000
145302	8IN CHCK VLV HEAD&GASKET	(800)356-8000
145303	CHCK VLV CONVERSION KIT	(800)356-8000
145304	CHCK VLV CONVERSION KIT	(800)356-8000
168021	351S 115/230V PUMP	(800)356-8000
168022	351T 208-230/460V	(800)356-8000
168023	352S 115/230V PUMP	(800)356-8000
168024	352T 208-230/460V	(800)356-8000
168025	353S 115/230V PUMP	(800)356-8000
168026	353T 208-230/460V	(800)356-8000
168027	354S 115/230V PUMP	(800)356-8000
168028	354T 208-230/460V	(800)356-8000
168029	355S 115/230V PUMP	(800)356-8000
168031	208-230/460V PUMP	(800)356-8000
168033	208-230/460V PUMP	(800)356-8000
168034	357S 115/230V PUMP	(800)356-8000
168035	357T 208-230/460V	(800)356-8000
168036	358S 115/230V PUMP	(800)356-8000
168038	208-230/460V PUMP	(800)356-8000
168040	208-230/460V PUMP	(800)356-8000
168042	208-230/460V PUMP	(800)356-8000
168044	208-230/460V PUMP	(800)356-8000
169035	P-P 1/4HP	(800)356-8000
169036	P-P 1/4HP	(800)356-8000
169037	P-P 1/4HP	(800)356-8000
169038	P-P 1/3HP	(800)356-8000
169039	P-P 1/3HP	(800)356-8000
169040	P-P 1/4HP	(800)356-8000
169041	P-P 1/4HP	(800)356-8000
169042	P-P 1/4HP	(800)356-8000
169043	P-P 1/3HP	(800)356-8000
169044	MOTOR 1/3HP	(800)356-8000
169045	P-P 1/3HP	(800)356-8000
169046	MOTOR 1/3HP	(800)356-8000
169047	P-P 1/2HP	(800)356-8000
169048	MOTOR 1/2HP	(800)356-8000

169049	P-P 1/2HP	(800)356-8000
169050	MOTOR 1/2HP	(800)356-8000
169051	P-P 3/4HP	(800)356-8000
169052	MOTOR 3/4HP	(800)356-8000
169053	MOTOR 3/4HP	(800)356-8000
169054	MOTOR 3/4HP	(800)356-8000
169055	MOTOR 1HP	(800)356-8000
169056	MOTOR 1HP	(800)356-8000
169057	MOTOR 1-1/2HP	(800)356-8000
169058	MOTOR 1-1/2HP	(800)356-8000
169060	MOTOR 2HP	(800)356-8000
169066	MOTOR 1/3HP	(800)356-8000
169067	MOTOR 1/2HP	(800)356-8000
169068	MOTOR 3/4HP	(800)356-8000
169069	MOTOR 1HP	(800)356-8000
169071	MOTOR 1/3HP	(800)356-8000
169072	MOTOR 1/2HP	(800)356-8000
169073	MOTOR 3/4HP	(800)356-8000
169074	MOTOR 1HP	(800)356-8000
169090	P-P 1HP	(800)356-8000
169092	P-P 1-1/2HP	(800)356-8000
169094	P-P 2HP	(800)356-8000
169095	P-P 1-1/2HP	(800)356-8000
169111	PUMP MOTOR	(800)356-8000
169112	PUMP MOTOR	(800)356-8000
169200	1/4HP PUMP MOTOR	(800)356-8000
169201	1/4HP PUMP MOTOR	(800)356-8000
169202	1/3HP PUMP MOTOR	(800)356-8000
169203	1/3HP PUMP MOTOR	(800)356-8000
169204	1/2HP PUMP MOTOR	(800)356-8000
169205	1/2HP PUMP MOTOR	(800)356-8000
169206	3/4HP PUMP MOTOR	(800)356-8000
169207	3/4HP PUMP MOTOR	(800)356-8000
169208	1HP PUMP MOTOR	(800)356-8000
169209	1HP PUMP MOTOR	(800)356-8000
169210	1-1/2HP PUMP MOTOR	(800)356-8000
169211	1-1/2HP PUMP MOTOR	(800)356-8000
169212	2HP PUMP MOTOR	(800)356-8000
169213	1/2HP PUMP MOTOR	(800)356-8000
169214	3/4HP PUMP MOTOR	(800)356-8000
169215	1HP PUMP MOTOR	(800)356-8000
169216	1-1/2HP PUMP MOTOR	(800)356-8000
169217	1-1/2HP PUMP MOTOR	(800)356-8000
169218	2HP PUMP MOTOR	(800)356-8000

169219	3HP PUMP MOTOR	(800)356-8000
169220	5HP PUMP MOTOR	(800)356-8000
169221	3HP PUMP MOTOR	(800)356-8000
169222	MOTOR	(800)356-8000
169223	MOTOR	(800)356-8000
169224	1/4HP 1PH MOTOR	(800)356-8000
169225	1/4HP 3PH MOTOR	(800)356-8000
169226	1/3HP 1PH MOTOR	(800)356-8000
169227	1/3HP 3PH MOTOR	(800)356-8000
169228	1/2HP 1PH MOTOR	(800)356-8000
169229	1/2HP 3PH MOTOR	(800)356-8000
169230	3/4HP 1PH MOTOR	(800)356-8000
169231	3/4HP 3PH MOTOR	(800)356-8000
169232	1HP 1PH MOTOR	(800)356-8000
169233	1HP 3PH MOTOR	(800)356-8000
169234	3HP 3PH MOTOR	(800)356-8000
169236	1-1/2HP 1PH MOTOR	(800)356-8000
169237	1-1/2HP 3PH MOTOR	(800)356-8000
169238	2HP 3PH MOTOR	(800)356-8000
172667	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172668	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172669	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172670	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172671	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172672	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172673	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172701	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172702	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172703	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172704	BRZ CENTRIFUGAL HVAC PMP	(800)356-8000
172705	BRZ CENTRIFUGAL HVAC PMP	(800)356-8000
172706	BRZ CENTRIFUGAL HVAC PMP	(800)356-8000
172707	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172708	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172709	BRZ CENTRIFUGAL HVAC PMP	(800)356-8000
172710	BRZ CENTRIFUGAL HVAC PMP	(800)356-8000
172711	BRZ CENTRIFUGAL HVAC PMP	(800)356-8000
172712	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172713	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172714	BRZ CENTRIFUGAL HVAC PMP	(800)356-8000
172715	BRZ CENTRIFUGAL HVAC PMP	(800)356-8000
172716	BRZ CENTRIFUGAL HVAC PMP	(800)356-8000
172717	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172718	CI CENTRIFUGAL HVAC PUMP	(800)356-8000

172719	BRZ CENTRIFUGAL HVAC PMP	(800)356-8000
172720	BRZ CENTRIFUGAL HVAC PMP	(800)356-8000
172721	BRZ CENTRIFUGAL HVAC PMP	(800)356-8000
172722	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172723	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172724	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172725	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172726	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172727	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172728	BRZ CENTRIFUGAL HVAC PMP	(800)356-8000
172729	BRZ CENTRIFUGAL HVAC PMP	(800)356-8000
172730	BRZ CENTRIFUGAL HVAC PMP	(800)356-8000
172731	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172732	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172733	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172734	BRZ CENTRIFUGAL HVAC PMP	(800)356-8000
172735	BRZ CENTRIFUGAL HVAC PMP	(800)356-8000
172736	BRZ CENTRIFUGAL HVAC PMP	(800)356-8000
172737	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172738	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172739	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172740	BRZ CENTRIFUGAL HVAC PMP	(800)356-8000
172741	BRZ CENTRIFUGAL HVAC PMP	(800)356-8000
172742	BRZ CENTRIFUGAL HVAC PMP	(800)356-8000
172743	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172744	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172745	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172746	BRZ CENTRIFUGAL HVAC PMP	(800)356-8000
172747	BRZ CENTRIFUGAL HVAC PMP	(800)356-8000
172748	BRZ CENTRIFUGAL HVAC PMP	(800)356-8000
172749	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172750	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172751	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172752	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172753	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172754	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172755	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172756	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172757	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172758	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172759	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172760	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172761	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172762	CI CENTRIFUGAL HVAC PUMP	(800)356-8000

172763	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172764	CI CENTRIFUGAL HVAC PUMP	(800)356-8000
172771	BRZ CENTRIFUGAL HVAC PMP	(800)356-8000
172772	BRZ CENTRIFUGAL HVAC PMP	(800)356-8000
172773	BRZ CENTRIFUGAL HVAC PMP	(800)356-8000
172774	BRZ CENTRIFUGAL HVAC PMP	(800)356-8000
172775	BRZ CENTRIFUGAL HVAC PMP	(800)356-8000
172776	BRZ CENTRIFUGAL HVAC PMP	(800)356-8000
173014	1S 115/230V PUMP	(800)356-8000
173057	1T 208-230/460 PUMP	(800)356-8000
173078	2S 115/230V PUMP	(800)356-8000
173079	2T 208-230/460 PUMP	(800)356-8000
173080	3S 115/230V PUMP	(800)356-8000
173081	3T 208-230/460 PUMP	(800)356-8000
173082	4S 115/230V PUMP	(800)356-8000
173083	4T 208-230/460 PUMP	(800)356-8000
174196	314TB 230/460V PUMP	(800)356-8000
174198	315TB 230/460V PUMP	(800)356-8000
174260	311T 230/460V PUMP	(800)356-8000
174262	312T 230/460V PUMP	(800)356-8000
174264	313TB 230/460V PUMP	(800)356-8000
174266	317T 230/460V PUMP	(800)356-8000
174284	208-230/460V PUMP	(800)356-8000
174286	208-230/460V PUMP	(800)356-8000
174287	3121T 200/208V PUMP	(800)356-8000
174288	208-230/460V PUMP	(800)356-8000
177702	3113TB 208-230/460V PUMP	(800)356-8000
177704	3114TB 208-230/460V PUMP	(800)356-8000
177706	3115TB 208-230/460V PUMP	(800)356-8000
177708	3116TB 208-230/460V PUMP	(800)356-8000
177710	3117TB 208-230/460V PUMP	(800)356-8000
177712	3118TB 208-230/460V PUMP	(800)356-8000
177714	316TB 208-230/460V PUMP	(800)356-8000
177716	318TB 208-230/460V PUMP	(800)356-8000
177718	319TB 208-230/460V PUMP	(800)356-8000
177720	3111TB 208-230/460V PUMP	(800)356-8000
177722	3112TB 208-230/460V PUMP	(800)356-8000
177724	3110TB 230/460V PUMP	(800)356-8000
179000	90-1S 115/230V PUMP	(800)356-8000
179001	90-1T 208-230/460V	(800)356-8000
179002	90-2S 115/230V PUMP	(800)356-8000
179003	90-2T 208-230/460V	(800)356-8000
179004	90-3S 115/230V PUMP	(800)356-8000
179005	90-3T 208-230/460V	(800)356-8000

179006	90-4S 115/230V PUMP	(800)356-8000
179007	90-4T 208-230/460V	(800)356-8000
179008	90-5T 208-230/460V	(800)356-8000
179009	90-6S 115/230V PUMP	(800)356-8000
179010	90-6T 208-230/460V	(800)356-8000
179011	90-7S 115/230V PUMP	(800)356-8000
179012	90-7T 208-230/460V	(800)356-8000
179013	90-8S 115/230V PUMP	(800)356-8000
179014	90-8T 208-230/460V	(800)356-8000
179015	90-9T 208-230/460V	(800)356-8000
179016	90-10T 208-230/460V	(800)356-8000
179017	90-11S 115/230V PUMP	(800)356-8000
179018	90-11T 208-230/460V	(800)356-8000
179019	90-12T 208-230/460V	(800)356-8000
179020	90-13T 208-230/460V	(800)356-8000
179021	90-14T 208-230/460V	(800)356-8000
179022	90-15T 208-230/460V	(800)356-8000
179023	90-16T 208-230/460V	(800)356-8000
179025	90-17T 208-230/460V	(800)356-8000
179027	90-18T 208-230/460V	(800)356-8000
179029	90-19T 208-230/460V	(800)356-8000
179031	90-20T 208-230/460V	(800)356-8000
179033	90-21T 208-230/460V	(800)356-8000
179040	90-31S 115/230V PUMP	(800)356-8000
179041	90-31T 208-230/460V	(800)356-8000
179042	90-33S 115/230V PUMP	(800)356-8000
179043	90-33T 208-230/460V	(800)356-8000
179044	90-34S 115/230V PUMP	(800)356-8000
179045	90-34T 208-230/460V	(800)356-8000
179046	90-35S 115/230V PUMP	(800)356-8000
179047	90-35T 208-230/460V	(800)356-8000
179048	90-36S 115/230V PUMP	(800)356-8000
179049	90-36T 208-230/460V	(800)356-8000
179050	90-37S 115/230V PUMP	(800)356-8000
179051	90-37T 208-230/460V	(800)356-8000
179052	90-39S 115/230V PUMP	(800)356-8000
179053	90-39T 208-230/460V	(800)356-8000
179054	90-40S 115/230V PUMP	(800)356-8000
179055	90-40T 208-230/460V	(800)356-8000
179056	90-41T 208-230/460V	(800)356-8000
185011	BEARING ASSEMBLY	(800)356-8000
185012	BEARING ASSEMBLY	(800)356-8000
185013	BEARING ASSEMBLY	(800)356-8000
185014	BEARING ASSEMBLY	(800)356-8000

185015	BEARING ASSEMBLY	(800)356-8000
185016	BEARING ASSEMBLY	(800)356-8000
185018	SLEEVE KIT	(800)356-8000
185019	SLEEVE KIT	(800)356-8000
185021	SLEEVE KIT	(800)356-8000
185022	SLEEVE KIT	(800)356-8000
185024	SLEEVE KIT	(800)356-8000
185025	SLEEVE KIT	(800)356-8000
185030	PUMP FLANGE KIT	(800)356-8000
185031	PUMP FLANGE KIT	(800)356-8000
185032	PUMP FLANGE KIT	(800)356-8000
185036	PUMP FLANGE KIT	(800)356-8000
185037	PUMP FLANGE KIT	(800)356-8000
185038	PUMP FLANGE KIT	(800)356-8000
185041	PUMP FLANGE KIT	(800)356-8000
185050	SEAL KIT	(800)356-8000
185051	SEAL KIT	(800)356-8000
185052	SEAL KIT	(800)356-8000
185053	SEAL KIT	(800)356-8000
185054	SEAL KIT	(800)356-8000
185055	SEAL KIT	(800)356-8000
185060	PUMP SEAL ASSEMBLY	(800)356-8000
185140	SLEEVE KIT	(800)356-8000
185141	SLEEVE KIT	(800)356-8000
185142	SLEEVE KIT	(800)356-8000
185143	SLEEVE KIT	(800)356-8000
185222	SEAL KIT NO 13	(800)356-8000
185223	SEAL KIT NO 14	(800)356-8000
185224	SEAL KIT NO 15	(800)356-8000
185225	SEAL KIT NO 16	(800)356-8000
185226	SEAL KIT NO 17	(800)356-8000
185227	SEAL KIT NO 18	(800)356-8000
185228	SEAL KIT NO 19	(800)356-8000
185230	SEAL KIT NO 12	(800)356-8000
185240	BEARING	(800)356-8000
185241	BEARING	(800)356-8000
185251	1-1/2 CLA-VAL KIT	(800)356-8000
185252	2-IN CLA-VAL KIT	(800)356-8000
185253	2-1/2 CLA-VAL KIT	(800)356-8000
185254	3-IN CLA-VAL KIT	(800)356-8000
185255	4-IN CLA-VAL KIT	(800)356-8000
185260	BEARING ASSY-60-A LARGE-IRON	(800)356-8000
185261	BEARING ASSEMBLY	(800)356-8000
185262	BEARING ASSY-60-A LARGE-BRONZE	(800)356-8000

185264	BEARING ASSEMBLY	(800)356-8000
185265	BEARING ASSEMBLY	(800)356-8000
185308	SHAFT&SLEEVE ASSEMBLY	(800)356-8000
185309	BEARING	(800)356-8000
185310	BEARING	(800)356-8000
185320	BEARING ASSEMBLY	(800)356-8000
185321	PUMP BEARING ASSEMBLY	(800)356-8000
185322	BEARING ASSEMBLY	(800)356-8000
185323	BEARING ASSEMBLY	(800)356-8000
185324	BEARING ASSEMBLY	(800)356-8000
185325	SUPPORT KIT	(800)356-8000
185326	SUPPORT KIT	(800)356-8000
185327	PUMP GUARD KIT	(800)356-8000
185329	PUMP COUPLER	(800)356-8000
185330	PUMP COUPLER	(800)356-8000
185331	PUMP COUPLER	(800)356-8000
185332	PUMP BEARING ASSEMBLY	(800)356-8000
185333	PUMP BEARING ASSEMBLY	(800)356-8000
185334	BEARING ASSEMBLY	(800)356-8000
185335	PUMP BEARING REPAIR KIT	(800)356-8000
185336	PUMP BEARING REPAIR KIT	(800)356-8000
185337	PUMP BEARING REPAIR KIT	(800)356-8000
185338	PUMP BEARING REPAIR KIT	(800)356-8000
185350	PUMP BRACKET ASSEMBLY	(800)356-8000
185351	PUMP BRACKET ASSEMBLY	(800)356-8000
185352	PUMP BRACKET ASSEMBLY	(800)356-8000
185353	PUMP BRACKET ASSEMBLY	(800)356-8000
185354	PUMP BRACKET ASSEMBLY	(800)356-8000
185355	PUMP BEARING ASSEMBLY	(800)356-8000
185356	PUMP BEARING ASSEMBLY	(800)356-8000
185357	PUMP BEARING ASSEMBLY	(800)356-8000
185358	PUMP BEARING ASSEMBLY	(800)356-8000
185359	PUMP BEARING ASSEMBLY	(800)356-8000
185360	PUMP BEARING ASSEMBLY	(800)356-8000
185361	PUMP BEARING ASSEMBLY	(800)356-8000
185362	PUMP BEARING ASSEMBLY	(800)356-8000
185363	PUMP BEARING ASSEMBLY	(800)356-8000
185364	PUMP BEARING ASSEMBLY	(800)356-8000
185365	PUMP BEARING ASSEMBLY	(800)356-8000
185366	PUMP BEARING ASSEMBLY	(800)356-8000
185367	PUMP BEARING ASSEMBLY	(800)356-8000
185368	PUMP BEARING ASSEMBLY	(800)356-8000
185369	PUMP BEARING ASSEMBLY	(800)356-8000
185370	SUPPORT KIT	(800)356-8000

185371	SUPPORT KIT	(800)356-8000
185372	SUPPORT KIT	(800)356-8000
185373	SUPPORT KIT	(800)356-8000
185374	SUPPORT KIT	(800)356-8000
185376	SEAL KIT	(800)356-8000
185377	SEAL KIT	(800)356-8000
185379	SEAL KIT	(800)356-8000
186001	BEARING	(800)356-8000
186002	BEARING	(800)356-8000
186003	COUPLER	(800)356-8000
186004	COUPLER	(800)356-8000
186074	VOLUTE	(800)356-8000
186075	VOLUTE	(800)356-8000
186081	VOLUTE	(800)356-8000
186087	PUMP IMPELLER VOLUTE	(800)356-8000
186260	SEAL&GASKET KIT	(800)356-8000
186261	SEAL&GASKET KIT	(800)356-8000
186262	SEAL&GASKET KIT	(800)356-8000
186263	REPAIR KIT	(800)356-8000
186264	REPAIR KIT	(800)356-8000
186265	REPAIR KIT	(800)356-8000
186266	IMPELLER KIT	(800)356-8000
186267	REPAIR KIT	(800)356-8000
186268	REPAIR KIT	(800)356-8000
186269	IMPELLER KIT	(800)356-8000
186270	SEAL&GASKET KIT	(800)356-8000
186271	SEAL&GASKET KIT	(800)356-8000
186272	SEAL&GASKET KIT	(800)356-8000
186273	REPAIR KIT	(800)356-8000
186274	REPAIR KIT	(800)356-8000
186275	REPAIR KIT	(800)356-8000
186276	REPAIR KIT	(800)356-8000
186277	REPAIR KIT	(800)356-8000
186278	SEAL&GASKET KIT	(800)356-8000
186279	SEAL&GASKET KIT	(800)356-8000
186280	SEAL&GASKET KIT	(800)356-8000
186281	REPAIR KIT	(800)356-8000
186282	REPAIR KIT	(800)356-8000
186283	REPAIR KIT	(800)356-8000
186284	REPAIR KIT	(800)356-8000
186285	REPAIR KIT	(800)356-8000
186333	VOLUTE	(800)356-8000
186359	186359 IMPLR MDL 60 & 1522 PMP	(800)356-8000
186360	IMPELLER	(800)356-8000

186361	IMPELLER	(800)356-8000
186362	IMPELLER	(800)356-8000
186363	IMPELLER	(800)356-8000
186364	IMPELLER	(800)356-8000
186366	IMPELLER	(800)356-8000
186368	186368 IMPLR MDL 60 & 1522 PMP	(800)356-8000
186370	IMPELLER	(800)356-8000
186371	IMPELLER	(800)356-8000
186373	IMPELLER	(800)356-8000
186375	IMPELLER	(800)356-8000
186384	BODY	(800)356-8000
186385	VOLUTE	(800)356-8000
186386	BODY	(800)356-8000
186389	BODY	(800)356-8000
186390	BODY	(800)356-8000
186392	BODY	(800)356-8000
186393	GAGE TAP KIT	(800)356-8000
186394	GAGE TAP KIT	(800)356-8000
186395	GAGE TAP KIT	(800)356-8000
186396	GAGE TAP KIT	(800)356-8000
186410	COUPLER	(800)356-8000
186422	SEAL KIT	(800)356-8000
186433	SEAL KIT NO 5	(800)356-8000
186482	COVERPLATE	(800)356-8000
186495	COVERPLATE	(800)356-8000
186496	SEAL KIT	(800)356-8000
186499	SEAL KIT NO 2	(800)356-8000
186526	MOTOR BRACKET	(800)356-8000
186528	MOTOR BRACKET	(800)356-8000
186530	MOTOR BRACKET	(800)356-8000
186533	MOTOR BRACKET	(800)356-8000
186543	SEAL KIT NO 8	(800)356-8000
186544	SEAL KIT NO 9	(800)356-8000
186571	PUMP BEARING	(800)356-8000
186572	PUMP BEARING	(800)356-8000
186573	SEAL KIT	(800)356-8000
186574	PUMP SEAL KIT	(800)356-8000
186628	SHAFT	(800)356-8000
186658	BEARING	(800)356-8000
186659	BEARING	(800)356-8000
186660	BEARING ASSY	(800)356-8000
186671	PUMP IMPELLER VOLUTE	(800)356-8000
186672	PUMP IMPELLER VOLUTE	(800)356-8000
186681	SEAL KIT NO 6	(800)356-8000

186826	SEAL KIT	(800)356-8000
186827	SEAL KIT	(800)356-8000
186828	SEAL KIT	(800)356-8000
186829	SEAL KIT	(800)356-8000
186830	SEAL KIT	(800)356-8000
186831	SEAL KIT	(800)356-8000
186832	SEAL KIT	(800)356-8000
186834	SEAL KIT	(800)356-8000
186835	SEAL KIT	(800)356-8000
186836	SEAL KIT	(800)356-8000
186843	PUMP SEAL KIT	(800)356-8000
186844	PUMP SEAL KIT	(800)356-8000
186845	PUMP SEAL KIT	(800)356-8000
186846	PUMP SEAL KIT	(800)356-8000
186860	SEAL KIT	(800)356-8000
186861	SEAL KIT	(800)356-8000
186862	SEAL KIT	(800)356-8000
186863	BEARING ASSEMBLY	(800)356-8000
186865	BEARING ASSEMBLY	(800)356-8000
186866	PUMP NAME PLATE KIT	(800)356-8000
186867	PUMP NAME PLATE KIT	(800)356-8000
186868	PUMP COUPLER	(800)356-8000
186869	COUPLER	(800)356-8000
186870	COUPLER	(800)356-8000
186871	COUPLER	(800)356-8000
186872	PUMP COUPLER	(800)356-8000
186873	PUMP COUPLER	(800)356-8000
186874	PUMP COUPLER	(800)356-8000
186875	PUMP SEAL KIT	(800)356-8000
186876	PUMP SEAL KIT	(800)356-8000
186877	SEAL KIT	(800)356-8000
186878	SEAL KIT	(800)356-8000
186880	SEAL KIT	(800)356-8000
186881	SEAL KIT	(800)356-8000
186884	GUARD KIT	(800)356-8000
186885	GUARD KIT	(800)356-8000
186886	GUARD KIT	(800)356-8000
186887	GUARD KIT	(800)356-8000
186888	GUARD KIT	(800)356-8000
186889	GUARD KIT	(800)356-8000
186890	BRACKET KIT	(800)356-8000
186892	BRACKET KIT	(800)356-8000
186893	BRACKET KIT	(800)356-8000
186894	BRACKET KIT	(800)356-8000

186895	BRACKET KIT	(800)356-8000
186896	BRACKET KIT	(800)356-8000
186897	BRACKET KIT	(800)356-8000
186898	BRACKET KIT	(800)356-8000
186899	BRACKET KIT	(800)356-8000
186900	BRACKET KIT	(800)356-8000
186901	BRACKET KIT	(800)356-8000
186902	BRACKET KIT	(800)356-8000
186903	BRACKET KIT	(800)356-8000
186904	SUPPORT FOOT	(800)356-8000
186905	SUPPORT FOOT	(800)356-8000
186906	SUPPORT FOOT	(800)356-8000
186907	SUPPORT FOOT	(800)356-8000
186908	SUPPORT FOOT	(800)356-8000
186910	SUPPORT FOOT	(800)356-8000
186911	SUPPORT FOOT	(800)356-8000
186913	SUPPORT FOOT	(800)356-8000
186914	SUPPORT KIT	(800)356-8000
186916	SUPPORT FOOT	(800)356-8000
186919	SUPPORT KIT	(800)356-8000
186920	SUPPORT KIT	(800)356-8000
186926	SUPPORT KIT	(800)356-8000
186930	SUPPORT KIT	(800)356-8000
186931	VOLUTE	(800)356-8000
186932	VOLUTE	(800)356-8000
186933	VOLUTE	(800)356-8000
186934	VOLUTE	(800)356-8000
186935	PUMP IMPELLER VOLUTE	(800)356-8000
186936	PUMP IMPELLER VOLUTE	(800)356-8000
186937	PUMP IMPELLER VOLUTE	(800)356-8000
186938	VOLUTE	(800)356-8000
186939	SUPPORT KIT	(800)356-8000
186942	COUPLER GUARD	(800)356-8000
187001	1-1/4 END SUCT PUMP KIT	(800)356-8000
187002	1-1/4 END SUCT PUMP KIT	(800)356-8000
187003	1-1/2 END SUCT PUMP KIT	(800)356-8000
187004	1-1/2 END SUCT PUMP KIT	(800)356-8000
187005	1-1/2 END SUCT PUMP KIT	(800)356-8000
187006	2IN END SUCTION PUMP KIT	(800)356-8000
187007	2IN END SUCTION PUMP KIT	(800)356-8000
187008	2IN END SUCTION PUMP KIT	(800)356-8000
187009	2-1/2 END SUCT PUMP KIT	(800)356-8000
187010	2-1/2 END SUCT PUMP KIT	(800)356-8000
187011	2-1/2 END SUCT PUMP KIT	(800)356-8000

187012	3IN END SUCTION PUMP KIT	(800)356-8000
187013	3IN END SUCTION PUMP KIT	(800)356-8000
187014	3IN END SUCTION PUMP KIT	(800)356-8000
187015	3IN END SUCTION PUMP KIT	(800)356-8000
187016	4IN END SUCTION PUMP KIT	(800)356-8000
187017	4IN END SUCTION PUMP KIT	(800)356-8000
187018	4IN END SUCTION PUMP KIT	(800)356-8000
187019	4IN END SUCTION PUMP KIT	(800)356-8000
187020	5IN END SUCTION PUMP KIT	(800)356-8000
187021	5IN END SUCTION PUMP KIT	(800)356-8000
187022	5IN END SUCTION PUMP KIT	(800)356-8000
187023	5IN END SUCTION PUMP KIT	(800)356-8000
187031	1-1/4 END SUCT PUMP KIT	(800)356-8000
187032	1-1/4 END SUCT PUMP KIT	(800)356-8000
187033	1-1/4 END SUCT PUMP KIT	(800)356-8000
187034	1-1/4 END SUCT PUMP KIT	(800)356-8000
187035	1-1/2 END SUCT PUMP KIT	(800)356-8000
187036	1-1/2 END SUCT PUMP KIT	(800)356-8000
187037	1-1/2 END SUCT PUMP KIT	(800)356-8000
187038	1-1/2 END SUCT PUMP KIT	(800)356-8000
187039	2IN END SUCTION PUMP KIT	(800)356-8000
187040	2IN END SUCTION PUMP KIT	(800)356-8000
187041	2IN END SUCTION PUMP KIT	(800)356-8000
187042	2IN END SUCTION PUMP KIT	(800)356-8000
187043	2-1/2 END SUCT PUMP KIT	(800)356-8000
187044	2-1/2 END SUCT PUMP KIT	(800)356-8000
187045	2-1/2 END SUCT PUMP KIT	(800)356-8000
187046	2-1/2 END SUCT PUMP KIT	(800)356-8000
187047	3IN END SUCTION PUMP KIT	(800)356-8000
187048	3IN END SUCTION PUMP KIT	(800)356-8000
187049	3IN END SUCTION PUMP KIT	(800)356-8000
187050	3IN END SUCTION PUMP KIT	(800)356-8000
187051	4IN END SUCTION PUMP KIT	(800)356-8000
187052	4IN END SUCTION PUMP KIT	(800)356-8000
187053	5IN END SUCTION PUMP KIT	(800)356-8000
187054	5IN END SUCTION PUMP KIT	(800)356-8000
187055	5IN END SUCTION PUMP KIT	(800)356-8000
187056	6IN END SUCTION PUMP KIT	(800)356-8000
187057	6IN END SUCTION PUMP KIT	(800)356-8000
187061	2IN END SUCTION PUMP KIT	(800)356-8000
187062	2IN END SUCTION PUMP KIT	(800)356-8000
187063	2IN END SUCTION PUMP KIT	(800)356-8000
187064	3IN END SUCTION PUMP KIT	(800)356-8000
187065	3IN END SUCTION PUMP KIT	(800)356-8000

187066	4IN END SUCTION PUMP KIT	(800)356-8000
187067	4IN END SUCTION PUMP KIT	(800)356-8000
187068	4IN END SUCTION PUMP KIT	(800)356-8000
187069	5IN END SUCTION PUMP KIT	(800)356-8000
187070	5IN END SUCTION PUMP KIT	(800)356-8000
187071	6IN END SUCTION PUMP KIT	(800)356-8000
187076	1-1/2 END SUCT PUMP KIT	(800)356-8000
187077	1-1/2 END SUCT PUMP KIT	(800)356-8000
187078	1-1/2 END SUCT PUMP KIT	(800)356-8000
189033	REBUILD KIT	(800)356-8000
189034	BEARING ASSY-100-AB ALL SIZES	(800)356-8000
189035	SHAFT	(800)356-8000
189038	SHAFT	(800)356-8000
189060	SEAL	(800)356-8000
189070	FRONT BEARING	(800)356-8000
189071	FRONT BEARING	(800)356-8000
189105	BEARING ASSY	(800)356-8000
189110	COUPLER-UNIVERSAL STYLE-STEEL	(800)356-8000
189111	GLASS TUBE KIT	(800)356-8000
189124	BODY ASSEMBLY	(800)356-8000
189125	BODY ASSEMBLY	(800)356-8000
189126	BODY ASSEMBLY	(800)356-8000
189127	BODY ASSEMBLY	(800)356-8000
189128	IMPELLER ASSEMBLY	(800)356-8000
189132	IMPELLER	(800)356-8000
189134	BEARING KIT W/IMPELLER	(800)356-8000
189137	HEAT MOTOR KIT-6PK	(800)356-8000
189138	GLAND ASSEMBLY KIT-6PK	(800)356-8000
189139	BONNET&RETAINER KIT-6PK	(800)356-8000
189141	REPAIR KIT	(800)356-8000
189142	SEAL & CUSHION ASSEMBLY	(800)356-8000
189143	HEAT MOTOR KIT	(800)356-8000
189144	SEAL KIT	(800)356-8000
189160	STRAINER GASKET	(800)356-8000
189161	IMPELLER BEARING ASSY	(800)356-8000
189162	BEARING ASSEMBLY SEAL	(800)356-8000
189163	BEARING ASSEMBLY	(800)356-8000
189165	BEARING ASSEMBLY	(800)356-8000
189166	IMPELLER BEARING SEAL	(800)356-8000
189168	DYNA-DISC ASSEMBLY	(800)356-8000
189169	IMPELLER	(800)356-8000
189170	IMPELLER	(800)356-8000
189171	IMPELLER	(800)356-8000
189172	IMPELLER	(800)356-8000

189173	IMPELLER	(800)356-8000
189174	SEAL KIT	(800)356-8000
189575	FASTENER PACKAGE	(800)356-8000
189576	FASTENER PACKAGE	(800)356-8000
189577	SEAL KIT	(800)356-8000
191299	2IN BS MT PUMP SYS KIT	(800)356-8000
191300	3IN BS MT PUMP SYS KIT	(800)356-8000
191301	3IN BS MT PUMP SYS KIT	(800)356-8000
191302	4IN BS MT PUMP SYS KIT	(800)356-8000
191303	4IN BS MT PUMP SYS KIT	(800)356-8000
191304	5IN BS MT PUMP SYS KIT	(800)356-8000
191305	6IN BS MT PUMP SYS KIT	(800)356-8000
191310	1-1/4 BS MT PUMP SYS KIT	(800)356-8000
191311	1-1/4 BS MT PUMP SYS KIT	(800)356-8000
191312	2IN BS MT PUMP SYS KIT	(800)356-8000
191313	2IN BS MT PUMP SYS KIT	(800)356-8000
191314	2-1/2 BS MT PUMP SYS KIT	(800)356-8000
191315	2-1/2 BS MT PUMP SYS KIT	(800)356-8000
191316	4IN BS MT PUMP SYS KIT	(800)356-8000
191325	2IN BS MT PUMP SYS KIT	(800)356-8000
191326	3IN BS MT PUMP SYS KIT	(800)356-8000
191327	4IN BS MT PUMP SYS KIT	(800)356-8000
191328	5IN BS MT PUMP SYS KIT	(800)356-8000
191329	5IN BS MT PUMP SYS KIT	(800)356-8000
191454	1-1/2 BS MT PUMP SYS KIT	(800)356-8000
191470	1-1/2 BS MT PUMP SYS KIT	(800)356-8000
191526	3IN BS MT PUMP SYS KIT	(800)356-8000
191534	3IN BS MT PUMP SYS KIT	(800)356-8000
191552	4IN BS MT PUMP SYS KIT	(800)356-8000
191554	5IN BS MT PUMP SYS KIT	(800)356-8000
191568	5IN BS MT PUMP SYS KIT	(800)356-8000
191576	5IN BS MT PUMP SYS KIT	(800)356-8000
191584	6IN BS MT PUMP SYS KIT	(800)356-8000
191970	BASE MOUNT PUMP ACCY KIT	(800)356-8000
191971	BASE MOUNT PUMP ACCY KIT	(800)356-8000
191972	BASE MOUNT PUMP ACCY KIT	(800)356-8000
191973	BASE MOUNT PUMP ACCY KIT	(800)356-8000
191975	BASE MOUNT PUMP ACCY KIT	(800)356-8000
191976	BASE MOUNT PUMP ACCY KIT	(800)356-8000
191978	BASE MOUNT PUMP ACCY KIT	(800)356-8000
191979	BASE MOUNT PUMP ACCY KIT	(800)356-8000
191981	BASE MOUNT PUMP ACCY KIT	(800)356-8000
191982	BASE MOUNT PUMP ACCY KIT	(800)356-8000
191983	BASE MOUNT PUMP ACCY KIT	(800)356-8000

191984	BASE MOUNT PUMP ACCY KIT	(800)356-8000
191985	BASE MOUNT PUMP ACCY KIT	(800)356-8000
191986	BASE MOUNT PUMP ACCY KIT	(800)356-8000
191987	BASE MOUNT PUMP ACCY KIT	(800)356-8000
191988	BASE MOUNT PUMP ACCY KIT	(800)356-8000
191989	BASE MOUNT PUMP ACCY KIT	(800)356-8000
191990	BASE MOUNT PUMP ACCY KIT	(800)356-8000
191991	BASE MOUNT PUMP ACCY KIT	(800)356-8000
191992	BASE MOUNT PUMP ACCY KIT	(800)356-8000
191993	BASE MOUNT PUMP ACCY KIT	(800)356-8000
191994	BASE MOUNT PUMP ACCY KIT	(800)356-8000
191995	BASE MOUNT PUMP ACCY KIT	(800)356-8000
191996	BASE MOUNT PUMP ACCY KIT	(800)356-8000
192361	806T 230/460V PUMP	(800)356-8000
192363	807T 208-230/460V	(800)356-8000
192369	8010T 208-230/460V	(800)356-8000
192371	804TB 208-230/460V	(800)356-8000
192373	801TB 208-230/460V	(800)356-8000
192375	802TB 208-230/460V	(800)356-8000
192377	803TB 208-230/460V	(800)356-8000
192379	805TB 208-230/460V	(800)356-8000
192381	807T 208-230/460V	(800)356-8000
192383	808TB 208-230/460V	(800)356-8000
1AF001	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF002	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF003	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF004	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF005	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF006	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF007	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF008	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF009	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF010	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF011	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF012	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF013	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF014	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF015	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF016	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF017	1-1/2X7 IL MT PUMP KIT	(800)356-8000
1AF018	2X7 IN-LINE MT PUMP KIT	(800)356-8000
1AF019	2-1/2X7 IL MT PUMP KIT	(800)356-8000
1AF020	3X7 IN-LINE MT PUMP KIT	(800)356-8000
1AF021	4X7 IN-LINE MT PUMP KIT	(800)356-8000

1AF022	4X7 IN-LINE MT PUMP KIT	(800)356-8000
1AF023	4X7 IN-LINE MT PUMP KIT	(800)356-8000
1AF024	5X7 IN-LINE MT PUMP KIT	(800)356-8000
1AF025	5X7 IN-LINE MT PUMP KIT	(800)356-8000
1AF026	5X7 IN-LINE MT PUMP KIT	(800)356-8000
1AF027	5X7 IN-LINE MT PUMP KIT	(800)356-8000
1AF028	6X7 IN-LINE MT PUMP KIT	(800)356-8000
1AF029	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF030	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF031	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF032	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF033	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF034	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF035	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF036	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF037	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF038	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF039	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF040	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF041	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF042	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF043	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF044	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF045	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF046	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF047	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF048	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF051	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF052	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF053	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF054	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF055	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AF056	CENTRIFUGAL PUMP REP KIT	(800)356-8000
1AM001	1PH S CENTRIFUGAL PUMP	(800)356-8000
1AM002	1PH TH CENTRIFUGAL PUMP	(800)356-8000
1AM003	2PH S CENTRIFUGAL PUMP	(800)356-8000
1AM004	2PH TH CENTRIFUGAL PUMP	(800)356-8000
1AM005	3PH S CENTRIFUGAL PUMP	(800)356-8000
1AM006	3PH TH CENTRIFUGAL PUMP	(800)356-8000
1AM007	4PH S CENTRIFUGAL PUMP	(800)356-8000
1AM008	4PH TH CENTRIFUGAL PUMP	(800)356-8000
1AM009	5PH S CENTRIFUGAL PUMP	(800)356-8000
1AM010	5PH TH CENTRIFUGAL PUMP	(800)356-8000
1AM011	6PH S CENTRIFUGAL PUMP	(800)356-8000

1AM012	6PH TH CENTRIFUGAL PUMP	(800)356-8000
1AM013	7PH S CENTRIFUGAL PUMP	(800)356-8000
1AM014	7PH TH CENTRIFUGAL PUMP	(800)356-8000
1AM015	8PH S CENTRIFUGAL PUMP	(800)356-8000
1AM016	8PH TH CENTRIFUGAL PUMP	(800)356-8000
1AM017	9PH S CENTRIFUGAL PUMP	(800)356-8000
1AM019	10PH S CENTRIFUGAL PUMP	(800)356-8000
1AM020	10PH TH CENTRIFUGAL PUMP	(800)356-8000
1AM021	11PH S CENTRIFUGAL PUMP	(800)356-8000
1AM022	11PH TH CENTRIFUGAL PUMP	(800)356-8000
1AM023	12PH S CENTRIFUGAL PUMP	(800)356-8000
1AM024	12PH TH CENTRIFUGAL PUMP	(800)356-8000
1AM025	13PH S CENTRIFUGAL PUMP	(800)356-8000
1AM026	13PH TH CENTRIFUGAL PUMP	(800)356-8000
1AM027	14PH S CENTRIFUGAL PUMP	(800)356-8000
1AM028	14PH TH CENTRIFUGAL PUMP	(800)356-8000
1AM040	3/4HP CENTRIFUGAL PUMP	(800)356-8000
1AM041	1HP CENTRIFUGAL PUMP	(800)356-8000
1AM042	1-1/2HP CENTRIFUGAL PUMP	(800)356-8000
1AM043	2HP CENTRIFUGAL PUMP	(800)356-8000
1AM050	5HP CENTRIFUGAL PUMP	(800)356-8000
1AM051	5HP CENTRIFUGAL PUMP	(800)356-8000
1AM052	5HP CENTRIFUGAL PUMP	(800)356-8000
1AM053	5HP CENTRIFUGAL PUMP	(800)356-8000
1AM054	3HP CENTRIFUGAL PUMP	(800)356-8000
1AM055	1-1/2HP CENTRIFUGAL PUMP	(800)356-8000
1AM056	2HP CENTRIFUGAL PUMP	(800)356-8000
1AM057	3HP CENTRIFUGAL PUMP	(800)356-8000
1AM058	1-1/2HP CENTRIFUGAL PUMP	(800)356-8000
1AM059	2HP CENTRIFUGAL PUMP	(800)356-8000
1AM060	3HP CENTRIFUGAL PUMP	(800)356-8000
1AM061	3/4HP CENTRIFUGAL PUMP	(800)356-8000
1AM062	1HP CENTRIFUGAL PUMP	(800)356-8000
1AM063	1-1/2HP CENTRIFUGAL PUMP	(800)356-8000
1AM064	2HP CENTRIFUGAL PUMP	(800)356-8000
1AU004	PUMP CONTROL PNL L/BYPS	(800)356-8000
1AU005	PUMP CONTROL PNL W/BYPS	(800)356-8000
1BF001	1-1/4 BS MT CTRFGL PUMP	(800)356-8000
1BF002	1-1/4 BS MT CTRFGL PUMP	(800)356-8000
1BF003	1-1/4 BS MT CTRFGL PUMP	(800)356-8000
1BF004	1-1/4 BS MT CTRFGL PUMP	(800)356-8000
1BF005	1-1/4 BS MT CTRFGL PUMP	(800)356-8000
1BF011	2IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF012	2IN BS MOUNT CTRFGL PUMP	(800)356-8000

1BF013	2IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF014	2IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF015	2IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF017	2-1/2 BS MT CTRFGL PUMP	(800)356-8000
1BF018	2-1/2 BS MT CTRFGL PUMP	(800)356-8000
1BF019	2-1/2 BS MT CTRFGL PUMP	(800)356-8000
1BF020	2-1/2 BS MT CTRFGL PUMP	(800)356-8000
1BF021	2-1/2 BS MT CTRFGL PUMP	(800)356-8000
1BF031	4IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF032	4IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF033	4IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF034	4IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF035	4INBS MOUNT CTRFGL PUMP	(800)356-8000
1BF036	4IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF037	4IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF038	4IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF039	5IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF040	5IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF041	5IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF042	5IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF043	5IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF044	5IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF045	1-1/4 BS MT CTRFGL PUMP	(800)356-8000
1BF046	1-1/4 BS MT CTRFGL PUMP	(800)356-8000
1BF047	1-1/4 BS MT CTRFGL PUMP	(800)356-8000
1BF048	1-1/4 BS MT CTRFGL PUMP	(800)356-8000
1BF049	1-1/4 BS MT CTRFGL PUMP	(800)356-8000
1BF050	1-1/4 BS MT CTRFGL PUMP	(800)356-8000
1BF052	1-1/2 BS MT CTRFGL PUMP	(800)356-8000
1BF053	1-1/2 BS MT CTRFGL PUMP	(800)356-8000
1BF054	1-1/2 BS MT CTRFGL PUMP	(800)356-8000
1BF055	1-1/2 BS MT CTRFGL PUMP	(800)356-8000
1BF056	1-1/2 BS MT CTRFGL PUMP	(800)356-8000
1BF057	1-1/2 BS MT CTRFGL PUMP	(800)356-8000
1BF058	1-1/2 BS MT CTRFGL PUMP	(800)356-8000
1BF059	1-1/2 BS MT CTRFGL PUMP	(800)356-8000
1BF060	2IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF061	2IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF062	2IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF063	2IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF064	2IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF065	2IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF066	2IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF067	2IN BS MOUNT CTRFGL PUMP	(800)356-8000

1BF068	2-1/2 BS MT CTRFGL PUMP	(800)356-8000
1BF069	2-1/2 BS MT CTRFGL PUMP	(800)356-8000
1BF070	2-1/2 BS MT CTRFGL PUMP	(800)356-8000
1BF071	2-1/2 BS MT CTRFGL PUMP	(800)356-8000
1BF072	2-1/2 BS MT CTRFGL PUMP	(800)356-8000
1BF073	2-1/2 BS MT CTRFGL PUMP	(800)356-8000
1BF074	2-1/2 BS MT CTRFGL PUMP	(800)356-8000
1BF084	4IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF085	4IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF086	4IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF087	4IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF089	4IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF090	4IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF091	4IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF092	4IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF093	4IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF094	5IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF095	5IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF096	5IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF097	5IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF098	5IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF099	6IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF101	6IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF102	6IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF103	6IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF104	6IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF105	6IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF106	2IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF107	2IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF108	2IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF109	3IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF110	3IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF111	3IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF112	3IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF113	3IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF114	3IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF115	3IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF116	4IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF117	4IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF118	4IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF119	4IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF120	4IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF121	4IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF122	4IN BS MOUNT CTRFGL PUMP	(800)356-8000

1BF123	4IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF124	4IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF125	5IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF126	5IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF127	5IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF128	6IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF129	6IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF130	6IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF131	6IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF132	6IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF133	6IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF134	6IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF135	2IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF136	2IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF137	2IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF138	2IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF139	3IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF140	3IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF141	3IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF142	3IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF143	3IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF144	3IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF151	5IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF152	5IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF153	5IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF154	5IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF155	5IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF156	5IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF158	6IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF159	6IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF160	6IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF161	6IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF162	6IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF163	6IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF164	6IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF165	6IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF166	6IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF167	6IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF168	6IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BF169	5IN BS MOUNT CTRFGL PUMP	(800)356-8000
1BG001	PUMP CONTROL PNL L/BYPS	(800)356-8000
1BG002	PUMP CONTROL PNL W/BYPS	(800)356-8000
1BL001	CIRCULATOR BOOSTER PUMP	(800)356-8000
1BL002	CIRCULATOR BOOSTER PUMP	(800)356-8000

1BL003	CIRCULATOR BOOSTER PUMP	(800)356-8000
1BL004	CIRCULATOR BOOSTER PUMP	(800)356-8000
1BL006	CIRCULATOR BOOSTER PUMP	(800)356-8000
1BL012	CIRCULATOR BOOSTER PUMP	(800)356-8000
1BL013	CIRCULATOR BOOSTER PUMP	(800)356-8000
1BL014	CIRCULATOR BOOSTER PUMP	(800)356-8000
1BL016	CIRCULATOR BOOSTER PUMP	(800)356-8000
1BL017	CIRCULATOR BOOSTER PUMP	(800)356-8000
1BL032	CIRCULATOR BOOSTER PUMP	(800)356-8000
1BL033	CIRCULATOR BOOSTER PUMP	(800)356-8000
1BL034	CIRCULATOR BOOSTER PUMP	(800)356-8000
1BL035	CIRCULATOR BOOSTER PUMP	(800)356-8000
1BL036	CIRCULATOR BOOSTER PUMP	(800)356-8000
1BL037	CIRCULATOR BOOSTER PUMP	(800)356-8000
1BL050	CIRCULATOR BOOSTER PUMP	(800)356-8000
1BL050-W/FLG	CIRCULATOR BOOSTER PMP	(800)356-8000
1BL051	CIRCULATOR BOOSTER PUMP	(800)356-8000
1BL052	CIRCULATOR BOOSTER PUMP	(800)356-8000
1BL053	CIRCULATOR BOOSTER PUMP	(800)356-8000
1BL054	CIRCULATOR BOOSTER PUMP	(800)356-8000
1BL055	CIRCULATOR BOOSTER PUMP	(800)356-8000
1BL056	CIRCULATOR BOOSTER PUMP	(800)356-8000
1BL057	CIRCULATOR BOOSTER PUMP	(800)356-8000
1BL063	CIRCULATOR BOOSTER PUMP	(800)356-8000
1BL065	CIRCULATOR BOOSTER PUMP	(800)356-8000
1BL068	CIRCULATOR BOOSTER PUMP	(800)356-8000
1BL070	CIRCULATOR BOOSTER PUMP	(800)356-8000
1BL072	CIRCULATOR BOOSTER PUMP	(800)356-8000
1BL079	230V C/I CIRCULATOR	(800)356-8000
1BN001	POTABLE WATER EXP TANK	(800)356-8000
1BN002	POTABLE WATER EXP TANK	(800)356-8000
1BN003	POTABLE WATER EXP TANK	(800)356-8000
1BN005	POTABLE WATER EXP TANK	(800)356-8000
1BN006	POTABLE WATER EXP TANK	(800)356-8000
1BN007	POTABLE WATER EXP TANK	(800)356-8000
1BN008	POTABLE WATER EXP TANK	(800)356-8000
1BN009	POTABLE WATER EXP TANK	(800)356-8000
1BN010	POTABLE WATER EXP TANK	(800)356-8000
1BN011	POTABLE WATER EXP TANK	(800)356-8000
1BN012	POTABLE WATER EXP TANK	(800)356-8000
1BN013	POTABLE WATER EXP TANK	(800)356-8000
1BN014	POTABLE WATER EXP TANK	(800)356-8000
1BN051	RESIDL/COML WTR EXP TANK	(800)356-8000
1BN052	RESIDL/COML WTR EXP TANK	(800)356-8000

1BN053	RESIDL/COML WTR EXP TANK	(800)356-8000
1BN054	RESIDL/COML WTR EXP TANK	(800)356-8000
1BN055	RESIDL/COML WTR EXP TANK	(800)356-8000
1BN056	RESIDL/COML WTR EXP TANK	(800)356-8000
1BN057	RESIDL/COML WTR EXP TANK	(800)356-8000
1BN058	RESIDL/COML WTR EXP TANK	(800)356-8000
1BN059	RESIDL/COML WTR EXP TANK	(800)356-8000
1BN060	RESIDL/COML WTR EXP TANK	(800)356-8000
1BN061	RESIDL/COML WTR EXP TANK	(800)356-8000
1BN062	RESIDL/COML WTR EXP TANK	(800)356-8000
1BN063	RESIDL/COML WTR EXP TANK	(800)356-8000
1BN064	RESIDL/COML WTR EXP TANK	(800)356-8000
1BN101	DOMESTIC WELL WATER TANK	(800)356-8000
1BN102	DOMESTIC WELL WATER TANK	(800)356-8000
1BN103	DOMESTIC WELL WATER TANK	(800)356-8000
1BN104	DOMESTIC WELL WATER TANK	(800)356-8000
1BN105	DOMESTIC WELL WATER TANK	(800)356-8000
1BN106	DOMESTIC WELL WATER TANK	(800)356-8000
1BN107	DOMESTIC WELL WATER TANK	(800)356-8000
1BN108	DOMESTIC WELL WATER TANK	(800)356-8000
1BN109	DOMESTIC WELL WATER TANK	(800)356-8000
1BN110	DOMESTIC WELL WATER TANK	(800)356-8000
1BN111	DOMESTIC WELL WATER TANK	(800)356-8000
1BN112	DOMESTIC WELL WATER TANK	(800)356-8000
1BN113	DOMESTIC WELL WATER TANK	(800)356-8000
1BN114	DOMESTIC WELL WATER TANK	(800)356-8000
1BN115	DOMESTIC WELL WATER TANK	(800)356-8000
1BN116	DOMESTIC WELL WATER TANK	(800)356-8000
1BN117	DOMESTIC WELL WATER TANK	(800)356-8000
1BN118	DOMESTIC WELL WATER TANK	(800)356-8000
1BN119	DOMESTIC WELL WATER TANK	(800)356-8000
1BN120	DOMESTIC WELL WATER TANK	(800)356-8000
1BN151	DOMESTIC WELL WATER TANK	(800)356-8000
1BN152	DOMESTIC WELL WATER TANK	(800)356-8000
1BN153	DOMESTIC WELL WATER TANK	(800)356-8000
1BN154	DOMESTIC WELL WATER TANK	(800)356-8000
1BN155	DOMESTIC WELL WATER TANK	(800)356-8000
1BN156	DOMESTIC WELL WATER TANK	(800)356-8000
1BN157	DOMESTIC WELL WATER TANK	(800)356-8000
1BN158	DOMESTIC WELL WATER TANK	(800)356-8000
1BN159	DOMESTIC WELL WATER TANK	(800)356-8000
1BN160	DOMESTIC WELL WATER TANK	(800)356-8000
1BN161	DOMESTIC WELL WATER TANK	(800)356-8000
1BN162	DOMESTIC WELL WATER TANK	(800)356-8000

1BN163	DOMESTIC WELL WATER TANK	(800)356-8000
1BN201	RESDL/COML HVAC EXP TANK	(800)356-8000
1BN202	RESDL/COML HVAC EXP TANK	(800)356-8000
1BN203	RESDL/COML HVAC EXP TANK	(800)356-8000
1BN204	RESDL/COML HVAC EXP TANK	(800)356-8000
1BN205	RESDL/COML HVAC EXP TANK	(800)356-8000
1BN206	RESDL/COML HVAC EXP TANK	(800)356-8000
1BN207	RESDL/COML HVAC EXP TANK	(800)356-8000
1BN208	RESDL/COML HVAC EXP TANK	(800)356-8000
1BN209	RESDL/COML HVAC EXP TANK	(800)356-8000
1BN210	RESDL/COML HVAC EXP TANK	(800)356-8000
1DN001	TANK MOUNTING BRACKET KT	(800)356-8000
1DN002	TANK MOUNTING BRACKET KT	(800)356-8000
1DN003	TANK MOUNTING BRACKET KT	(800)356-8000
1DN004	TANK MOUNTING BRACKET KT	(800)356-8000
403510	SEAL CAP	(800)356-8000
403520	SEAL CAP	(800)356-8000
440501	RING COLLAR	(800)356-8000
440502	RING COLLAR	(800)356-8000
440601	SHAFT	(800)356-8000
440605	SHAFT	(800)356-8000
5360-02N-12-001	R-2 AIR SEPARATOR W/STRAINER	(800)356-8000
5360-03F-12-001	AIR SEPARATOR	(800)356-8000
5360-03F-12-002	AIR SEPARATOR	(800)356-8000
5360-03G-12-001	R-3(G) AIR SEPARATOR	(800)356-8000
5360-03G-12-002	AIR SEPARATOR	(800)356-8000
5360-03N-12-001	R-3 AIR SEPARATOR W/STRAINER	(800)356-8000
5360-03N-12-002	AIR SEPARATOR	(800)356-8000
5360-04F-12-001	R-4 AIR SEPARATOR W/STRAINER	(800)356-8000
5360-04F-12-002	AIR SEPARATOR	(800)356-8000
5360-04G-12-001	R-4(G) AIR SEPARATOR	(800)356-8000
5360-04G-12-002	AIR SEPARATOR	(800)356-8000
5360-05F-12-001	R-5 AIR SEPARATOR W/STRAINER	(800)356-8000
5360-05F-12-002	AIR SEPARATOR	(800)356-8000
5360-05G-12-001	R-5(G) AIR SEPARATOR	(800)356-8000
5360-05G-12-002	AIR SEPARATOR	(800)356-8000
5360-06F-12-001	R-6 AIR SEPARATOR W/STRAINER	(800)356-8000
5360-06F-12-002	AIR SEPARATOR	(800)356-8000
5360-06G-12-001	R-6(G) AIR SEPARATOR	(800)356-8000
5360-06G-12-002	AIR SEPARATOR	(800)356-8000
5360-08F-12-001	AIR SEPARATOR W/STRAINR	(800)356-8000
5360-08F-12-002	AIR SEPARATOR	(800)356-8000
5360-08G-12-001	R-8(G) AIR SEPARATOR	(800)356-8000
5360-08G-12-002	AIR SEPARATOR	(800)356-8000

5360-10F-12-001	R-10 AIR SEPARATOR W/STRAINER	(800)356-8000
5360-10G-12-001	AIR SEPARATOR	(800)356-8000
5360-10G-12-002	AIR SEPARATOR	(800)356-8000
5360-12F-12-001	R-12 AIR SEPARATOR W/STRAINER	(800)356-8000
5360-25N-12-001	R-2-1/2 AIR SEPARATOR W/STRN	(800)356-8000
5363-02N-12-001	RL-2 AIR SEPARATOR W/O STRN	(800)356-8000
5363-02N-15-001	AIR SEPARATOR	(800)356-8000
5363-03F-12-001	RL-3 AIR SEPARATOR W/O STRN	(800)356-8000
5363-03G-12-001	AIR SEPARATOR	(800)356-8000
5363-03G-12-002	AIR SEPARATOR	(800)356-8000
5363-03N-12-001	AIR SEPARATOR	(800)356-8000
5363-03N-15-001	AIR SEPARATOR	(800)356-8000
5363-04F-12-001	RL-4 AIR SEPARATOR W/O STRN	(800)356-8000
5363-04F-12-002	AIR SEPARATOR	(800)356-8000
5363-04F-15-001	AIR SEPARATOR	(800)356-8000
5363-04G-12-001	AIR SEPARATOR	(800)356-8000
5363-04G-12-002	AIR SEPARATOR	(800)356-8000
5363-05F-12-001	RL-5 AIR SEPARATOR W/O STRN	(800)356-8000
5363-05F-12-002	AIR SEPARATOR	(800)356-8000
5363-05F-15-001	AIR SEPARATOR	(800)356-8000
5363-05G-12-001	AIR SEPARATOR	(800)356-8000
5363-05G-12-002	AIR SEPARATOR	(800)356-8000
5363-06F-12-001	RL-6 AIR SEPARATOR W/O STRN	(800)356-8000
5363-06F-12-002	AIR SEPARATOR	(800)356-8000
5363-06F-15-001	AIR SEPARATOR	(800)356-8000
5363-06G-12-001	AIR SEPARATOR	(800)356-8000
5363-06G-12-002	AIR SEPARATOR	(800)356-8000
5363-08F-12-001	RL-8 AIR SEPARATOR W/O STRN	(800)356-8000
5363-08F-12-002	AIR SEPARATOR	(800)356-8000
5363-08F-15-001	AIR SEPARATOR	(800)356-8000
5363-08G-12-001	AIR SEPARATOR	(800)356-8000
5363-08G-12-002	AIR SEPARATOR	(800)356-8000
5363-10F-12-001	RL-10 AIR SEPARATOR W/O STRN	(800)356-8000
5363-10F-12-002	AIR SEPARATOR	(800)356-8000
5363-10G-12-001	AIR SEPARATOR	(800)356-8000
5363-10G-12-002	AIR SEPARATOR	(800)356-8000
5363-12F-12-001	RL-12 AIR SEPARATOR W/O STRN	(800)356-8000
5363-12F-12-002	AIR SEPARATOR	(800)356-8000
5363-12G-12-001	AIR SEPARATOR	(800)356-8000
5363-12G-12-002	AIR SEPARATOR	(800)356-8000
5363-25N-12-001	RL-2-1/2 AIR SEPARATOR W/O STR	(800)356-8000
5363-25N-15-001	AIR SEPARATOR	(800)356-8000
A01950	AIR SEPERATOR SCREEN	(800)356-8000
A01951	AIR SEPERATOR SCREEN	(800)356-8000

A01952	AIR SEPERATOR SCREEN	(800)356-8000
A01953	AIR SEPERATOR SCREEN	(800)356-8000
A01954	AIR SEPERATOR SCREEN	(800)356-8000
A01955	AIR SEPERATOR SCREEN	(800)356-8000
A01956	AIR SEPERATOR SCREEN	(800)356-8000
A01960	AIR SEPERATOR STRAINER	(800)356-8000
A01961	AIR SEPERATOR STRAINER	(800)356-8000
A01962	AIR SEPERATOR STRAINER	(800)356-8000
A01963	AIR SEPERATOR STRAINER	(800)356-8000
A01964	AIR SEPERATOR STRAINER	(800)356-8000
A01965	AIR SEPERATOR STRAINER	(800)356-8000
A01966	AIR SEPERATOR STRAINER	(800)356-8000
A03715	BODY	(800)356-8000
A03716	BODY	(800)356-8000
A03717	DIFFUSER	(800)356-8000
A03718	AIR COALESCENT	(800)356-8000
A03719	O-RING	(800)356-8000
A03720	BAFFLE	(800)356-8000
A03722	CAP	(800)356-8000
A03831	BODY	(800)356-8000
A03832	BODY	(800)356-8000
A03834	CAP	(800)356-8000
A03835	BAFFLE	(800)356-8000
A03836	BRUSH	(800)356-8000
A03837	DIFFUSER	(800)356-8000
A03841	O-RING	(800)356-8000
A07016	COVER PLATE	(800)356-8000
A07018	COVER PLATE	(800)356-8000
A07020	COVER PLATE	(800)356-8000
A07022	COVER PLATE	(800)356-8000
A07024	COVER PLATE	(800)356-8000
A07026	COVER PLATE	(800)356-8000
A07028	COVER PLATE	(800)356-8000
A07029	BAFFLE	(800)356-8000
A07030	BAFFLE	(800)356-8000
A07031	BAFFLE	(800)356-8000
A07032	BAFFLE	(800)356-8000
A07033	BAFFLE	(800)356-8000
A07034	BAFFLE	(800)356-8000
A07035	BAFFLE	(800)356-8000
A40000	FLANGE	(800)356-8000
A79700	TUBE	(800)356-8000
A79900	TUBE	(800)356-8000
A80000	TUBE	(800)356-8000

A80200	TUBE	(800)356-8000
A80350	TUBE	(800)356-8000
A80400	TUBE	(800)356-8000
A80500	TUBE	(800)356-8000
A80800	NIPPLE	(800)356-8000
A81000	BODY	(800)356-8000
A81100	NEEDLE VALVE	(800)356-8000
A89200	BODY	(800)356-8000
A89500	BALL	(800)356-8000
A89510	TUBE	(800)356-8000
A89900	GASKET	(800)356-8000
A90502	TANK FITTING	(800)356-8000
A90503	VENT FITTING	(800)356-8000
A90883	FOOT PACKAGE	(800)356-8000
A90982	FOOT PACKAGE	(800)356-8000
A91242	COVER PLATE	(800)356-8000
A91244	COVER PLATE	(800)356-8000
A91246	COVER PLATE	(800)356-8000
A91248	COVER PLATE	(800)356-8000
A91250	COVER PLATE	(800)356-8000
A91252	COVER PLATE	(800)356-8000
A91254	COVER PLATE	(800)356-8000
A91256	COVER PLATE	(800)356-8000
A91260	START UP STRAINER	(800)356-8000
A91261	START UP STRAINER	(800)356-8000
A91262	START UP STRAINER	(800)356-8000
A91263	START UP STRAINER	(800)356-8000
A91264	START UP STRAINER	(800)356-8000
A91265	START UP STRAINER	(800)356-8000
A91266	STRAINER	(800)356-8000
A91267	START UP STRAINER	(800)356-8000
A91268	START UP STRAINER	(800)356-8000
A91270	STRAINER	(800)356-8000
A91271	STRAINER	(800)356-8000
A91272	STRAINER	(800)356-8000
A91273	STRAINER	(800)356-8000
A91274	STRAINER	(800)356-8000
A91275	STRAINER	(800)356-8000
A91276	STRAINER	(800)356-8000
A91277	STRAINER	(800)356-8000
A91278	STRAINER	(800)356-8000
A91280	SS STRAINER	(800)356-8000
A91281	SS STRAINER	(800)356-8000
A91282	SS STRAINER	(800)356-8000

A91283	SS STRAINER	(800)356-8000
A91284	SS STRAINER	(800)356-8000
A91285	SS STRAINER	(800)356-8000
A91286	SS STRAINER	(800)356-8000
A91287	SS STRAINER	(800)356-8000
A91288	SS STRAINER	(800)356-8000
A91554	BAFFLE	(800)356-8000
A91555	BAFFLE	(800)356-8000
A91556	BAFFLE	(800)356-8000
A91557	BAFFLE	(800)356-8000
A91558	BAFFLE	(800)356-8000
A91559	BAFFLE	(800)356-8000
A91560	BAFFLE	(800)356-8000
A91561	BAFFLE	(800)356-8000
A91562	BAFFLE	(800)356-8000
A91563	SS BAFFLE	(800)356-8000
A91564	SS BAFFLE	(800)356-8000
AC0523	KEY	(800)356-8000
AC0534	ELBOW	(800)356-8000
AC0535	CONNECTOR	(800)356-8000
D18500	ADJ SCREW	(800)356-8000
D22002	SPRING CAP	(800)356-8000
D23000	SPRING CAP	(800)356-8000
D24500	SPRING	(800)356-8000
D27000	NUT	(800)356-8000
D27500	DIAPHRAGM PLATE	(800)356-8000
D46500	HANDLE	(800)356-8000
D49000	ROD	(800)356-8000
D80000	NUT	(800)356-8000
D81500	HANDLE	(800)356-8000
DJ0034	CAP SCREW	(800)356-8000
DJ0042	CAP SCREW	(800)356-8000
DJ0066	CAP SCREW	(800)356-8000
DJ0071	CASING CAPSCREW	(800)356-8000
DJ0079	CAP SCREW	(800)356-8000
DJ0132	CAP SCREW	(800)356-8000
DJ0157	CAP SCREW	(800)356-8000
DL0025	NIPPLE	(800)356-8000
DP0587	KEY	(800)356-8000
F01200	COVER	(800)356-8000
F02400	COVER	(800)356-8000
F02800	SNAP RING	(800)356-8000
F06400	VALVE CAP	(800)356-8000
F06800	SNAP RING	(800)356-8000

F07400	DISC	(800)356-8000
F09300	DISC	(800)356-8000
F09301	DISC	(800)356-8000
F09302	DISC	(800)356-8000
F09303	DISC	(800)356-8000
F09304	DISC	(800)356-8000
F09600	PACKING	(800)356-8000
F11400	NUT	(800)356-8000
F13400	HANDLE	(800)356-8000
F14200	2IN IRON FLANGE	(800)356-8000
F15600	NUT	(800)356-8000
F16600	NUT	(800)356-8000
F17000	PACKING	(800)356-8000
F17400	GASKET	(800)356-8000
F17800	HANDLE	(800)356-8000
F18200	FLANGE	(800)356-8000
F19000	GASKET	(800)356-8000
F19200	CAP SCREW	(800)356-8000
F19600	VALVE CAP	(800)356-8000
F20400	VALVE CAP	(800)356-8000
F20800	SNAP RING	(800)356-8000
F21800	VALVE CAP	(800)356-8000
F22200	SNAP RING	(800)356-8000
F26200	GASKET	(800)356-8000
F27800	GASKET	(800)356-8000
F41800	VALVE STEM	(800)356-8000
F42100	VALVE STEM	(800)356-8000
F42101	VALVE STEM	(800)356-8000
F42102	VALVE STEM	(800)356-8000
F42103	VALVE STEM	(800)356-8000
F42104	VALVE STEM	(800)356-8000
F42800	SNAP RING	(800)356-8000
F43000	GASKET	(800)356-8000
F44400	GASKET	(800)356-8000
F47200	GASKET	(800)356-8000
F49000	GASKET	(800)356-8000
F54200	2IN BRONZE FLANGE	(800)356-8000
F62800	DISC	(800)356-8000
F63400	STEM	(800)356-8000
F66200	SPRING	(800)356-8000
F66800	SPRING	(800)356-8000
F67200	RING	(800)356-8000
F69000	HANGER	(800)356-8000
F69200	GUIDE WIRE	(800)356-8000

F72200	FLANGE	(800)356-8000
F73400	FLANGE	(800)356-8000
F74000	FLANGE	(800)356-8000
F74800	FLANGE	(800)356-8000
F88600	BODY	(800)356-8000
F90200	BODY	(800)356-8000
F91600	FASTENER PACKAGE	(800)356-8000
G10001	BONNETT	(800)356-8000
G10002	BONNETT	(800)356-8000
G10003	BONNETT	(800)356-8000
G10004	BONNETT	(800)356-8000
G10005	STEM	(800)356-8000
G10006	STEM	(800)356-8000
G10007	STEM	(800)356-8000
G10008	STEM	(800)356-8000
G10013	SEAL RETAINER	(800)356-8000
G10014	SEAL RETAINER	(800)356-8000
G10015	SEAL RETAINER	(800)356-8000
G10016	SEAL RETAINER	(800)356-8000
G10017	NAMEPLATE	(800)356-8000
G10018	NAMEPLATE	(800)356-8000
G10019	NAMEPLATE	(800)356-8000
G10020	NAMEPLATE	(800)356-8000
G10024	YOKE	(800)356-8000
G10025	NAMEPLATE CAP	(800)356-8000
G10026	PACKING GLAND NUT	(800)356-8000
G10027	LOCKWASHER	(800)356-8000
G10028	INDICATOR LOCK	(800)356-8000
G10029	INDICATOR RING	(800)356-8000
G10030	BUSHING	(800)356-8000
G10031	WASHER	(800)356-8000
G10032	WASHER	(800)356-8000
G10033	PACKING	(800)356-8000
G10034	PACKING GLAND NUT	(800)356-8000
G10035	LOCKWASHER	(800)356-8000
G10036	INDICATOR LOCK	(800)356-8000
G10037	INDICATOR RING	(800)356-8000
G10038	BUSHING	(800)356-8000
G10039	WASHER	(800)356-8000
G10040	WASHER	(800)356-8000
G10041	PACKING	(800)356-8000
G10060	BONNETT	(800)356-8000
G10061	BONNETT	(800)356-8000
G10062	BONNETT	(800)356-8000

G10063	BONNETT	(800)356-8000
G10064	NAMEPLATE	(800)356-8000
G10065	NAMEPLATE	(800)356-8000
G10066	NAMEPLATE	(800)356-8000
G10067	NAMEPLATE	(800)356-8000
G10105	KNOB	(800)356-8000
G82450	GASKET	(800)356-8000
G91900	GLASS TUBE	(800)356-8000
G91904	TUBE	(800)356-8000
G91908	GLASS TUBE	(800)356-8000
G91910	GLASS TUBE	(800)356-8000
G92000	RING	(800)356-8000
G92500	BODY	(800)356-8000
G92559	NAMEPLATE	(800)356-8000
G92560	NAMEPLATE	(800)356-8000
G92561	NAMEPLATE	(800)356-8000
G92562	NAMEPLATE	(800)356-8000
G92563	NAMEPLATE	(800)356-8000
G92564	NAMEPLATE	(800)356-8000
G92565	NAMEPLATE	(800)356-8000
G92566	NAMEPLATE	(800)356-8000
G93000	FLANGE	(800)356-8000
G93500	FLANGE	(800)356-8000
G94250	FLANGE	(800)356-8000
G94750	FLANGE	(800)356-8000
G95000	ANGLE VALVE	(800)356-8000
G95594	SCALE PLATE	(800)356-8000
G95595	SCALE PLATE	(800)356-8000