

CAPP/USA'S Dwyer/Mercoid Product Page

CAPP/USA • 201 Marple Ave. Clifton Heights, Pa 19018

Call CAPP/USA Today for Pricing and Availability! 1-800-356-8000

Visit us on the web at www.cappusa.com

DWYER / MERCROID No.	DESCRIPTION	SUPPLIER PHONE No.
100	.10-0-1.0WTR .02 INCLIND GAUGE	(800)356-8000
100.5	.10-0-1.0WTR .01 INCLIND GAUGE	(800)356-8000
101	.05-0-.50WTR .01 INCLIND GAUGE	(800)356-8000
102	.20-0-2.0WTR .02 INCLIND GAUGE	(800)356-8000
102.5	.20-0-2.0WTR .02 INCLIND GAUGE	(800)356-8000
104	0-4WTR .10 MNR DIV PRESS GAUGE	(800)356-8000
108	.50-0-.50WTR .02 INCLIND GAUGE	(800)356-8000
109	.20-0-3WTR .02 INCLINED GAUGE	(800)356-8000
115	.05-0-.25WTR .005 INCLND GAUGE	(800)356-8000
170	PLSTC DRAFT GAGE	(800)356-8000
171	INCLINED PRESS GAGE	(800)356-8000
172	PLSTC DRAFT GAGE	(800)356-8000
200	INCLINED PRESS GAUGE	(800)356-8000
200.5	.10-0-1.0WTR .02MNR INC GAUGE	(800)356-8000
201	.05-0-.50WTR .01MNR INC GAUGE	(800)356-8000
202	.20-0-2.0WTR .02MNR INC GAUGE	(800)356-8000
202.5	INCLINED PRESS GAUGE	(800)356-8000
209	.20-0-3WTR .02MNR INC GAUGE	(800)356-8000
215	.05-0-.25WTR .005 INC GAUGE	(800)356-8000
244	INCLINED PRESS GAUGE	(800)356-8000
246	INCLINED PRESS GAUGE	(800)356-8000
300	0-4WTR .10 VERT PRESS GAUGE	(800)356-8000
306	0-6 .10 VERTICAL PRESS GAUGE	(800)356-8000
308	0-8 .10 VERTICAL PRESS GAUGE	(800)356-8000
310	0-10 .10 VERTICAL PRESS GAUGE	(800)356-8000
460	AIR METER	(800)356-8000
480	LO RNGE VANEOMETER	(800)356-8000
920	SMOKE GAGE PUMP	(800)356-8000
2210	0-10 PSI-.20 PSI PRESS GAUGE	(800)356-8000
2215	PRESSURE GAUGE	(800)356-8000
2220	0-20 PSI-.50 PSI PRESS GAUGE	(800)356-8000
2230	PRESSURE GAUGE	(800)356-8000
2301	PRESSURE GAUGE	(800)356-8000
2302	PRESSURE GAUGE	(800)356-8000
2304	PRESSURE GAUGE	(800)356-8000
2310	PRESSURE GAUGE	(800)356-8000

2320	PRESSURE GAUGE	(800)356-8000
2330	PRESSURE GAUGE	(800)356-8000
3001	0-1WTR .01 MNR PHOTO SW/GAUGE	(800)356-8000
3002	0-2WTR .05 MNR PHOTO SW/GAUGE	(800)356-8000
3003	0-3WTR .1 MNR PHOTO SW/GAUGE	(800)356-8000
3004	0-4WTR .1 MNR PHOTO SW/GAUGE	(800)356-8000
3005	0-5WTR .1 MNR PHOTO SW/GAUGE	(800)356-8000
3006	0-6WTR .2 MNR PHOTO SW/GAUGE	(800)356-8000
3008	0-8WTR .2 MNR PHOTO SW/GAUGE	(800)356-8000
3010	0-10WTR .2 MNR PHOTO SW/GAUGE	(800)356-8000
3015	0-15WTR .5 MNR PHOTO SW/GAUGE	(800)356-8000
3020	0-20WTR .5 MNR PHOTO SW/GAUGE	(800)356-8000
3025	0-25WTR .5MNR PHOTO SW/GAUGE	(800)356-8000
3030	0-30WTR 1.0MNR PHOTO SW/GAUGE	(800)356-8000
3040	0-40WTR 1.0MNR PHOTO SW/GAUGE	(800)356-8000
3050	0-50WTR 1.0MNR PHOTO SW/GAUGE	(800)356-8000
3060	0-60WTR 2.0MNR PHOTO SW/GAUGE	(800)356-8000
3080	0-80WTR 2.0MNR PHOTO SW/GAUGE	(800)356-8000
3100	0-100WTR 2.0MNR PHOTO SW/GAUG	(800)356-8000
3150	0-150WTR 5.0MNR PHOTO SW/GAUG	(800)356-8000
3201	0-1PSI .02PSI PHOTO SW/GAUGE	(800)356-8000
3202	0-2PSI .05PSI PHOTO SW/GAUGE	(800)356-8000
3203	0-3PSI .1PSI PHOTO SW/GAUGE	(800)356-8000
3204	0-4PSI .1PSI PHOTO SW/GAUGE	(800)356-8000
3205	0-5PSI .1PSI PHOTO SW/GAUGE	(800)356-8000
3210	0-10PSI .2PSI PHOTO SW/GAUGE	(800)356-8000
3215	0-15PSI .5PSI PHOTO SW/GAUGE	(800)356-8000
3220	0-20PSI .5PSI PHOTO SW/GAUGE	(800)356-8000
3301	.5-0-.5PSI .02PSI PHOTO SW/GGE	(800)356-8000
3302	1-0-1PSI .05PSI PHOTO SW/GAUGE	(800)356-8000
3304	2-0-2PSI .1PSI PHOTO SW/GAUGE	(800)356-8000
3310	5-0-5PSI .2PSI PHOTO SW/GAUGE	(800)356-8000
3320	10-0-10PSI .5PSI PHOTO SW/GAGE	(800)356-8000
3330	15-0-15PSI 1.0PSI PHOTO SW/GGE	(800)356-8000
104-10	0-10WTR .10MNR DIV VERT GAGE	(800)356-8000
104-6	0-6WTR .10MNR DIV VERT GAUGE	(800)356-8000
104-8	0-8WTR .10MNR DIV VERT GAUGE	(800)356-8000
115-AV	0-25 AIR VELOCITY KIT	(800)356-8000
1200-A	CMBSTN TEST KIT	(800)356-8000
1211-12	6-0-6 SLACK-TUBE MANOMETER	(800)356-8000
1211-120	60-0-60 SLACK-TUBE MANOMETER	(800)356-8000
1211-16	8-0-8 SLACK-TUBE MANOMETER	(800)356-8000
1211-200	100-0-100 SLACK-TUBE MANOMETER	(800)356-8000
1211-24	12-0-12 SLACK-TUBE MANOMETER	(800)356-8000

1211-8	4-0-4 SLACK-TUBE MANOMETER	(800)356-8000
125-AV	0-1 AIR VELOCITY KIT	(800)356-8000
1425-12	0-12 WATER HOOK GAGE	(800)356-8000
1425-24	0-24 WATER HOOK GAGE	(800)356-8000
160-12	12IN PITOT TUBE	(800)356-8000
160-18	18IN PITOT TUBE	(800)356-8000
160-24	24IN PITOT TUBE	(800)356-8000
160-8	8IN PITOT TUBE	(800)356-8000
1626-1	.15-1.5 PRESS ACTUATED SWITCH	(800)356-8000
1627-1	.15-1.5 PRESS ACTUATED SWITCH	(800)356-8000
1638-0	DIFFRNTL PR SWITCH	(800)356-8000
1638-1	DIFFRNTL PR SWITCH	(800)356-8000
1638-2	DIFFRNTL PR SWITCH	(800)356-8000
1638-5	DIFFRNTL PR SWITCH	(800)356-8000
1640-0	PRESSURE SWITCH	(800)356-8000
1640-1	PRESSURE SWITCH	(800)356-8000
1640-2	PRESSURE SWITCH	(800)356-8000
1640-5	PRESSURE SWITCH	(800)356-8000
166-12	12IN POCKET PITOT TUBE	(800)356-8000
1823-0	DIFFRNTL PR SWITCH	(800)356-8000
1823-00	DIFFRNTL PR SWITCH	(800)356-8000
1823-1	PRESSURE SWITCH	(800)356-8000
1823-10	DIFFRNTL PR SWITCH	(800)356-8000
1823-2	DIFFRNTL PR SWITCH	(800)356-8000
1823-5	DIFFRNTL PR SWITCH	(800)356-8000
1910-0	PRESSURE SWITCH	(800)356-8000
1910-00	DIFFRNTL PR SWITCH	(800)356-8000
1910-5	PRESS ACTUATED SWITCH	(800)356-8000
1950-02	SWITCH	(800)356-8000
2000-00	0.25WTR-.005 MNR DIV PRS GAUGE	(800)356-8000
209-AF	.20-0-2.0 .02 AIR FLTR GAUGE	(800)356-8000
2300-0	PRESSURE GAUGE	(800)356-8000
250.5-AF	.10-0-1.0WTR .01 AIR FLTR GAGE	(800)356-8000
250-AF	.10-0-1.0WTR .02 AIR FLTR GAGE	(800)356-8000
251-AF	.05-0-.50WTR .01 AIR FLTR GAGE	(800)356-8000
252-AF	.20-0-2.0 .02 AIR FLTR GAUGE	(800)356-8000
260-AF	0-1.5WTR .02 AIR FLTR GAUGE	(800)356-8000
3000-0	0-.5WTR .005 MNR PHOTO SW/GAUG	(800)356-8000
3000-00	0-.25WTR .005M PHOTO SW/GAUGE	(800)356-8000
3300-0	.25-0-.25 .10PSI PHOTO SW/GAUG	(800)356-8000
350-AF	AIR FILTER GAUGE	(800)356-8000
421-10	0-1 INCLN-VERT MANOMETER	(800)356-8000
421-23	0-2 INCLN-VERT MANOMETER	(800)356-8000
421-5	0-1 INCLN-VERT MANOMETER	(800)356-8000

422-10	0-1 INCLN-VERT MANOMETER	(800)356-8000
422-23	0-2 INCLN-VERT MANOMETER	(800)356-8000
422-5	0-1 INCLN-VERT MANOMETER	(800)356-8000
424-5	0-2 INCLN-VERT MANOMETER	(800)356-8000
470-1	THERMAL ANEMOMETER	(800)356-8000
AP-153-33	DIAPHRM PR SWITCH	(800)356-8000
DA-31-2-1	TUBE PR SWITCH	(800)356-8000
DA-31-2-6	TUBE PR SWITCH	(800)356-8000
DA-31-2-7	TUBE PR SWITCH	(800)356-8000
DA-31-2-9	TUBE PR SWITCH	(800)356-8000
M1425-325	HOOK GAGE	(800)356-8000
M1425-625	0-625 WATER HOOK GAGE	(800)356-8000
RKA	DIFF PRESS REG KIT	(800)356-8000
RK-RMB	DIFF PRESS REG KIT	(800)356-8000
RMA-1	.05-.5 FLOWMETER	(800)356-8000
RMA-10	20-200 FLOWMETER	(800)356-8000
RMA-10-BV	20-200 FLOWMETER	(800)356-8000
RMA-10-SSV	20-200 FLOWMETER	(800)356-8000
RMA-10-TMV	20-200 FLOWMETER	(800)356-8000
RMA-11	20-240 FLOWMETER	(800)356-8000
RMA-11-BV	20-240 FLOWMETER	(800)356-8000
RMA-11-SSV	20-240 FLOWMETER	(800)356-8000
RMA-11-TMV	20-240 FLOWMETER	(800)356-8000
RMA-12	50-500 FLOWMETER	(800)356-8000
RMA-12-BV	50-500 FLOWMETER	(800)356-8000
RMA-12-SSV	50-500 FLOWMETER	(800)356-8000
RMA-12-TMV	50-500 FLOWMETER	(800)356-8000
RMA-13	100-1000 FLOWMETER	(800)356-8000
RMA-13-BV	100-1000 FLOWMETER	(800)356-8000
RMA-13-SSV	100-1000 FLOWMETER	(800)356-8000
RMA-13-TMV	100-1000 FLOWMETER	(800)356-8000
RMA-14	200-2500 FLOWMETER	(800)356-8000
RMA-14-BV	200-2500 FLOWMETER	(800)356-8000
RMA-14-SSV	200-2500 FLOWMETER	(800)356-8000
RMA-14-TMV	200-2500 FLOWMETER	(800)356-8000
RMA-150	5-100 FLOWMETER	(800)356-8000
RMA-150-BV	5-100 FLOWMETER	(800)356-8000
RMA-150-SSV	5-100 FLOWMETER	(800)356-8000
RMA-150-TMV	5-100 FLOWMETER	(800)356-8000
RMA-151	5-50 FLOWMETER	(800)356-8000
RMA-151-BV	5-50 FLOWMETER	(800)356-8000
RMA-151-SSV	5-50 FLOWMETER	(800)356-8000
RMA-151-TMV	5-50 FLOWMETER	(800)356-8000
RMA-1-BV	.05-.5 FLOWMETER	(800)356-8000

RMA-1-SSV	.05-.5 FLOWMETER	(800)356-8000
RMA-1-TMV	.05-.5 FLOWMETER	(800)356-8000
RMA-2	.1-1.0 FLOWMETER	(800)356-8000
RMA-21	1-10 FLOWMETER	(800)356-8000
RMA-21-BV	1-10 FLOWMETER	(800)356-8000
RMA-21-SSV	1-10 FLOWMETER	(800)356-8000
RMA-21-TMV	1-10 FLOWMETER	(800)356-8000
RMA-22	2-25 FLOWMETER	(800)356-8000
RMA-22-BV	2-25 FLOWMETER	(800)356-8000
RMA-22-SSV	2-25 FLOWMETER	(800)356-8000
RMA-22-TMV	2-25 FLOWMETER	(800)356-8000
RMA-23	5-50 FLOWMETER	(800)356-8000
RMA-23-BV	5-50 FLOWMETER	(800)356-8000
RMA-23-SSV	5-50 FLOWMETER	(800)356-8000
RMA-23-TMV	5-50 FLOWMETER	(800)356-8000
RMA-24	5-70 FLOWMETER	(800)356-8000
RMA-24-BV	5-70 FLOWMETER	(800)356-8000
RMA-24-SSV	5-70 FLOWMETER	(800)356-8000
RMA-24-TMV	5-70 FLOWMETER	(800)356-8000
RMA-25	10-100 FLOWMETER	(800)356-8000
RMA-25-BV	10-100 FLOWMETER	(800)356-8000
RMA-25-SSV	10-100 FLOWMETER	(800)356-8000
RMA-25-TMV	10-100 FLOWMETER	(800)356-8000
RMA-26	5-5 FLOWMETER	(800)356-8000
RMA-26-BV	.5-5 FLOWMETER	(800)356-8000
RMA-26-SSV	.5-5 FLOWMETER	(800)356-8000
RMA-26-TMV	.5-5 FLOWMETER	(800)356-8000
RMA-2-BV	.1-1.0 FLOWMETER	(800)356-8000
RMA-2-SSV	.1-1.0 FLOWMETER	(800)356-8000
RMA-2-TMV	.1-1.0 FLOWMETER	(800)356-8000
RMA-3	.2-2.0 FLOWMETER	(800)356-8000
RMA-32	5-50 FLOWMETER	(800)356-8000
RMA-32-BV	5-50 FLOWMETER	(800)356-8000
RMA-32-SSV	5-50 FLOWMETER	(800)356-8000
RMA-32-TMV	5-50 FLOWMETER	(800)356-8000
RMA-33	10-110 FLOWMETER	(800)356-8000
RMA-33-BV	10-110 FLOWMETER	(800)356-8000
RMA-33-SSV	10-110 FLOWMETER	(800)356-8000
RMA-33-TMV	10-110 FLOWMETER	(800)356-8000
RMA-34	20-300 FLOWMETER	(800)356-8000
RMA-34-BV	20-300 FLOWMETER	(800)356-8000
RMA-34-SSV	20-300 FLOWMETER	(800)356-8000
RMA-34-TMV	20-300 FLOWMETER	(800)356-8000
RMA-3-BV	.2-2.0 FLOWMETER	(800)356-8000

RMA-3-SSV	.2-2.0 FLOWMETER	(800)356-8000
RMA-3-TMV	.2-2.0 FLOWMETER	(800)356-8000
RMA-4	.5-5.0 FLOWMETER	(800)356-8000
RMA-42	1-11 FLOWMETER	(800)356-8000
RMA-42-BV	1-11 FLOWMETER	(800)356-8000
RMA-42-SSV	1-11 FLOWMETER	(800)356-8000
RMA-42-TMV	1-11 FLOWMETER	(800)356-8000
RMA-43	2-24 FLOWMETER	(800)356-8000
RMA-43-BV	2-24 FLOWMETER	(800)356-8000
RMA-43-SSV	2-24 FLOWMETER	(800)356-8000
RMA-43-TMV	2-24 FLOWMETER	(800)356-8000
RMA-44	4-34 FLOWMETER	(800)356-8000
RMA-44-BV	4-34 FLOWMETER	(800)356-8000
RMA-44-SSV	4-34 FLOWMETER	(800)356-8000
RMA-44-TMV	4-34 FLOWMETER	(800)356-8000
RMA-45	5-50 FLOWMETER	(800)356-8000
RMA-45-BV	5-50 FLOWMETER	(800)356-8000
RMA-45-SSV	5-50 FLOWMETER	(800)356-8000
RMA-45-TMV	5-50 FLOWMETER	(800)356-8000
RMA-4-BV	.5-5.0 FLOWMETER	(800)356-8000
RMA-4-SSV	.5-5.0 FLOWMETER	(800)356-8000
RMA-4-TMV	.5-5.0 FLOWMETER	(800)356-8000
RMA-5	1.0-10 FLOWMETER	(800)356-8000
RMA-5-BV	1.0-10 FLOWMETER	(800)356-8000
RMA-5-SSV	1.0-10 FLOWMETER	(800)356-8000
RMA-5-TMV	1.0-10 FLOWMETER	(800)356-8000
RMA-6	2.0-20 FLOWMETER	(800)356-8000
RMA-6-BV	2.0-20 FLOWMETER	(800)356-8000
RMA-6-SSV	2.0-20 FLOWMETER	(800)356-8000
RMA-6-TMV	2.0-20 FLOWMETER	(800)356-8000
RMA-7	5.0-50 FLOWMETER	(800)356-8000
RMA-7-BV	5.0-50 FLOWMETER	(800)356-8000
RMA-7-SSV	5.0-50 FLOWMETER	(800)356-8000
RMA-7-TMV	5.0-50 FLOWMETER	(800)356-8000
RMA-8	10-100 FLOWMETER	(800)356-8000
RMA-8-BV	10-100 FLOWMETER	(800)356-8000
RMA-8-SSV	10-100 FLOWMETER	(800)356-8000
RMA-8-TMV	10-100 FLOWMETER	(800)356-8000
RMA-9	15-150 FLOWMETER	(800)356-8000
RMA-9-BV	15-150 FLOWMETER	(800)356-8000
RMA-9-SSV	15-150 FLOWMETER	(800)356-8000
RMA-9-TMV	15-150 FLOWMETER	(800)356-8000
RMB-49	.5-5.0 FLOWMETER	(800)356-8000
RMB-49-BV	.5-5 FLOWMETER	(800)356-8000

RMB-49-SSV	.5-5 FLOWMETER	(800)356-8000
RMB-50	1.0-10 FLOWMETER	(800)356-8000
RMB-50-BV	1-10 FLOWMETER	(800)356-8000
RMB-50-SSV	1-10 FLOWMETER	(800)356-8000
RMB-51	2.0-2.0 FLOWMETER	(800)356-8000
RMB-51-BV	2-20 FLOWMETER	(800)356-8000
RMB-51-SSV	2-20 FLOWMETER	(800)356-8000
RMB-52	5.0-50 FLOWMETER	(800)356-8000
RMB-52-BV	5-50 FLOWMETER	(800)356-8000
RMB-52-SSV	5-50 FLOWMETER	(800)356-8000
RMB-53	10-100 FLOWMETER	(800)356-8000
RMB-53-BV	10-100 FLOWMETER	(800)356-8000
RMB-53-SSV	10-100 FLOWMETER	(800)356-8000
RMB-54	20-200 FLOWMETER	(800)356-8000
RMB-54-BV	20-200 FLOWMETER	(800)356-8000
RMB-54-SSV	20-200 FLOWMETER	(800)356-8000
RMB-55	40-400 FLOWMETER	(800)356-8000
RMB-55-BV	40-400 FLOWMETER	(800)356-8000
RMB-55-SSV	40-400 FLOWMETER	(800)356-8000
RMB-56	50-500 FLOWMETER	(800)356-8000
RMB-56-BV	50-500 FLOWMETER	(800)356-8000
RMB-56-SSV	50-500 FLOWMETER	(800)356-8000
RMB-57	60-600 FLOWMETER	(800)356-8000
RMB-57-BV	60-600 FLOWMETER	(800)356-8000
RMB-57-SSV	60-600 FLOWMETER	(800)356-8000
RMB-82	1-12 FLOWMETER	(800)356-8000
RMB-82-BV	1-12 FLOWMETER	(800)356-8000
RMB-82-SSV	1-12 FLOWMETER	(800)356-8000
RMB-83	1-20 FLOWMETER	(800)356-8000
RMB-83-BV	2-20 FLOWMETER	(800)356-8000
RMB-83-SSV	2-20 FLOWMETER	(800)356-8000
RMB-84	4-40 FLOWMETER	(800)356-8000
RMB-84-BV	4-40 FLOWMETER	(800)356-8000
RMB-84-SSV	4-40 FLOWMETER	(800)356-8000
RMB-85	10-100 FLOWMETER	(800)356-8000
RMB-85-BV	10-100 FLOWMETER	(800)356-8000
RMB-85-SSV	10-100 FLOWMETER	(800)356-8000
RMC-101-BV	.5-50 FLOWMETER	(800)356-8000
RMC-101-SSV	.5-50 FLOWMETER	(800)356-8000
RMC-102-BV	10-100 FLOWMETER	(800)356-8000
RMC-102-SSV	10-100 FLOWMETER	(800)356-8000
RMC-103-BV	20-200 FLOWMETER	(800)356-8000
RMC-103-SSV	20-200 FLOWMETER	(800)356-8000
RMC-104-BV	40-400 FLOWMETER	(800)356-8000

RMC-104-SSV	40-400 FLOWMETER	(800)356-8000
RMC-105	60-600 FLOWMETER	(800)356-8000
RMC-105-BV	60-600 FLOWMETER	(800)356-8000
RMC-105-SSV	60-600 FLOWMETER	(800)356-8000
RMC-106	100-1000 FLOWMETER	(800)356-8000
RMC-106-BV	100-1000 FLOWMETER	(800)356-8000
RMC-106-SSV	100-1000 FLOWMETER	(800)356-8000
RMC-107	120-1200 FLOWMETER	(800)356-8000
RMC-107-BV	120-1200 FLOWMETER	(800)356-8000
RMC-107-SSV	120-1200 FLOWMETER	(800)356-8000
RMC-108	180-1800 FLOWMETER	(800)356-8000
RMC-108-BV	180-1800 FLOWMETER	(800)356-8000
RMC-108-SSV	180-1800 FLOWMETER	(800)356-8000
RMC-121	1-10 FLOWMETER	(800)356-8000
RMC-121-BV	1-10 FLOWMETER	(800)356-8000
RMC-121-SSV	1-10 FLOWMETER	(800)356-8000
RMC-122	2-20 FLOWMETER	(800)356-8000
RMC-122-BV	2-20 FLOWMETER	(800)356-8000
RMC-122-SSV	2-20 FLOWMETER	(800)356-8000
RMC-123	3-30 FLOWMETER	(800)356-8000
RMC-123-BV	3-30 FLOWMETER	(800)356-8000
RMC-123-SSV	3-30 FLOWMETER	(800)356-8000
RMC-134	1-20 FLOWMETER	(800)356-8000
RMC-134-BV	1-20 FLOWMETER	(800)356-8000
RMC-134-SSV	1-20 FLOWMETER	(800)356-8000
RMC-135	8-90 FLOWMETER	(800)356-8000
RMC-135-BV	8-90 FLOWMETER	(800)356-8000
RMC-135-SSV	8-90 FLOWMETER	(800)356-8000
RMC-141	.1-1 FLOWMETER	(800)356-8000
RMC-141-BV	.1-1 FLOWMETER	(800)356-8000
RMC-141-SSV	.1-1 FLOWMETER	(800)356-8000
RMC-142	.2-2.2 FLOWMETER	(800)356-8000
RMC-142-BV	.2-2.2 FLOWMETER	(800)356-8000
RMC-142-SSV	.2-2.2 FLOWMETER	(800)356-8000
RMC-143	.3-3.6 FLOWMETER	(800)356-8000
RMC-143-BV	.3-3.6 FLOWMETER	(800)356-8000
RMC-143-SSV	.3-3.6 FLOWMETER	(800)356-8000
RMC-144	.6-6 FLOWMETER	(800)356-8000
RMC-144-BV	.6-6 FLOWMETER	(800)356-8000
RMC-144-SSV	.6-6 FLOWMETER	(800)356-8000
RMC-145	1-8 FLOWMETER	(800)356-8000
RMC-145-BV	1-8 FLOWMETER	(800)356-8000
RMC-145-SSV	1-8 FLOWMETER	(800)356-8000
VFA-1	.1-1.0 FLOWMETER	(800)356-8000

VFA-1-BV	.1-1 FLOWMETER	(800)356-8000
VFA-1-EC	.1-1 FLOWMETER	(800)356-8000
VFA-1-EC-SS	.1-1 FLOWMETER	(800)356-8000
VFA-1-SS	.1-1 FLOWMETER	(800)356-8000
VFA-1-SSV	.1-1 FLOWMETER	(800)356-8000
VFA-2	.2-2.0 FLOWMETER	(800)356-8000
VFA-21	.06-.5 FLOWMETER	(800)356-8000
VFA-21-BV	.06-0.5 FLOWMETER	(800)356-8000
VFA-21-EC	.06-0.5 FLOWMETER	(800)356-8000
VFA-21-EC-SS	.06-0.5 FLOWMETER	(800)356-8000
VFA-21-SS	.06-0.5 FLOWMETER	(800)356-8000
VFA-21-SSV	.06-0.5 FLOWMETER	(800)356-8000
VFA-22	.15-1.0 FLOWMETER	(800)356-8000
VFA-22-BV	.15-1 FLOWMETER	(800)356-8000
VFA-22-EC	.15-1 FLOWMETER	(800)356-8000
VFA-22-EC-SS	.15-1 FLOWMETER	(800)356-8000
VFA-22-SS	.15-1 FLOWMETER	(800)356-8000
VFA-22-SSV	.15-1 FLOWMETER	(800)356-8000
VFA-23	.6-5 FLOWMETER	(800)356-8000
VFA-23-BV	.6-5 FLOWMETER	(800)356-8000
VFA-23-EC	.6-5 FLOWMETER	(800)356-8000
VFA-23-EC-SS	.6-5 FLOWMETER	(800)356-8000
VFA-23-SS	.6-5 FLOWMETER	(800)356-8000
VFA-23-SSV	.6-5 FLOWMETER	(800)356-8000
VFA-24	1.0-10 FLOWMETER	(800)356-8000
VFA-24-BV	1-10 FLOWMETER	(800)356-8000
VFA-24-EC	1-10 FLOWMETER	(800)356-8000
VFA-24-EC-SS	1-10 FLOWMETER	(800)356-8000
VFA-24-SS	1-10 FLOWMETER	(800)356-8000
VFA-24-SSV	1-10 FLOWMETER	(800)356-8000
VFA-25	3.0-25 FLOWMETER	(800)356-8000
VFA-25-BV	3-25 FLOWMETER	(800)356-8000
VFA-25-EC	3-25 FLOWMETER	(800)356-8000
VFA-25-EC-SS	3-25 FLOWMETER	(800)356-8000
VFA-25-SS	3-25 FLOWMETER	(800)356-8000
VFA-25-SSV	3-25 FLOWMETER	(800)356-8000
VFA-26	6-50 FLOWMETER	(800)356-8000
VFA-26-BV	5-50 FLOWMETER	(800)356-8000
VFA-26-EC	5-50 FLOWMETER	(800)356-8000
VFA-26-EC-SS	5-50 FLOWMETER	(800)356-8000
VFA-26-SS	5-50 FLOWMETER	(800)356-8000
VFA-26-SSV	5-50 FLOWMETER	(800)356-8000
VFA-27	10-100 FLOWMETER	(800)356-8000
VFA-27-BV	10-100 FLOWMETER	(800)356-8000

VFA-27-EC	10-100 FLOWMETER	(800)356-8000
VFA-27-EC-SS	10-100 FLOWMETER	(800)356-8000
VFA-27-SS	10-100 FLOWMETER	(800)356-8000
VFA-27-SSV	10-100 FLOWMETER	(800)356-8000
VFA-2-BV	.2-2 FLOWMETER	(800)356-8000
VFA-2-EC	.2-2 FLOWMETER	(800)356-8000
VFA-2-EC-SS	.2-2 FLOWMETER	(800)356-8000
VFA-2-SS	.2-2 FLOWMETER	(800)356-8000
VFA-2-SSV	.2-2 FLOWMETER	(800)356-8000
VFA-3	.6-5.0 FLOWMETER	(800)356-8000
VFA-32	6-50 FLOWMETER	(800)356-8000
VFA-32-BV	6-50 FLOWMETER	(800)356-8000
VFA-32-EC	6-50 FLOWMETER	(800)356-8000
VFA-32-EC-SS	6-50 FLOWMETER	(800)356-8000
VFA-32-SS	6-50 FLOWMETER	(800)356-8000
VFA-32-SSV	6-50 FLOWMETER	(800)356-8000
VFA-33	10-100 FLOWMETER	(800)356-8000
VFA-33-BV	10-100 FLOWMETER	(800)356-8000
VFA-33-EC	10-100 FLOWMETER	(800)356-8000
VFA-33-EC-SS	10-100 FLOWMETER	(800)356-8000
VFA-33-SS	10-100 FLOWMETER	(800)356-8000
VFA-33-SSV	10-100 FLOWMETER	(800)356-8000
VFA-34	20-200 FLOWMETER	(800)356-8000
VFA-34-BV	20-200 FLOWMETER	(800)356-8000
VFA-34-EC	20-200 FLOWMETER	(800)356-8000
VFA-34-EC-SS	20-200 FLOWMETER	(800)356-8000
VFA-34-SS	20-200 FLOWMETER	(800)356-8000
VFA-34-SSV	20-200 FLOWMETER	(800)356-8000
VFA-3-BV	.6-5 FLOWMETER	(800)356-8000
VFA-3-EC	.6-5 FLOWMETER	(800)356-8000
VFA-3-EC-SS	.6-5 FLOWMETER	(800)356-8000
VFA-3-SS	.6-5 FLOWMETER	(800)356-8000
VFA-3-SSV	.6-5 FLOWMETER	(800)356-8000
VFA-4	1.0-10 FLOWMETER	(800)356-8000
VFA-41	.6-5 FLOWMETER	(800)356-8000
VFA-41-BV	.6-5 FLOWMETER	(800)356-8000
VFA-41-EC	.6-5 FLOWMETER	(800)356-8000
VFA-41-EC-SS	.6-5 FLOWMETER	(800)356-8000
VFA-41-SS	.6-5 FLOWMETER	(800)356-8000
VFA-41-SSV	.6-5 FLOWMETER	(800)356-8000
VFA-42	2-10 FLOWMETER	(800)356-8000
VFA-42-BV	2-10 FLOWMETER	(800)356-8000
VFA-42-EC	2-10 FLOWMETER	(800)356-8000
VFA-42-EC-SS	2-10 FLOWMETER	(800)356-8000

VFA-42-SS	2-10 FLOWMETER	(800)356-8000
VFA-42-SSV	2-10 FLOWMETER	(800)356-8000
VFA-43	3-20 FLOWMETER	(800)356-8000
VFA-43-BV	3-20 FLOWMETER	(800)356-8000
VFA-43-EC	3-20 FLOWMETER	(800)356-8000
VFA-43-EC-SS	3-20 FLOWMETER	(800)356-8000
VFA-43-SS	3-20 FLOWMETER	(800)356-8000
VFA-43-SSV	3-20 FLOWMETER	(800)356-8000
VFA-44	8-40 FLOWMETER	(800)356-8000
VFA-44-BV	8-40 FLOWMETER	(800)356-8000
VFA-44-EC-SS	8-40 FLOWMETER	(800)356-8000
VFA-44-SS	8-40 FLOWMETER	(800)356-8000
VFA-44-SSV	8-40 FLOWMETER	(800)356-8000
VFA-4-BV	1-10 FLOWMETER	(800)356-8000
VFA-4-EC	1-10 FLOWMETER	(800)356-8000
VFA-4-EC-SS	1-10 FLOWMETER	(800)356-8000
VFA-4-SS	1-10 FLOWMETER	(800)356-8000
VFA-4-SSV	1-10 FLOWMETER	(800)356-8000
VFA-5	2.0-20 FLOWMETER	(800)356-8000
VFA-5-BV	2-20 FLOWMETER	(800)356-8000
VFA-5-EC	2-20 FLOWMETER	(800)356-8000
VFA-5-EC-SS	2-20 FLOWMETER	(800)356-8000
VFA-5-SS	2-20 FLOWMETER	(800)356-8000
VFA-5-SSV	2-20 FLOWMETER	(800)356-8000
VFA-6	4.0-30 FLOWMETER	(800)356-8000
VFA-6-BV	4-30 FLOWMETER	(800)356-8000
VFA-6-EC	4-30 FLOWMETER	(800)356-8000
VFA-6-EC-SS	4-30 FLOWMETER	(800)356-8000
VFA-6-SS	4-30 FLOWMETER	(800)356-8000
VFA-6-SSV	4-30 FLOWMETER	(800)356-8000
VFA-7	5.0-50 FLOWMETER	(800)356-8000
VFA-7-BV	5-50 FLOWMETER	(800)356-8000
VFA-7-EC	5-50 FLOWMETER	(800)356-8000
VFA-7-EC-SS	5-50 FLOWMETER	(800)356-8000
VFA-7-SS	5-50 FLOWMETER	(800)356-8000
VFA-7-SSV	5-50 FLOWMETER	(800)356-8000
VFA-8	10-100 FLOWMETER	(800)356-8000
VFA-8-BV	10-100 FLOWMETER	(800)356-8000
VFA-8-EC	10-100 FLOWMETER	(800)356-8000
VFA-8-EC-SS	10-100 FLOWMETER	(800)356-8000
VFA-8-SS	10-100 FLOWMETER	(800)356-8000
VFA-8-SSV	10-100 FLOWMETER	(800)356-8000
VFA-9	20-200 FLOWMETER	(800)356-8000
VFA-9-BV	20-200 FLOWMETER	(800)356-8000

VFA-9-EC	20-200 FLOWMETER	(800)356-8000
VFA-9-EC-SS	20-200 FLOWMETER	(800)356-8000
VFA-9-SS	20-200 FLOWMETER	(800)356-8000
VFA-9-SSV	20-200 FLOWMETER	(800)356-8000
VFB-50	.3-3.0 FLOWMETER	(800)356-8000
VFB-50-BV	.3-3 FLOWMETER	(800)356-8000
VFB-50-EC	.3-3 FLOWMETER	(800)356-8000
VFB-50-SS	.3-3 FLOWMETER	(800)356-8000
VFB-51	2-20 FLOWMETER	(800)356-8000
VFB-51-BV	2-20 FLOWMETER	(800)356-8000
VFB-51-EC	2-20 FLOWMETER	(800)356-8000
VFB-51-EC-SS	2-20 FLOWMETER	(800)356-8000
VFB-51-SS	2-20 FLOWMETER	(800)356-8000
VFB-52	4-40 FLOWMETER	(800)356-8000
VFB-52-BV	4-40 FLOWMETER	(800)356-8000
VFB-52-EC	4-40 FLOWMETER	(800)356-8000
VFB-52-EC-SS	4-40 FLOWMETER	(800)356-8000
VFB-52-SS	4-40 FLOWMETER	(800)356-8000
VFB-53	10-100 FLOWMETER	(800)356-8000
VFB-53-BV	10-100 FLOWMETER	(800)356-8000
VFB-53-EC	10-100 FLOWMETER	(800)356-8000
VFB-53-EC-SS	10-100 FLOWMETER	(800)356-8000
VFB-53-SS	10-100 FLOWMETER	(800)356-8000
VFB-54	15-150 FLOWMETER	(800)356-8000
VFB-54-BV	15-150 FLOWMETER	(800)356-8000
VFB-54-EC	15-150 FLOWMETER	(800)356-8000
VFB-54-EC-SS	15-150 FLOWMETER	(800)356-8000
VFB-54-SS	15-150 FLOWMETER	(800)356-8000
VFB-55	20-200 FLOWMETER	(800)356-8000
VFB-55-BV	20-200 FLOWMETER	(800)356-8000
VFB-55-EC	20-200 FLOWMETER	(800)356-8000
VFB-55-EC-SS	20-200 FLOWMETER	(800)356-8000
VFB-55-SS	20-200 FLOWMETER	(800)356-8000
VFB-60	100-1000 FLOWMETER	(800)356-8000
VFB-60-BV	100-1000 FLOWMETER	(800)356-8000
VFB-60-EC	100-1000 FLOWMETER	(800)356-8000
VFB-60-SS	100-1000 FLOWMETER	(800)356-8000
VFB-65	.2-4 FLOWMETER	(800)356-8000
VFB-65-BV	.2-4 FLOWMETER	(800)356-8000
VFB-65-EC	.2-4 FLOWMETER	(800)356-8000
VFB-65-SS	.2-4 FLOWMETER	(800)356-8000
VFB-66	1-10 FLOWMETER	(800)356-8000
VFB-66-BV	1-10 FLOWMETER	(800)356-8000
VFB-66-EC	1-10 FLOWMETER	(800)356-8000

VFB-66-EC-SS	1-10 FLOWMETER	(800)356-8000
VFB-66-SS	1-10 FLOWMETER	(800)356-8000
VFB-67	1-20 FLOWMETER	(800)356-8000
VFB-67-BV	1-20 FLOWMETER	(800)356-8000
VFB-67-EC	1-20 FLOWMETER	(800)356-8000
VFB-67-SS	1-20 FLOWMETER	(800)356-8000
VFB-68	3-30 FLOWMETER	(800)356-8000
VFB-68-BV	3-30 FLOWMETER	(800)356-8000
VFB-68-EC	3-30 FLOWMETER	(800)356-8000
VFB-68-SS	3-30 FLOWMETER	(800)356-8000
VFB-69	4-40 FLOWMETER	(800)356-8000
VFB-69-BV	4-40 FLOWMETER	(800)356-8000
VFB-69-EC	4-40 FLOWMETER	(800)356-8000
VFB-69-SS	4-40 FLOWMETER	(800)356-8000
VFB-80	.5-12 FLOWMETER	(800)356-8000
VFB-80-BV	.5-12 FLOWMETER	(800)356-8000
VFB-80-EC	.5-12 FLOWMETER	(800)356-8000
VFB-80-SS	.5-12 FLOWMETER	(800)356-8000
VFB-81	.6-60 FLOWMETER	(800)356-8000
VFB-81-BV	6-60 FLOWMETER	(800)356-8000
VFB-81-EC	6-60 FLOWMETER	(800)356-8000
VFB-81-SS	6-60 FLOWMETER	(800)356-8000
VFB-82	2-30 FLOWMETER	(800)356-8000
VFB-82-BV	2-30 FLOWMETER	(800)356-8000
VFB-82-EC	2-30 FLOWMETER	(800)356-8000
VFB-82-SS	2-30 FLOWMETER	(800)356-8000
VFB-90	.3-3.0 FLOWMETER	(800)356-8000
VFB-90-BV	.3-3 FLOWMETER	(800)356-8000
VFB-90-EC	.3-3 FLOWMETER	(800)356-8000
VFB-90-SS	.3-3 FLOWMETER	(800)356-8000
VFB-91	1-10 FLOWMETER	(800)356-8000
VFB-91-BV	1-10 FLOWMETER	(800)356-8000