

CAPP/USA ● 201 Marple Ave. Clifton Heights, Pa 19018

Call CAPP/USA Today for Pricing and Availability! 1-800-356-8000

Visit us on the web at www.cappusa.com

PART NO.	MANUFACTURER	DESCRIPTION	PHONE
4-96	FIREYE	Phototube, type 2022 (old P/N 925), 47FU9.	(800)356-8000
4-98	FIREYE	Vacuum tube (12H6) for 26RJ8, 26SJ5, 26UJ5, 29RF5-1000 Series.	(800)356-8000
000117-028	FIREYE	6.3 volt lamp.	(800)356-8000
000710-023	FIREYE	Test cable for use with C9501, C9502, C9507, and C9707 scanners.	(800)356-8000
002608-001	FIREYE	Flange gasket for 65UV5.	(800)356-8000
003181-001	FIREYE	Relay (K1), R9001 controller, Vigitron number 123-10.	(800)356-8000
003183-001	FIREYE	Relay (K3), R9001 controller.	(800)356-8000
003263-001	FIREYE	Inner carrier (72"), used with C9503M1032, C9503P5001, C9503P5011, C9504M1041, C9504P5001, and C9504P5011.	(800)356-8000
003263-002	FIREYE	Inner carrier (85"), used with C9503M1034, C9503P5012, C9503P5022, C9504M1043, C9504P5012, and C9504P5022.	(800)356-8000
003263-003	FIREYE	Inner carrier (120"), used with C9504P5034 and C9504P5044.	(800)356-8000
003263-004	FIREYE	Inner carrier (100"), used with C9503M1039, C9503P5023, C9503P5033, C9504M1047, C9504P5023, and C9504P5033.	(800)356-8000
003265-001	FIREYE	Outer carrier (72"), used with C9503M1032, C9503P5001, C9503P5011, C9504M1041, C9504P5001, and C9504P5011.	(800)356-8000
003265-002	FIREYE	Outer carrier (85"), used with C9503M1034, C9503P5012, C9503P5022, C9504M1043, C9504P5012, and C9504P5022.	(800)356-8000
003265-003	FIREYE	Outer carrier (120"), used with C9504P5034 and C9504P5044.	(800)356-8000
003265-004	FIREYE	Outer carrier (100"), used with C9503M1039, C9503P5023, C9503P5033, C9504M1047, C9504P5023, and C9504P5033.	(800)356-8000
003324-001	FIREYE	Fused silica lens.	(800)356-8000
101-78	FIREYE	Diode for use with 45UV5 and 45RM scanners.	(800)356-8000
101806-001	FIREYE	Metal sheathed glass fiber optic bundle (72") used with C9503M, C9503P, and C9504M.	(800)356-8000
101806-002	FIREYE	Metal sheathed glass fiber optic bundle (85") used with C9503M, C9503P, and C9504M.	(800)356-8000
101806-003	FIREYE	Metal sheathed glass fiber optic bundle (120") used with C9503M, C9503P, and C9504M.	(800)356-8000
101806-004	FIREYE	Metal sheathed glass fiber optic bundle (100") used with C9503M, C9503P, and C9504M.	(800)356-8000
101875-001	FIREYE	Flame meter, OBSOLETE, no replacement	(800)356-8000
10-211	FIREYE	Quick Disconnect Plug, male, 1/2" NPT	(800)356-8000
102531-001	FIREYE	Metal sheathed quartz fiber optic bundle (72") used with C9504P and 61-6694.	(800)356-8000
102531-002	FIREYE	Metal sheathed quartz fiber optic bundle (85") used with C9504P and 61-6694.	(800)356-8000
102531-003	FIREYE	Metal sheathed quartz fiber optic bundle (120") used with C9504P and 61-6694.	(800)356-8000
102531-004	FIREYE	Metal sheathed quartz fiber optic bundle (100") used with C9504P and 61-6694.	(800)356-8000
104-15	FIREYE	Vibratory weatherproof horn for FE-5.	(800)356-8000
104-15	FIREYE	Vibratory weatherproof horn for FE-5.	(800)356-8000
104-7	FIREYE	3 inch bell for FE-5.	(800)356-8000
104-7	FIREYE	3 inch bell for FE-5.	(800)356-8000
124-13	FIREYE	"O" ring used in 60-1199 union.	(800)356-8000
124-14	FIREYE	"O" ring used in 60-801, 60-1257, 60-1290.	(800)356-8000
129-127-6	FIREYE	Female quick disconnect for 45RM4/45FS1/45UVFS1.	(800)356-8000
129-145-1	FIREYE	Remote display (ED510) mounting kit with 4' cable.	(800)356-8000
129-145-2	FIREYE	Remote display (ED510) mounting kit with 8' cable.	(800)356-8000
129-145-3	FIREYE	Remote display (ED510) mounting kit with 2' cable.	(800)356-8000

129-152	FIREYE	Ferrite core for ED512 / ED580 cables.	(800)356-8000
129-161	FIREYE	HEI Ceramic Spark Gap Replacement Kit	(800)356-8000
129-164	FIREYE	Quick disconnect kit for InSight Scanner - straight.	(800)356-8000
129-164C	FIREYE	Quick disconnect kit for InSight Scanner - straight, with flexible conduit adapter.	(800)356-8000
129-164R	FIREYE	Quick disconnect kit for InSight Scanner - 90 degree angle.	(800)356-8000
129-164RC	FIREYE	Quick disconnect kit for InSight Scanner - 90 degree angle, with flexible conduit adapter..	(800)356-8000
129-168-1	FIREYE	Mounting flange kit for -CEX version InSight scanners, 1" NPT	(800)356-8000
129-168-2	FIREYE	Mounting flange kit for -CEX version InSight scanners, 1" BSP	(800)356-8000
129-170-1	FIREYE	Keypad and bezel kit for InSight scanners.	(800)356-8000
129-172	FIREYE	Spring retainer for MBPF-100S flame sensing modules.	(800)356-8000
129-2	FIREYE	Spare tube kit (12SN7, 12SL7, 12H6, NE-51) for 26SJ5, 26RJ8, 26UJ5, 29RF5.	(800)356-8000
129-52	FIREYE	Package of 5 - 3 AG, 250 volt, 6 amp fuses for 26RJ8, 26SJ5, 29RF5-6000 Series.	(800)356-8000
129-54	FIREYE	Package of 5 - 3 AG, 250 volt, 1 amp fuses for 57AV3, 57AV4, 57AV7.	(800)356-8000
129-62	FIREYE	Spare tube kit (12AX7, 12BH7A) for 26SJ5, 26RJ8, 29RF5-6000 Series.	(800)356-8000
129-72	FIREYE	40% calibration screen for 27RL1.	(800)356-8000
13-382	FIREYE	Rear Flange Clamp	(800)356-8000
1-432-4	FIREYE	Switch housing.	(800)356-8000
145-18	FIREYE	HEI Spark Tip 8" (used with Ignitor lengths 036 and shorter)	(800)356-8000
145-19	FIREYE	HEI Spark Tip 27" (used with Ignitor lengths 038 and longer)	(800)356-8000
148-21	FIREYE	In-Line Pressure Tester (fuel gas)	(800)356-8000
16-102	FIREYE	Retaining ring for 45UV2-1020.	(800)356-8000
16-103	FIREYE	Grommet for 45RM1, 45RM2, 45UV2, 45UV5.	(800)356-8000
19-117	FIREYE	Oxygen probe filter assembly.	(800)356-8000
192SU3-2120	FIREYE	19" adaptor (120 VAC) to retrofit 25SU3-2000, -2100 to 60-1706 rack.	(800)356-8000
192SU3-2220	FIREYE	19" adaptor (220 VAC) to retrofit 25SU3-2000, -2100 to 60-1706 rack.	(800)356-8000
19-30	FIREYE	Pyrex window for 60-801 union.	(800)356-8000
19MPS-2000	FIREYE	Multi-purpose power supply for 25SU3-2000, -2100 and associated high and low voltage scanners.	(800)356-8000
19UVPS-2120	FIREYE	120 VAC, 19" power supply for 45UV5, 45RM1, and 45RM2 scanners.	(800)356-8000
19UVPS-2220	FIREYE	220 VAC, 19" power supply for 45UV5, 45RM1, and 45RM2 scanners.	(800)356-8000
22-27	FIREYE	Battery for EP340. Panasonic BR2330, 3 V lithium.	(800)356-8000
23-121	FIREYE	Fuse for 60-1706 rack.	(800)356-8000
23-173	FIREYE	Replacement fuse for 25SU3-5166, -5168. 1.0 amp.	(800)356-8000
23-176	FIREYE	Replaceable fuse for M-Series II programmer modules. Littlefuse 22508, 2 AG, 8 amp, 125 V.	(800)356-8000
23-182	FIREYE	Replacement fuse for 25SU3-2000, 1.5 amp input power (date code 9706 or later) and flame relay.	(800)356-8000
23-183	FIREYE	Replaceable fuse for MP100E programmer module. Littlefuse 22903.5, 3.5 amp, 250 V.	(800)356-8000
23-184	FIREYE	Replacement fuse for 19UVPS and 192SU3.	(800)356-8000
23-194	FIREYE	Replacement fuse for 19MPS.	(800)356-8000
23-197	FIREYE	Replaceable fuse for MicroM MEC120 chassis. Wickman fuse #19373-071-K, 10 amp, 250 V.	(800)356-8000
23-198	FIREYE	Replaceable fuse for MicroM MEC230 chassis. Wickman fuse #19373-062-K, 4 amp, 250 V.	(800)356-8000

23-90	FIREYE	Replacement fuse for 25SU3-4169T, -5172, -5173. 1.0 amp.	(800)356-8000
23-93	FIREYE	Replacement fuse for EB342 (3 amp).	(800)356-8000
23-93	FIREYE	Replacement fuse for EB342 (3 amp).	(800)356-8000
25SU3-2000	FIREYE	19 inch rack amplifier, 24 VAC/24VDC. CE Approved.	(800)356-8000
25SU3-2100	FIREYE	19 inch rack amplifier, 24 VAC/24VDC.	(800)356-8000
25SU3-4169T	FIREYE	Flame amplifier, 2 inputs, marginal alarm, 24 VDC, high discrimination.	(800)356-8000
25SU3-4170	FIREYE	Obsolete. Replace with 25SU3-2000 and 19SU3-2120	(800)356-8000
25SU3-4171	FIREYE	Obsolete. Replace with 25SU3-2000 and 19SU3-2220	(800)356-8000
25SU3-4172	FIREYE	Obsolete. Replace with 25SU3-2000 and 19SU3-2120	(800)356-8000
25SU3-5166	FIREYE	Flame amplifier, 120/230 VAC, high discrimination. Consists of 60-2203-2, 60-2207-2, and 60-2301.	(800)356-8000
25SU3-5166D	FIREYE	Flame amplifier, 120/230 VAC, high discrimination. Consists of 60-2203-2, 60-2207-2, 60-2301, and 60-2205.	(800)356-8000
25SU3-5167	FIREYE	Flame amplifier, 120/230 VAC, high discrimination. No self-checking. Consists of 60-2203-3, 60-2207-2, and 60-2301.	(800)356-8000
25SU3-5168	FIREYE	Flame amplifier, 120/230 VAC, high sensitivity. Consists of 60-2203-2, 60-2207-1, and 60-2301.	(800)356-8000
25SU3-5172	FIREYE	Obsolete. Replace with 25SU3-2000 and 19SU3-2120	(800)356-8000
25SU3-5173	FIREYE	Obsolete. Replace with 25SU3-2000 and 19SU3-2220	(800)356-8000
25SU5-5011	FIREYE	Flame amplifier, 120 VAC, high sensitivity. Consists of 60-2204-2, 60-2207-1, and 60-2301.	(800)356-8000
25SU5-5012	FIREYE	Flame amplifier, 120 VAC, high discrimination. Consists of 60-2204-2, 60-2207-2, and 60-2301.	(800)356-8000
25SU5-5013	FIREYE	Flame amplifier, 120 VAC, high sensitivity, no hysteresis. Consists of 60-2204-2, 60-2207-3, and 60-2301.	(800)356-8000
27-101	FIREYE	Type 1815, 12 V, .2 amp lamp for 27VH6.	(800)356-8000
27-102	FIREYE	Type NE-51 neon lamp (Westinghouse) for 47FU9, 26RJ8, 26SJ5, 29RF5.	(800)356-8000
27-175	FIREYE	Replace with 27-431	(800)356-8000
27-196	FIREYE	MB indicating light assembly - amber.	(800)356-8000
27-197	FIREYE	MB indicating light assembly - red.	(800)356-8000
27-198	FIREYE	MB indicating light assembly - white.	(800)356-8000
27-208-1	FIREYE	Alarm light for 30CK2.	(800)356-8000
27-431	FIREYE	Type 1434 lamp for 44DU2, 27RL1.	(800)356-8000
27-55	FIREYE	44 Miniature bayonet lamp for 51CQ1-1006.	(800)356-8000
27-61	FIREYE	3.2 volt mazda lamp (No. 45) for 51CP1, 51CQ1-1000, -1001.	(800)356-8000
27PH7-1000	FIREYE	FE-5 smoke control - surface mount.	(800)356-8000
27PH7-1001	FIREYE	FE-5 smoke control - flush mount.	(800)356-8000
27PH7-1002	FIREYE	FE-5 smoke control - surface mount (230 VAC).	(800)356-8000
27RL1-1001	FIREYE	FE-4 smoke control, 120 VAC, 50/60 Hz.	(800)356-8000
27RL1-1002	FIREYE	FE-4 smoke control, 230 VAC.	(800)356-8000
29-184	FIREYE	Gasket for 45UV3-1050 (front side).	(800)356-8000
29-222	FIREYE	Gasket for 61-3689.	(800)356-8000
29-223	FIREYE	Smoke system bellows for 27RL1.	(800)356-8000
29-243	FIREYE	Gasket for 61-4183.	(800)356-8000
29-248	FIREYE	Flange gasket for 45RM, 45UV5.	(800)356-8000
29-403	FIREYE	Rear Flange Gasket	(800)356-8000
29-414	FIREYE	Oxygen probe flange gasket	(800)356-8000
30-187	FIREYE	Bushing for 60-1257, 60-1290 unions.	(800)356-8000
30-188	FIREYE	Bushing for 60-801.	(800)356-8000
30-189	FIREYE	Bushing for 60-1199 union.	(800)356-8000
30CK2-1000	FIREYE	FE-4 auxiliary control meter, 120 VAC.	(800)356-8000
30CK2-1001	FIREYE	FE-4 auxiliary control meter, 230 VAC.	(800)356-8000
30CK6-1000	FIREYE	FE-4 auxiliary control meter/reset, 120 VAC.	(800)356-8000
31-150	FIREYE	Neoprene gasket for 44DU2-1000, 47EM4-1000.	(800)356-8000
3-1705	FIREYE	Engraving plate for 53SE annunciators.	(800)356-8000
317-109	FIREYE	Nylon hose connector.	(800)356-8000

317-115	FIREYE	Female hose connector for inlet sample port.	(800)356-8000
317-430	FIREYE	Particle filter (Series 1000 only).	(800)356-8000
318-433	FIREYE	Probe cone (threaded) w/ screw.	(800)356-8000
319-211	FIREYE	O-ring seal.	(800)356-8000
33-414	FIREYE	Weatherproof boot for button. Use with 53SE Sentryp annunciator.	(800)356-8000
33-426	FIREYE	Captive nut for wiring base (60-1386, 60-1466).	(800)356-8000
33-510	FIREYE	Oxygen probe sealing nut.	(800)356-8000
34-115	FIREYE	Retaining ring for 45UV3-1050.	(800)356-8000
34-181	FIREYE	Orifice retaining ring (set of 2).	(800)356-8000
34-215	FIREYE	Retainer for quartz window for 60-1199.	(800)356-8000
35-127-1	FIREYE	Heat insulator, 1" NPT for 45UV5.	(800)356-8000
35-127-3	FIREYE	Heat insulator, 1" BSP for 45UV5.	(800)356-8000
35-128	FIREYE	NPT flange, painted grey.	(800)356-8000
35-130	FIREYE	BSP flange, painted grey.	(800)356-8000
35-200	FIREYE	1 inch WYE (NPT).	(800)356-8000
35-201	FIREYE	1 inch close nipple (NPT).	(800)356-8000
35-202	FIREYE	3/8 inch plug (NPT).	(800)356-8000
35-239	FIREYE	1 inch WYE (BSP).	(800)356-8000
35-240	FIREYE	1 inch close nipple (BSP).	(800)356-8000
35-246	FIREYE	NPT flange, painted black.	(800)356-8000
35-247	FIREYE	BSP flange, painted black.	(800)356-8000
35-306	FIREYE	Barbed fitting, pistol grip.	(800)356-8000
35-309	FIREYE	Close Nipple, 1/2" NPT stainless steel	(800)356-8000
35-318-1	FIREYE	Mounting flange for 85UVF scanner, 1" NPT	(800)356-8000
35-318-2	FIREYE	Mounting flange for 85UVF scanner, 1" BSP	(800)356-8000
35-319	FIREYE	Insulated coupling, 1/2 NPT nylon	(800)356-8000
35-335	FIREYE	Oxygen probe calibration nipple.	(800)356-8000
35-69	FIREYE	Heat insulator, 1/2" NPT connector for 48PT, UV1A.	(800)356-8000
35-75	FIREYE	Water cooled adapter for 48PT, UV1A	(800)356-8000
36-935	FIREYE	Scanner support (max temp @ 200F)	(800)356-8000
36-936	FIREYE	Scanner support (max temp @ 475F)	(800)356-8000
38-30	FIREYE	Meter for 27VH6.	(800)356-8000
38-33	FIREYE	Panel voltmeter, 0-150 VDC, 2 1/4" for 26RJ8, 26SJ5, 29RF5.	(800)356-8000
38-42	FIREYE	Test meter (multimeter).	(800)356-8000
38-53	FIREYE	Panel voltmeter 0-25 VDC, 2 1/4 inches square.	(800)356-8000
38-54	FIREYE	Flame meter, 2 1/4 inch square, 0-3 VDC, 20K ohm/volt.	(800)356-8000
38-55	FIREYE	Flame meter, horizontal, 0-3 VDC, 20K ohm/volt.	(800)356-8000
38-56	FIREYE	Flame meter, vertical, 0-3 VDC, 20K ohm/volt.	(800)356-8000
38-58	FIREYE	Panel voltmeter, 0-15 VDC, 2 1/2 inches square.	(800)356-8000
38-59	FIREYE	Panel voltmeter, 0-14 VAC, 2 1/2 inches for 30CK6.	(800)356-8000
38-62	FIREYE	Flame meter, horizontal, 0-3 VDC, 20K ohm/volt.	(800)356-8000
38-71	FIREYE	30% meter for 27RL1.	(800)356-8000
38-74	FIREYE	Meter for 27PH7-1000.	(800)356-8000
38-88	FIREYE	Analog bar graph meter (LED), 0-3 VDC.	(800)356-8000
38-96	FIREYE	Flame meter, 2 1/4 inch square, 4-20 mA.	(800)356-8000
38-97	FIREYE	Flame meter, horizontal, 4-20 mA.	(800)356-8000
403-415	FIREYE	Rechargeable battery.	(800)356-8000
404-536	FIREYE	Fuse 250V, 2 amp	(800)356-8000
405-109	FIREYE	Thermal paper roll (Series 2000 only).	(800)356-8000
405-216	FIREYE	Firetron LCD display w/o keypad.	(800)356-8000
405-405	FIREYE	Draft sensor.	(800)356-8000
4-100	FIREYE	Vacuum tube (12SL7GT) for 26RJ8, 26SJ5, 29RF5-1000 Series.	(800)356-8000
4-128-1	FIREYE	Firetron cell for 48PT1 only.	(800)356-8000
4-204	FIREYE	Vacuum tube (12SBH7A) for 26RJ8, 26SJ5, 29RF5, all 5000 and 6000 Series.	(800)356-8000
4-230	FIREYE	Phototube - 922 for 45AM1/45CM1.	(800)356-8000
4-245	FIREYE	Replace with 4-314-1	(800)356-8000
4-263-1	FIREYE	Firetron cell for 48PT2 only.	(800)356-8000

4-290-1	FIREYE	Replacement UV tube for 65UV5.	(800)356-8000
43-113	FIREYE	Chart paper (1 roll) for 55AF1-1002.	(800)356-8000
43-115	FIREYE	Chart paper (1 roll) for 55AF1-430.	(800)356-8000
43-125	FIREYE	Chart paper (1 roll) for 55AF2-1000.	(800)356-8000
4-314-1	FIREYE	UV tube for 45UV5-1005 thru -1009, 45UV2, 45UV3.	(800)356-8000
43-20	FIREYE	Recorder chart (100/pkg) for 55AK1.	(800)356-8000
4-320-1	FIREYE	UV tube for 45UV5 scanners.	(800)356-8000
43-21	FIREYE	Recorder chart paper (100/pkg) for 57AL1.	(800)356-8000
43-22	FIREYE	Recorder chart (100/pkg) for 55AM1.	(800)356-8000
44DU2-1000	FIREYE	FE-5 light source.	(800)356-8000
45CM1-1000	FIREYE	Photocell scanner with filter.	(800)356-8000
45CM1-1000Y	FIREYE	Photocell scanner without filter.	(800)356-8000
45FS1-1000	FIREYE	Signature scanner, 1 inch NPT mount, 24 VDC. Use with 25SU3 and 25SU5.	(800)356-8000
45FS1-1000CEX	FIREYE	Cenelec EExd IIC explosion proof housing with 45FS1-1000 scanner.	(800)356-8000
45FS1-1000EX	FIREYE	NEMA 7, Class 1, Div 1 and 2, Groups C and D; Class 2, Div 1 and 2, Groups E, F, and G explosion proof housing with 45FS1-1000 scanner.	(800)356-8000
45FS1-1001	FIREYE	Signature scanner, 1 inch BSP mount, 24 VDC. Use with 25SU3 and 25SU5.	(800)356-8000
45RM1-1001	FIREYE	Infrared self-checking, BGC, 1 inch NPT mount, 50/60 Hz. Use with 25SU3 and 25SU5.	(800)356-8000
45RM1-1001EX	FIREYE	NEMA 7, Class 1, Div 1 and 2, Groups C and D; Class 2, Div 1 and 2, Groups E, F, and G explosion proof housing with 45RM1-1000 scanner.	(800)356-8000
45RM1-1003	FIREYE	Same as 45RM1-1001 but with 1 inch BSP mount.	(800)356-8000
45RM2-1000	FIREYE	Infrared self-checking, BGC, 1 inch NPT mount, 50/60 Hz. Use with 25SU3 and 25SU5.	(800)356-8000
45RM2-1000EX	FIREYE	NEMA 7, Class 1, Div 1 and 2, Groups C and D; Class 2, Div 1 and 2, Groups E, F, and G explosion proof housing with 45RM2-1000 scanner.	(800)356-8000
45RM2-1001	FIREYE	Same as 45RM2-1000 but with 1 inch BSP mount.	(800)356-8000
45RM3-1000	FIREYE	OBSOLETE. Use 45RM4-1000	(800)356-8000
45RM3-1001	FIREYE	OBSOLETE. Use 45RM4-1001	(800)356-8000
45RM4-1000	FIREYE	Infrared self-checking, BGC, 1 inch NPT mount, 24 VDC, adjustable frequency, adjustable gain. Use with 25SU3 and 25SU5.	(800)356-8000
45RM4-1000CEX	FIREYE	Cenelec EExd IIC explosion proof housing with 45RM4-1000 scanner.	(800)356-8000
45RM4-1000EX	FIREYE	NEMA 7, Class 1, Div 1 and 2, Groups C and D; Class 2, Div 1 and 2, Groups E, F, and G explosion proof housing with 45RM4-1000 scanner.	(800)356-8000
45RM4-1001	FIREYE	Same as 45RM4-1000 but with 1 inch BSP mount.	(800)356-8000
45UV2-1020	FIREYE	UV scanner, 1" NPT, 8' leads, 60 Hz, use with P-Series.	(800)356-8000
45UV3-1050	FIREYE	UV scanner, 3/4" mount, 4-314-1 UV tube.	(800)356-8000
45UV5-1000	FIREYE	UV self-checking, 1 inch NPT mount, 60 Hz. Use with 25SU3 and 25SU5.	(800)356-8000
45UV5-1000CEX	FIREYE	Cenelec EExd IIC explosion proof housing with 45UV5-1000 scanner.	(800)356-8000
45UV5-1000EX	FIREYE	NEMA 7, Class 1, Div 1 and 2, Groups C and D; Class 2, Div 1 and 2, Groups E, F, and G explosion proof housing with 45UV5-1000 scanner.	(800)356-8000
45UV5-1005	FIREYE	UV self-check scanner, 1" NPT, 8' lead, use with P-Series or MicroM / E-Series with 61-5745-3 drive circuit.	(800)356-8000
45UV5-1006	FIREYE	UV self-check scanner, 8' lead, use with D-Series 72DUVS1.	(800)356-8000
45UV5-1007	FIREYE	UV self-check scanner, 1" BSP, 230 VAC shutter. Use with 72DUVS1T, 72DUVS4 or EUVS4.	(800)356-8000
45UV5-1007CEX	FIREYE	Cenelec EExd IIC explosion proof housing with 45UV5-1007 scanner.	(800)356-8000

45UV5-1007EX	FIREYE	NEMA 7, Class 1, Div 1 and 2, Groups C and D; Class 2, Div 1 and 2, Groups E, F, and G explosion proof housing with 45UV5-1007 scanner.	(800)356-8000
45UV5-1007W	FIREYE	Weatherproof version of 45UV5-1007. Meets NEMA 4 rating.	(800)356-8000
45UV5-1008	FIREYE	UV self-check scanner, 1" BSP, 120 VAC shutter. Use with 72DUVS4, 72DUVS1T, or EUVS4.	(800)356-8000
45UV5-1009	FIREYE	UV self-check scanner, 1" NPT, 120 VAC shutter. Use with 72DUVS4, 72DUVS1T, or EUVS4.	(800)356-8000
45UV5-1009CEX	FIREYE	Cenelec EExd IIC explosion proof housing with 45UV5-1009 scanner.	(800)356-8000
45UV5-1009EX	FIREYE	NEMA 7, Class 1, Div 1 and 2, Groups C and D; Class 2, Div 1 and 2, Groups E, F, and G explosion proof housing with 45UV5-1009 scanner.	(800)356-8000
45UV5-1009W	FIREYE	Weatherproof version of 45UV5-1009. Meets NEMA 4 rating.	(800)356-8000
45UV5-1010	FIREYE	UV self-checking, 1 inch BSP mount, 60 Hz. Use with 4169T, code 18 and higher.	(800)356-8000
45UV5-1101	FIREYE	UV self-checking, 1 inch BSP mount, 50 Hz. Use with 25SU3 and 25SU5.	(800)356-8000
45UV5-1101CEX	FIREYE	Cenelec EExd IIC explosion proof housing with 45UV5-1101 scanner.	(800)356-8000
45UV5-1101EX	FIREYE	NEMA 7, Class 1, Div 1 and 2, Groups C and D; Class 2, Div 1 and 2, Groups E, F, and G explosion proof housing with 45UV5-1101 scanner.	(800)356-8000
45UV5-1103	FIREYE	UV self-checking, 1 inch NPT mount, 50 Hz. Use with 25SU3 and 25SU5.	(800)356-8000
45UV5-1105	FIREYE	UV self-check scanner, 1" BSP, 8' lead, use with P-Series.	(800)356-8000
45UVFS1-1000	FIREYE	Ultraviolet Signature scanner, 1 inch NPT mount, 24 VDC. Use with 25SU3 and 25SU5.	(800)356-8000
45UVFS1-1000CEX	FIREYE	Cenelec EExd IIC explosion proof housing with 45UVFS1-1000 scanner.	(800)356-8000
45UVFS1-1000EX	FIREYE	NEMA 7, Class 1, Div 1 and 2, Groups C and D; Class 2, Div 1 and 2, Groups E, F, and G explosion proof housing with 45UVFS1-1000 scanner.	(800)356-8000
45UVFS1-1001	FIREYE	Ultraviolet Signature scanner, 1 inch BSP mount, 24 VDC. Use with 25SU3 and 25SU5.	(800)356-8000
46-179	FIREYE	Lens for 45UVFS1	(800)356-8000
46-185	FIREYE	Magnifying Lens Assembly	(800)356-8000
46-186	FIREYE	Magnifying Lens	(800)356-8000
46-187	FIREYE	Non-Magnifying Lens	(800)356-8000
46-38	FIREYE	Lens for 45UV5, 45UVFS1.	(800)356-8000
46-56	FIREYE	Quartz magnifying lens for 45UV3. 3/4".	(800)356-8000
46-58	FIREYE	Quartz lens for 60-1290 union (1/2").	(800)356-8000
46-87	FIREYE	Lens for 45RM1, 45RM2.	(800)356-8000
47EM4-1000	FIREYE	FE-5 receiver.	(800)356-8000
48-1738	FIREYE	Captive screw, D-Series	(800)356-8000
48-1805	FIREYE	Mounting screw for E100, E200, E340, 25SU5-5011, -5166.	(800)356-8000
48-1805	FIREYE	Mounting screw for E100, E200, E340, 25SU5-5011, -5166.	(800)356-8000
48-1836	FIREYE	Mounting screw for E110, E210, E211, E120.	(800)356-8000
48PT1-1003	FIREYE	Infrared scanner, 8', straight head, P-Series.	(800)356-8000
48PT1-1007	FIREYE	Infrared scanner, 4', straight head, P-Series.	(800)356-8000
48PT1-9003	FIREYE	Infrared scanner, 8', 90 degree head, P-Series.	(800)356-8000
48PT1-9007	FIREYE	Infrared scanner, 4', 90 degree head, P-Series.	(800)356-8000
48PT1-9007W	FIREYE	Infrared scanner, 4', 90 degree head, water resistant, P-Series.	(800)356-8000
48PT2-1003	FIREYE	Infrared scanner, 8', straight head, D-Series, E-Series, MicroM	(800)356-8000
48PT2-1007	FIREYE	Infrared scanner, 4', straight head, D-Series, E-Series, MicroM	(800)356-8000

48PT2-9003	FIREYE	Infrared scanner, 8', 90 degree head, D-Series, E-Series, MicroM	(800)356-8000
48PT2-9007	FIREYE	Infrared scanner, 4', 90 degree head, D-Series, E-Series, MicroM	(800)356-8000
48PT2-9007W	FIREYE	Infrared scanner, 4', 90 degree head, water resistant, D-Series, E-Series, MicroM	(800)356-8000
48PT2-CEX	FIREYE	Cenelec EExd IIC explosion proof housing with 48PT2 scanner.	(800)356-8000
500287-001	FIREYE	18 AWG, 600 volt cable used with DE4599 and DE4360 Series.	(800)356-8000
5-185	FIREYE	Ignition transformer, 115 VAC/10K VAC out.	(800)356-8000
53-121	FIREYE	2 through 10 orifice set for scanners.	(800)356-8000
53SE2-1000	FIREYE	Six point "first out" indicator, pilot or main flame annunciator, four point system indicator.	(800)356-8000
53SE3-1000	FIREYE	Twelve point "first out" annunciator.	(800)356-8000
5-563	FIREYE	HEI Power Pack Transformer	(800)356-8000
55AF1-1002	FIREYE	FE-4 smoke recorder, 120 VAC.	(800)356-8000
55AF2-1000	FIREYE	FE-5 smoke recorder, 120 VAC.	(800)356-8000
57AV4-5001	FIREYE	Tester, 120 VAC, for use with C, D-Series and FLAME-MONITOR.	(800)356-8000
57AV7-1000	FIREYE	Tester, 120 VAC, for use with M-Series, M-Series II, MicoM.	(800)356-8000
57AV7-1000	FIREYE	Tester, 120 VAC, for use with M-Series, M-Series II, MicoM.	(800)356-8000
59-221	FIREYE	Fireye scanner cable, 4 wire (1 shielded). Use 59-470.	(800)356-8000
59-462	FIREYE	Fireye scanner cable, 5 wire (1 shielded). Use 59-470.	(800)356-8000
59-470	FIREYE	Fireye scanner cable, 6 wire.	(800)356-8000
59-470	FIREYE	Fireye scanner cable, 6 wire.	(800)356-8000
59-470-010	FIREYE	59-470 scanner cable factory wired with 129-127-6 quick disconnect, 10 feet.	(800)356-8000
59-470-020	FIREYE	59-470 scanner cable factory wired with 129-127-6 quick disconnect, 20 feet.	(800)356-8000
59-470-040	FIREYE	59-470 scanner cable factory wired with 129-127-6 quick disconnect, 40 feet.	(800)356-8000
59-470-050	FIREYE	59-470 scanner cable factory wired with 129-127-6 quick disconnect, 50 feet.	(800)356-8000
59-470-060	FIREYE	59-470 scanner cable factory wired with 129-127-6 quick disconnect, 60 feet.	(800)356-8000
59-470-080	FIREYE	59-470 scanner cable factory wired with 129-127-6 quick disconnect, 80 feet.	(800)356-8000
59-470-100	FIREYE	59-470 scanner cable factory wired with 129-127-6 quick disconnect, 100 feet.	(800)356-8000
59-470-120	FIREYE	59-470 scanner cable factory wired with 129-127-6 quick disconnect, 120 feet.	(800)356-8000
59-470-140	FIREYE	59-470 scanner cable factory wired with 129-127-6 quick disconnect, 140 feet.	(800)356-8000
59-470-160	FIREYE	59-470 scanner cable factory wired with 129-127-6 quick disconnect, 160 feet.	(800)356-8000
59-470-180	FIREYE	59-470 scanner cable factory wired with 129-127-6 quick disconnect, 180 feet.	(800)356-8000
59-470-200	FIREYE	59-470 scanner cable factory wired with 129-127-6 quick disconnect, 200 feet.	(800)356-8000
59-470-250	FIREYE	59-470 scanner cable factory wired with 129-127-6 quick disconnect, 250 feet.	(800)356-8000
59-471	FIREYE	Fireye scanner cable, 8 wire.	(800)356-8000
59-471-010	FIREYE	59-471 scanner cable factory wired with 129-127-6 quick disconnect, 10 feet.	(800)356-8000
59-471-020	FIREYE	59-471 scanner cable factory wired with 129-127-6 quick disconnect, 20 feet.	(800)356-8000
59-471-040	FIREYE	59-471 scanner cable factory wired with 129-127-6 quick disconnect, 40 feet.	(800)356-8000

59-471-050	FIREYE	59-471 scanner cable factory wired with 129-127-6 quick disconnect, 50 feet.	(800)356-8000
59-471-060	FIREYE	59-471 scanner cable factory wired with 129-127-6 quick disconnect, 60 feet.	(800)356-8000
59-471-080	FIREYE	59-471 scanner cable factory wired with 129-127-6 quick disconnect, 80 feet.	(800)356-8000
59-471-100	FIREYE	59-471 scanner cable factory wired with 129-127-6 quick disconnect, 100 feet.	(800)356-8000
59-471-120	FIREYE	59-471 scanner cable factory wired with 129-127-6 quick disconnect, 120 feet.	(800)356-8000
59-471-140	FIREYE	59-471 scanner cable factory wired with 129-127-6 quick disconnect, 140 feet.	(800)356-8000
59-471-160	FIREYE	59-471 scanner cable factory wired with 129-127-6 quick disconnect, 160 feet.	(800)356-8000
59-471-180	FIREYE	59-471 scanner cable factory wired with 129-127-6 quick disconnect, 180 feet.	(800)356-8000
59-471-200	FIREYE	59-471 scanner cable factory wired with 129-127-6 quick disconnect, 200 feet.	(800)356-8000
59-471-240	FIREYE	59-471 scanner cable factory wired with 129-127-6 quick disconnect, 240 feet.	(800)356-8000
59-495	FIREYE	Air Hose, flexible, rubber 1" (I.D.) x 10 ft.	(800)356-8000
59-497	FIREYE	12 conductor cable for InSight scanner.	(800)356-8000
59-497-010	FIREYE	Factory wired cable assembly (59-497) with straight connector (129-164). 10 feet.	(800)356-8000
59-497-010C	FIREYE	Factory wired cable assembly (59-497) with straight connector and flexible conduit adapter (129-164C). 10 feet.	(800)356-8000
59-497-010R	FIREYE	Factory wired cable assembly (59-497) with right angle connector (129-164R). 10 feet.	(800)356-8000
59-497-010RC	FIREYE	Factory wired cable assembly (59-497) with right angle connector and flexible conduit adapter (129-164RC). 10 feet.	(800)356-8000
59-497-020	FIREYE	Factory wired cable assembly (59-497) with straight connector (129-164). 20 feet.	(800)356-8000
59-497-020C	FIREYE	Factory wired cable assembly (59-497) with straight connector and flexible conduit adapter (129-164C). 20 feet.	(800)356-8000
59-497-020R	FIREYE	Factory wired cable assembly (59-497) with right angle connector (129-164R). 20 feet.	(800)356-8000
59-497-020RC	FIREYE	Factory wired cable assembly (59-497) with right angle connector and flexible conduit adapter (129-164RC). 20 feet.	(800)356-8000
59-497-040	FIREYE	Factory wired cable assembly (59-497) with straight connector (129-164). 40 feet.	(800)356-8000
59-497-040C	FIREYE	Factory wired cable assembly (59-497) with straight connector and flexible conduit adapter (129-164C). 40 feet.	(800)356-8000
59-497-040R	FIREYE	Factory wired cable assembly (59-497) with right angle connector (129-164R). 40 feet.	(800)356-8000
59-497-040RC	FIREYE	Factory wired cable assembly (59-497) with right angle connector and flexible conduit adapter (129-164RC). 40 feet.	(800)356-8000
59-497-050	FIREYE	Factory wired cable assembly (59-497) with straight connector (129-164). 50 feet.	(800)356-8000
59-497-050C	FIREYE	Factory wired cable assembly (59-497) with straight connector and flexible conduit adapter (129-164C). 50 feet.	(800)356-8000
59-497-050R	FIREYE	Factory wired cable assembly (59-497) with right angle connector (129-164R). 50 feet.	(800)356-8000

59-497-050RC	FIREYE	Factory wired cable assembly (59-497) with right angle connector and flexible conduit adapter (129-164RC). 50 feet.	(800)356-8000
59-497-060	FIREYE	Factory wired cable assembly (59-497) with straight connector (129-164). 60 feet.	(800)356-8000
59-497-060C	FIREYE	Factory wired cable assembly (59-497) with straight connector and flexible conduit adapter (129-164C). 60 feet.	(800)356-8000
59-497-060R	FIREYE	Factory wired cable assembly (59-497) with right angle connector (129-164R). 60 feet.	(800)356-8000
59-497-060RC	FIREYE	Factory wired cable assembly (59-497) with right angle connector and flexible conduit adapter (129-164RC). 60 feet.	(800)356-8000
59-497-080	FIREYE	Factory wired cable assembly (59-497) with straight connector (129-164). 80 feet.	(800)356-8000
59-497-080C	FIREYE	Factory wired cable assembly (59-497) with straight connector and flexible conduit adapter (129-164C). 80 feet.	(800)356-8000
59-497-080R	FIREYE	Factory wired cable assembly (59-497) with right angle connector (129-164R). 80 feet.	(800)356-8000
59-497-080RC	FIREYE	Factory wired cable assembly (59-497) with right angle connector and flexible conduit adapter (129-164RC). 80 feet.	(800)356-8000
59-497-100	FIREYE	Factory wired cable assembly (59-497) with straight connector (129-164). 100 feet.	(800)356-8000
59-497-100C	FIREYE	Factory wired cable assembly (59-497) with straight connector and flexible conduit adapter (129-164C). 100 feet.	(800)356-8000
59-497-100R	FIREYE	Factory wired cable assembly (59-497) with right angle connector (129-164R). 100 feet.	(800)356-8000
59-497-100RC	FIREYE	Factory wired cable assembly (59-497) with right angle connector and flexible conduit adapter (129-164RC). 100 feet.	(800)356-8000
59-497-120	FIREYE	Factory wired cable assembly (59-497) with straight connector (129-164). 120 feet.	(800)356-8000
59-497-120C	FIREYE	Factory wired cable assembly (59-497) with straight connector and flexible conduit adapter (129-164C). 120 feet.	(800)356-8000
59-497-120R	FIREYE	Factory wired cable assembly (59-497) with right angle connector (129-164R). 120 feet.	(800)356-8000
59-497-120RC	FIREYE	Factory wired cable assembly (59-497) with right angle connector and flexible conduit adapter (129-164RC). 120 feet.	(800)356-8000
59-497-140	FIREYE	Factory wired cable assembly (59-497) with straight connector (129-164). 140 feet.	(800)356-8000
59-497-140C	FIREYE	Factory wired cable assembly (59-497) with straight connector and flexible conduit adapter (129-164C). 140 feet.	(800)356-8000
59-497-140R	FIREYE	Factory wired cable assembly (59-497) with right angle connector (129-164R). 140 feet.	(800)356-8000
59-497-140RC	FIREYE	Factory wired cable assembly (59-497) with right angle connector and flexible conduit adapter (129-164RC). 140 feet.	(800)356-8000
59-497-160	FIREYE	Factory wired cable assembly (59-497) with straight connector (129-164). 160 feet.	(800)356-8000
59-497-160C	FIREYE	Factory wired cable assembly (59-497) with straight connector and flexible conduit adapter (129-164C). 160 feet.	(800)356-8000
59-497-160R	FIREYE	Factory wired cable assembly (59-497) with right angle connector (129-164R). 160 feet.	(800)356-8000

59-497-160RC	FIREYE	Factory wired cable assembly (59-497) with right angle connector and flexible conduit adapter (129-164RC). 160 feet.	(800)356-8000
59-497-180	FIREYE	Factory wired cable assembly (59-497) with straight connector (129-164). 180 feet.	(800)356-8000
59-497-180C	FIREYE	Factory wired cable assembly (59-497) with straight connector and flexible conduit adapter (129-164C). 180 feet.	(800)356-8000
59-497-180R	FIREYE	Factory wired cable assembly (59-497) with right angle connector (129-164R). 180 feet.	(800)356-8000
59-497-180RC	FIREYE	Factory wired cable assembly (59-497) with right angle connector and flexible conduit adapter (129-164RC). 180 feet.	(800)356-8000
59-497-200	FIREYE	Factory wired cable assembly (59-497) with straight connector (129-164). 200 feet.	(800)356-8000
59-497-200C	FIREYE	Factory wired cable assembly (59-497) with straight connector and flexible conduit adapter (129-164C). 200 feet.	(800)356-8000
59-497-200R	FIREYE	Factory wired cable assembly (59-497) with right angle connector (129-164R). 200 feet.	(800)356-8000
59-497-200RC	FIREYE	Factory wired cable assembly (59-497) with right angle connector and flexible conduit adapter (129-164RC). 200 feet.	(800)356-8000
59-497-250	FIREYE	Factory wired cable assembly (59-497) with straight connector (129-164). 250 feet.	(800)356-8000
59-497-250C	FIREYE	Factory wired cable assembly (59-497) with straight connector and flexible conduit adapter (129-164C). 250 feet.	(800)356-8000
59-497-250R	FIREYE	Factory wired cable assembly (59-497) with right angle connector (129-164R). 250 feet.	(800)356-8000
59-497-250RC	FIREYE	Factory wired cable assembly (59-497) with right angle connector and flexible conduit adapter (129-164RC). 250 feet.	(800)356-8000
59-497-300	FIREYE	Factory wired cable assembly (59-497) with straight connector (129-164). 300 feet.	(800)356-8000
59-497-300C	FIREYE	Factory wired cable assembly (59-497) with straight connector and flexible conduit adapter (129-164C). 300 feet.	(800)356-8000
59-497-300R	FIREYE	Factory wired cable assembly (59-497) with right angle connector (129-164R). 300 feet.	(800)356-8000
59-497-300RC	FIREYE	Factory wired cable assembly (59-497) with right angle connector and flexible conduit adapter (129-164RC). 300 feet.	(800)356-8000
59-504-010	FIREYE	10 foot cable for UV7SC self-check scanner	(800)356-8000
59-506-1	FIREYE	Cable, 6 in. (152 mm), expansion module	(800)356-8000
59-506-3	FIREYE	Cable, 36 in. (914 mm), expansion module	(800)356-8000
59-507-10	FIREYE	Cable, 10 ft. (3050 mm) for remote display	(800)356-8000
59-507-15	FIREYE	Cable, 15 ft. (4572 mm) for remote display	(800)356-8000
59-507-6	FIREYE	Cable, 6 ft. (1830 mm) for remote display	(800)356-8000
59-509-10	FIREYE	10' coaxial cable for IT318	(800)356-8000
59-509-15	FIREYE	15' coaxial cable for IT318	(800)356-8000
59-509-20	FIREYE	20' coaxial cable for IT318	(800)356-8000
59-509-25	FIREYE	25' coaxial cable for IT318	(800)356-8000
60-1199	FIREYE	Union with quartz window, 1" for 45UV2, 45UV3, 45UV5.	(800)356-8000
60-1257	FIREYE	Union with quartz window, 1/2" for UV1A.	(800)356-8000
60-1290	FIREYE	Union with quartz lens, 1/2" for UV1A.	(800)356-8000
60-1386-2	FIREYE	Closed wiring base for surface mtg., use with D Series and FLAME-MONITOR.	(800)356-8000
60-1466-2	FIREYE	Open wiring base for cabinet mtg., use with D Series and FLAME-MONITOR.	(800)356-8000
60-1519	FIREYE	Sensitivity selector plug with cable for 25SU5-4011.	(800)356-8000

60-1622	FIREYE	Long range assembly for 45RM1/45RM2/45RM4.	(800)356-8000
60-1664-3	FIREYE	Swivel mount adaptor, 1" NPT for 45UV5, 45RM, 45FS scanners.	(800)356-8000
60-1664-4	FIREYE	Swivel mount adaptor, 1" BSP for 45UV5, 45RM, 45FS scanners.	(800)356-8000
60-1704-1	FIREYE	P-Series surface enclosure, used with 26RJ8-6008/6018, 26SJ5-6152	(800)356-8000
60-1704-2	FIREYE	P-Series surface enclosure, used with 26RJ8-6058/6070/6160, 25RU8-580/6580, 25SU5-4018	(800)356-8000
60-1705-1	FIREYE	P-Series open mtg frame, used with 26RJ8-6008/6018, 26SJ5-6152	(800)356-8000
60-1705-2	FIREYE	P-Series open mtg frame, used with 26rj8-6058/6070/6080/6160, 25RU8-4580/6580, 25SU5-4018/4019.	(800)356-8000
60-1706	FIREYE	Surface mount dual amplifier rack for 25SU3 amplifiers.	(800)356-8000
60-1764	FIREYE	MM-1 adaptor to replace RA890 with M-Series II, MicroM.	(800)356-8000
60-1765	FIREYE	MM-2 adaptor to replace R4795 with M-Series II, MicroM.	(800)356-8000
60-1915	FIREYE	High shock wiring base for D-Series and FLAME-MONITOR.	(800)356-8000
60-1950	FIREYE	Expansion module wiring base.	(800)356-8000
60-2060-1	FIREYE	PFM adaptor for PFM1 kit.	(800)356-8000
60-2060-10	FIREYE	PFM adaptor for PFM10 kit.	(800)356-8000
60-2060-14	FIREYE	PFM adaptor to replace 26RJ8 with E200.	(800)356-8000
60-2060-15	FIREYE	PD adaptor to replace 25SU5 with 70D40.	(800)356-8000
60-2060-16	FIREYE	Modernization adaptor for 25SU5-5011, -5012.	(800)356-8000
60-2060-17	FIREYE	Modernization adaptor for 25SU3-5166, -5168.	(800)356-8000
60-2060-2	FIREYE	PFM adaptor for PFM2 kit.	(800)356-8000
60-2060-3	FIREYE	PFM adaptor for PFM3 kit.	(800)356-8000
60-2060-4	FIREYE	PD adaptor for PD4 kit.	(800)356-8000
60-2060-9	FIREYE	PFM adaptor for PFM9 kit.	(800)356-8000
60-2067	FIREYE	Front panel filler plates (2) for 60-1706 rack.	(800)356-8000
60-2107	FIREYE	Service adaptor, wiring base with access to terminals.	(800)356-8000
60-2203-2	FIREYE	25SU3-5166, -5168 chassis.	(800)356-8000
60-2203-3	FIREYE	24SU3-5167 chassis.	(800)356-8000
60-2204-2	FIREYE	25SU5-5011, -5012 chassis.	(800)356-8000
60-2205	FIREYE	Display module for 25SU5-5011/50125166/5168.	(800)356-8000
60-2206-1	FIREYE	25SU5-5011, -5012 wiring base.	(800)356-8000
60-2206-2	FIREYE	25SU3-5166, -5168 wiring base.	(800)356-8000
60-2207-1	FIREYE	Flame amplifier (High sensitivity) for 5011, 5168.	(800)356-8000
60-2207-2	FIREYE	Flame amplifier (High discrimination) for 5012, 5166, 5167.	(800)356-8000
60-2207-3	FIREYE	Flame amplifier (High sensitivity, no hysteresis) for 5013.	(800)356-8000
60-2223	FIREYE	Dust cover.	(800)356-8000
60-2301	FIREYE	Blank display module.	(800)356-8000
60-2366	FIREYE	Quick disconnect for 45UV5, 45RM1, 45RM2.	(800)356-8000
60-2367	FIREYE	Ribbon cable for 25SU5-5011/5012/5166/5168.	(800)356-8000
60-2380-4	FIREYE	Replacement scanner used in 45RM4-1000EX	(800)356-8000
60-2380-6	FIREYE	Replacement scanner used in 45RM4-1000CEX	(800)356-8000
60-2470-1	FIREYE	110 VAC input/24 VDC, 2.5 amps output power supply. Includes 60-2482 connector.	(800)356-8000
60-2470-2	FIREYE	220-240 VAC input/24 VDC, 2.5 amps output power supply. Includes 60-2482 connector.	(800)356-8000
60-2471-1	FIREYE	Half rack for 25SU3-2000, -2100. Includes one 60-2478 connector.	(800)356-8000
60-2471-3	FIREYE	Full rack for 25SU3-2000, -2100. Includes one 60-2478 connector.	(800)356-8000
60-2478	FIREYE	Screw terminal, straight style (12 AWG) connector for 25SU3-2000, -2100 and 19UVPS.	(800)356-8000
60-2480	FIREYE	Screw terminal, Y style (12 AWG) connector for 25SU3-2000, -2100 and 19UVPS.	(800)356-8000
60-2481	FIREYE	Screw terminal connector for 60-2470, 19MPS.	(800)356-8000

60-2482	FIREYE	Spade terminal connector for 60-2470, 19MPS.	(800)356-8000
60-2490-10	FIREYE	Front filler plate for 60-2471-1, -3. Approx 2" (10 HP).	(800)356-8000
60-2490-2	FIREYE	Front filler plate for 60-2471-1, -3. Approx .4" (2 HP).	(800)356-8000
60-2490-4	FIREYE	Front filler plate for 60-2471-1, -3. Approx .8" (4 HP).	(800)356-8000
60-2490-6	FIREYE	Front filler plate for 60-2471-1, -3. Approx 1.2" (6 HP).	(800)356-8000
60-2490-8	FIREYE	Front filler plate for 60-2471-1, -3. Approx 1.6" (8 HP).	(800)356-8000
60-2530-1	FIREYE	Surface mount rack for use with 25SU3-2000, -2100 amplifier and 19MPS-2000 power supply.	(800)356-8000
60-2530-2	FIREYE	Surface mount rack with hinged clear plastic cover for use with 25SU3-2000, -2100 amplifier and 19MPS-2000 power supply.	(800)356-8000
60-2535-1	FIREYE	Half rack. mounts up to 6 modules (includes one 60-2536-1 connector).	(800)356-8000
60-2535-2	FIREYE	Full rack. mounts up to 13 modules (includes one 60-2536-1 connector).	(800)356-8000
60-2536-1	FIREYE	Screw terminal, straight style for FlameWorxs modules.	(800)356-8000
60-2536-2	FIREYE	Screw terminal, straight style for MBPS-100R power supply.	(800)356-8000
60-2537	FIREYE	Wiring base for DIN rail mount FlameWorxs modules.	(800)356-8000
60-2538	FIREYE	Wiring base for DIN rail mount power supplies.	(800)356-8000
60-2538	FIREYE	Wiring base for DIN rail mount power supplies.	(800)356-8000
60-2539-12	FIREYE	DIN style mounting rail, 12", mounts up to 4 modules.	(800)356-8000
60-2539-24	FIREYE	DIN style mounting rail, 24", mounts up to 8 modules.	(800)356-8000
60-2539-36	FIREYE	DIN style mounting rail, 36", mounts up to 12 modules.	(800)356-8000
60-2608	FIREYE	Sealing window for FE-4.	(800)356-8000
60-2627	FIREYE	Flame simulator for 45RM4/45FS1/45UVFS1	(800)356-8000
60-2685-2	FIREYE	Power Supply, 24 VDC, 2.1 A, 120 / 240 VAC for 65UV5 / 85UVF / 95UV5 scanners.	(800)356-8000
60-2685-2	FIREYE	Power Supply, 24 VDC, 2.1 A, 120 / 240 VAC for 65UV5 / 85UVF / 95UV5 scanners.	(800)356-8000
60-2685-4	FIREYE	Power Supply, 24 VDC, 4.2 A, 120 / 240 VAC for 65UV5 / 85UVF / 95UV5 scanners.	(800)356-8000
60-2685-4	FIREYE	Power Supply, 24 VDC, 4.2 A, 120 / 240 VAC for 65UV5 / 85UVF / 95UV5 scanners.	(800)356-8000
60-2692	FIREYE	1" NPT mounting flange for InSight Scanner.	(800)356-8000
60-2693	FIREYE	1" BSP mounting flange for InSight Scanner.	(800)356-8000
60-2717	FIREYE	Mounting bracket: NX04 / NX20 series to S-3 series	(800)356-8000
60-2718	FIREYE	Mounting bracket: NX04 / NX20 series to F series	(800)356-8000
60-2719	FIREYE	Mounting bracket: NX04 / NX20 series	(800)356-8000
60-2720	FIREYE	Vortex tube kit for high ambient temperature applications.	(800)356-8000
60-2726	FIREYE	Wiring Base, 11 pin DIN rail socket, for MBPF-100S stand-alone mounting.	(800)356-8000
60-2771	FIREYE	Junction box with terminals for 65UV5 / 85UVF / 95UV5 scanners.	(800)356-8000
60-280	FIREYE	Smoke system pressure tight mounting adaptor for 44DU2, 47EM4.	(800)356-8000
60-2803	FIREYE	Oxygen probe calibration kit, includes calibration pump, calibration nipple, 2 sealing nuts, 1 filter assembly, and 1 gasket.	(800)356-8000
60-302	FIREYE	Swivel mount adaptor, 1/2" for 48PT, UV1A.	(800)356-8000
60-460	FIREYE	Attenuation clip cord for 26RJ8, 29RF5-6000 Series.	(800)356-8000
60-801	FIREYE	1/2" union with Pyrex window for 48PT.	(800)356-8000
60E5502-1	FIREYE	19 inch rack for 1 control.	(800)356-8000
60E5502-2	FIREYE	19 inch rack for 2 controls.	(800)356-8000
60E5502-3	FIREYE	19 inch rack for 3 controls.	(800)356-8000
60E5502-4	FIREYE	19 inch rack for 4 controls.	(800)356-8000
60E5504-1	FIREYE	Wall mount 19 inch rack for 1 control.	(800)356-8000
60E5504-2	FIREYE	Wall mount 19 inch rack for 2 controls.	(800)356-8000
60E5504-3	FIREYE	Wall mount 19 inch rack for 3 controls.	(800)356-8000
60E5504-4	FIREYE	Wall mount 19 inch rack for 4 controls.	(800)356-8000

6-114	FIREYE	OBSOLETE. Replace with 61-6699	(800)356-8000
61-2275-2	FIREYE	Quartz lens assembly for 45UV5 scanners.	(800)356-8000
61-2275-3	FIREYE	Glass lens assembly for 45RM1/45RM2/45RM4 scanners.	(800)356-8000
61-2275-4	FIREYE	Glass lens assembly for 45UVFS1 scanners.	(800)356-8000
61-2841-1	FIREYE	NPT hinged flange for 45UV5.	(800)356-8000
61-2841-2	FIREYE	BSP hinged flange for 45UV5.	(800)356-8000
61-2913-1	FIREYE	Shutter, gasket, bracket, and lens assembly for 45UV5-1000,-1010, -1101 (includes 61-2914).	(800)356-8000
61-2914-1	FIREYE	Shutter and bracket assembly only for 45UV5-1005 through 1009, -1000, -1010, -1101.	(800)356-8000
61-2914-1	FIREYE	Shutter and bracket assembly only for 45UV5-1005 through 1009, -1000, -1010, -1101.	(800)356-8000
61-3045	FIREYE	15 sec. plug for 26RJ8-6080.	(800)356-8000
61-3046	FIREYE	30 sec. plug for 26RJ8-6080.	(800)356-8000
61-3057	FIREYE	Terminal board for 60-1705-2, 60-1704-2.	(800)356-8000
61-3060	FIREYE	Closed wiring base for surface mtg., use with M-Series II and MicroM.	(800)356-8000
61-3060	FIREYE	Closed wiring base for surface mtg., use with M-Series II and MicroM.	(800)356-8000
61-3263-1	FIREYE	Shutter bracket and lens assembly with lens holder and gasket for 45UV5-1005 thru -1009, -1105 (includes 61-2914).	(800)356-8000
61-3356	FIREYE	MB power supply, 120 VAC.	(800)356-8000
61-3357	FIREYE	MB purge timer, 120 VAC.	(800)356-8000
61-3358	FIREYE	MB rectification amplifier, 120 VAC.	(800)356-8000
61-3359	FIREYE	MB ultraviolet amplifier, 120 VAC.	(800)356-8000
61-3380-1	FIREYE	MB auxiliary chassis for 4 additional burners.	(800)356-8000
61-3381-2	FIREYE	MB-2 master chassis.	(800)356-8000
61-3688	FIREYE	FE-4 smoke mounting bracket.	(800)356-8000
61-3689	FIREYE	FE-4 reflector.	(800)356-8000
61-4038	FIREYE	20% calibration screen for FE-4, FE-5.	(800)356-8000
61-4183	FIREYE	FE-4 extended reflector.	(800)356-8000
61-436	FIREYE	Lens cap for 48PT scanners.	(800)356-8000
61-4468-1	FIREYE	Shutter and bracket assembly for 45RM1/45RM2.	(800)356-8000
61-4490-1	FIREYE	Lens and baffle assembly for 44DU2-1000.	(800)356-8000
61-4490-2	FIREYE	Lens and baffle assembly for 47EM4-1000.	(800)356-8000
61-4842-1	FIREYE	7 ft. (2134 mm) fiber optic bundle - glass	(800)356-8000
61-4842-10	FIREYE	5.5 ft. (1676 mm) fiber optic bundle - glass.	(800)356-8000
61-4842-11	FIREYE	17.5 ft. (5334 mm) fiber optic bundle - glass.	(800)356-8000
61-4842-12	FIREYE	4.5 ft. (1372 mm) fiber optic bundle - glass.	(800)356-8000
61-4842-2	FIREYE	9 ft. (2743 mm) fiber optic bundle - glass.	(800)356-8000
61-4842-3	FIREYE	5 ft. (1524 mm) fiber optic bundle - glass.	(800)356-8000
61-4842-4	FIREYE	10 ft. (3048 mm) fiber optic bundle - glass.	(800)356-8000
61-4842-5	FIREYE	12 ft. (3658 mm) fiber optic bundle - glass.	(800)356-8000
61-4842-6	FIREYE	14 ft. (4268 mm) fiber optic bundle - glass.	(800)356-8000
61-4842-7	FIREYE	3 ft. (914 mm) fiber optic bundle - glass.	(800)356-8000
61-4842-9	FIREYE	6 ft. (1828 mm) fiber optic bundle - glass	(800)356-8000
61-4892-2	FIREYE	45RM1 scanner for use with fiber optic assemblies.	(800)356-8000
61-4893	FIREYE	7 ft. (2134 mm) outer carrier assembly - glass or quartz.	(800)356-8000
61-4894-1	FIREYE	7 ft. (2134 mm) inner carrier assembly - glass.	(800)356-8000
61-4894-10	FIREYE	17.5 ft. (5334 mm) inner carrier assembly - glass.	(800)356-8000
61-4894-11	FIREYE	4.5 ft. (1372 mm) inner carrier assembly - glass.	(800)356-8000
61-4894-2	FIREYE	9 ft. (2743 mm) inner carrier assembly - glass.	(800)356-8000
61-4894-3	FIREYE	5 ft. (1524 mm) inner carrier assembly - glass.	(800)356-8000
61-4894-4	FIREYE	10 ft. (3048 mm) inner carrier assembly - glass.	(800)356-8000
61-4894-5	FIREYE	12 ft. (3658 mm) inner carrier assembly - glass.	(800)356-8000
61-4894-6	FIREYE	14 ft. (4268 mm) inner carrier assembly - glass.	(800)356-8000
61-4894-7	FIREYE	3 ft. (914 mm) inner carrier assembly - glass.	(800)356-8000
61-4894-8	FIREYE	6 ft. (1828 mm) inner carrier assembly - glass.	(800)356-8000
61-4894-9	FIREYE	5.5 ft. (1676 mm) inner carrier assembly - glass.	(800)356-8000
61-4895	FIREYE	"TA" lens, 0 degree skew - glass.	(800)356-8000

61-4913	FIREYE	"TB" lens, 5 degree skew - glass.	(800)356-8000
61-4914	FIREYE	"TC" lens, 9 degree skew - glass.	(800)356-8000
61-4926	FIREYE	Terminal board for 60-1705-1, 60-1704-1.	(800)356-8000
61-5042	FIREYE	Open wiring base for cabinet mtg., use with M-Series II and MicroM.	(800)356-8000
61-5234	FIREYE	45RM2 scanner for use with fiber optic assemblies.	(800)356-8000
61-5386	FIREYE	9 ft. (2743 mm) outer carrier assembly - glass or quartz.	(800)356-8000
61-5430	FIREYE	5 ft. (1524 mm) outer carrier assembly - glass or quartz.	(800)356-8000
61-5560	FIREYE	Digital bar graph meter (LED).	(800)356-8000
61-5745-3	FIREYE	Shutter drive circuit board assembly for dual 45UV5-1005 scanners.	(800)356-8000
61-6305	FIREYE	10 ft. (3048 mm) outer carrier assembly - glass or quartz.	(800)356-8000
61-6306	FIREYE	12 ft. (3658 mm) outer carrier assembly - glass or quartz.	(800)356-8000
61-6329	FIREYE	EB342 cable.	(800)356-8000
61-6520	FIREYE	Replace with 61-6521.	(800)356-8000
61-6521	FIREYE	45RM4 scanner for use with fiber optic assemblies.	(800)356-8000
61-6540	FIREYE	14 ft. (4268 mm) outer carrier assembly - glass or quartz.	(800)356-8000
61-6610	FIREYE	Male quick disconnect for 45RM1	(800)356-8000
61-6625	FIREYE	45FS1 scanner for use with fiber optic assemblies.	(800)356-8000
61-6647	FIREYE	3 ft. (914 mm) outer carrier assembly - glass or quartz.	(800)356-8000
61-6671-10	FIREYE	Wiring harness for 45RM4/45FS1/45UVFS1 scanners, 10 feet.	(800)356-8000
61-6671-15	FIREYE	Wiring harness for 45RM4/45FS1/45UVFS1 scanners, 15 feet.	(800)356-8000
61-6671-20	FIREYE	Wiring harness for 45RM4/45FS1/45UVFS1 scanners, 20 feet.	(800)356-8000
61-6671-3	FIREYE	Wiring harness for 45RM4/45FS1/45UVFS1 scanners, 3 feet.	(800)356-8000
61-6671-30	FIREYE	Wiring harness for 45RM4/45FS1/45UVFS1 scanners, 30 feet.	(800)356-8000
61-6694-1	FIREYE	45UVFS1 scanner for use with fiber optic assemblies.	(800)356-8000
61-6699	FIREYE	Switch assembly replacement kit. Handle may require modification. Consult factory.	(800)356-8000
61-6754	FIREYE	"AA" lens, 0 degree skew - quartz.	(800)356-8000
61-6845	FIREYE	6 ft, (1829 mm) Outer carrier assembly, glass or quartz.	(800)356-8000
61-6856-10	FIREYE	10 ft, (3048 mm) Inner carrier assembly - quartz.	(800)356-8000
61-6856-12	FIREYE	12 ft, (3658 mm) Inner carrier assembly - quartz.	(800)356-8000
61-6856-14	FIREYE	14 ft, (4268 mm) Inner carrier assembly - quartz.	(800)356-8000
61-6856-3	FIREYE	3 ft, (914 mm) Inner carrier assembly - quartz.	(800)356-8000
61-6856-5	FIREYE	5 ft, (1524 mm) Inner carrier assembly - quartz.	(800)356-8000
61-6856-6	FIREYE	6 ft, (1829 mm) Inner carrier assembly - quartz.	(800)356-8000
61-6856-7	FIREYE	7 ft, (2134 mm) Inner carrier assembly - quartz.	(800)356-8000
61-6856-9	FIREYE	9 ft, (2743 mm) Inner carrier assembly - quartz.	(800)356-8000
61-6864	FIREYE	"AB" lens, 5 degree skew - quartz.	(800)356-8000
61-6865	FIREYE	"AC" lens, 9 degree skew - quartz.	(800)356-8000
61-6872-10	FIREYE	10 ft, (3048 mm) Fiber Optic bundle - quartz.	(800)356-8000
61-6872-12	FIREYE	12 ft, (3658 mm) Fiber Optic bundle - quartz.	(800)356-8000
61-6872-14	FIREYE	14 ft, (4268 mm) Fiber Optic bundle - quartz.	(800)356-8000
61-6872-3	FIREYE	3 ft, (914 mm) Fiber-Optic bundle - quartz	(800)356-8000
61-6872-5	FIREYE	5 ft, (1524 mm) Fiber Optic bundle - quartz.	(800)356-8000
61-6872-6	FIREYE	6 ft, (1829 mm) Fiber Optic Bundle - quartz.	(800)356-8000
61-6872-7	FIREYE	7 ft, (2134 mm) Fiber Optic bundle - quartz.	(800)356-8000
61-6872-9	FIREYE	9 ft, (2743 mm) Fiber Optic bundle - quartz.	(800)356-8000
61-6944-003	FIREYE	Wiring harness for InSight scanner - 3 feet.	(800)356-8000
61-6944-003R	FIREYE	Wiring harness for InSight scanner with right angle connector - 3 feet.	(800)356-8000
61-6944-010	FIREYE	Wiring harness for InSight scanner - 10 feet.	(800)356-8000
61-6944-010R	FIREYE	Wiring harness for InSight scanner with right angle connector - 10 feet.	(800)356-8000
61-6944-020	FIREYE	Wiring harness for InSight scanner - 20 feet.	(800)356-8000

61-6944-020R	FIREYE	Wiring harness for InSight scanner with right angle connector - 20 feet.	(800)356-8000
61-6944-030	FIREYE	Wiring harness for InSight scanner - 30 feet.	(800)356-8000
61-6944-030R	FIREYE	Wiring harness for InSight scanner with right angle connector - 30 feet.	(800)356-8000
61-6944-040	FIREYE	Wiring harness for InSight scanner - 40 feet.	(800)356-8000
61-6944-040R	FIREYE	Wiring harness for InSight scanner with right angle connector - 40 feet.	(800)356-8000
61-6944-050	FIREYE	Wiring harness for InSight scanner - 50 feet.	(800)356-8000
61-6944-050R	FIREYE	Wiring harness for InSight scanner with right angle connector - 50 feet.	(800)356-8000
61-6960-10	FIREYE	10 ft (3048 mm) inner carrier assembly - glass, for InSight Scanner.	(800)356-8000
61-6960-12	FIREYE	12 ft (3658 mm) inner carrier assembly - glass, for InSight Scanner.	(800)356-8000
61-6960-14	FIREYE	14 ft (4268 mm) inner carrier assembly - glass, for InSight Scanner.	(800)356-8000
61-6960-17	FIREYE	17 ft (5129 mm) inner carrier assembly - glass, for InSight Scanner.	(800)356-8000
61-6960-3	FIREYE	3 ft (914 mm) inner carrier assembly - glass, for InSight Scanner.	(800)356-8000
61-6960-5	FIREYE	5 ft (1524 mm) inner carrier assembly - glass, for InSight Scanner.	(800)356-8000
61-6960-6	FIREYE	6 ft (1828 mm) inner carrier assembly - glass, for InSight Scanner.	(800)356-8000
61-6960-7	FIREYE	7 ft (2134 mm) inner carrier assembly - glass, for InSight Scanner.	(800)356-8000
61-6960-9	FIREYE	9 ft (2743 mm) inner carrier assembly - glass, for InSight Scanner.	(800)356-8000
61-6974	FIREYE	Shutter assembly for 65UV5.	(800)356-8000
61-6995	FIREYE	Locking Bracket	(800)356-8000
6-220	FIREYE	MB switch assembly - run/reset.	(800)356-8000
6-221	FIREYE	MB switch assembly - start.	(800)356-8000
65UV5-1000	FIREYE	UV, integrated flame scanner, 24 VDC, 1" NPT, 4 sec FFRT. FM, CSA approved.	(800)356-8000
65UV5-1000E	FIREYE	UV, integrated flame scanner, 24 VDC, 1" BSP, 1 sec FFRT. CE approved.	(800)356-8000
69ND1-1000K4	FIREYE	Flame rod, 12", 1/2" mount (Auburn P/N FRS-2-12).	(800)356-8000
69ND1-1000K6	FIREYE	Flame rod, 18", 1/2" mount (Auburn P/N FRS-2-18).	(800)356-8000
69ND1-1000K8	FIREYE	Flame rod, 24", 1/2" mount (Auburn P/N FRS-2-24).	(800)356-8000
701-828	FIREYE	Water catchpot.	(800)356-8000
702-141	FIREYE	300mm probe pipe.	(800)356-8000
702-182	FIREYE	Sinter filter for probe.	(800)356-8000
702-205	FIREYE	1.0 M probe pipe.	(800)356-8000
702-206	FIREYE	1.5 M probe pipe.	(800)356-8000
702-207	FIREYE	3.0 M probe pipe.	(800)356-8000
703-115	FIREYE	Firetron touch panel w/o LCD.	(800)356-8000
703-119	FIREYE	Internal printer (Series 2000 only).	(800)356-8000
703-122	FIREYE	Side panel.	(800)356-8000
703-128	FIREYE	Pistol grip/hose assembly, 3 M.	(800)356-8000
703-144	FIREYE	Gas pre-filter (particle filter) (Series 2000 only)	(800)356-8000
703-145	FIREYE	CO compensation filter (Series 2000 only)	(800)356-8000
703-149	FIREYE	Female hose connector for exhaust/draft port.	(800)356-8000
703-163	FIREYE	Pistol grip/hose assembly, 10 M.	(800)356-8000
703-164	FIREYE	Sampling pump.	(800)356-8000
703-168	FIREYE	Bracket and hinge for water catchpot.	(800)356-8000
703-181	FIREYE	Carrying case.	(800)356-8000
703-236	FIREYE	CO cell	(800)356-8000
703-238	FIREYE	O2 cell.	(800)356-8000
703-239	FIREYE	NO cell.	(800)356-8000
703-241	FIREYE	SO2 cell.	(800)356-8000

703-246	FIREYE	NO2 cell (Series 2000 only).	(800)356-8000
703-248	FIREYE	CO (high) cell (Series 2000 only).	(800)356-8000
703-249	FIREYE	HyCx cell (Series 2000 only).	(800)356-8000
703-514	FIREYE	"DUO" probe 3M (Series 1000 only).	(800)356-8000
70-426	FIREYE	Coil (for Retraction Assembly), 110 VAC	(800)356-8000
70-427	FIREYE	Coil (for Retraction Assembly), 220 VAC	(800)356-8000
70D10	FIREYE	Chassis, Non-recycle, high purge interlock, low fire start.	(800)356-8000
70D20	FIREYE	Chassis, Recycle, low fire start, no high purge interlock.	(800)356-8000
70D21	FIREYE	Replace with E120, EP260, and appropriate amplifier. FM Approval only.	(800)356-8000
70D30	FIREYE	Chassis, Recycle, no modulation.	(800)356-8000
70D40	FIREYE	Chassis, For manually ignited burners, 120 VAC.	(800)356-8000
70D41	FIREYE	Chassis, For manually ignited burners, 230 VAC.	(800)356-8000
7-1040	FIREYE	300MFD capacitor to increase 25SU3-4169T FFRT.	(800)356-8000
7-1738	FIREYE	HEI Power Pack Capacitor	(800)356-8000
71D60	FIREYE	Programmer module. 60 sec purge, 10 and 15 sec TFI, use with 70D10, 20.	(800)356-8000
71D61	FIREYE	Programmer module. 60 sec purge, 10 and 30 sec TFI, use with 70D10, 20.	(800)356-8000
71D70	FIREYE	Programmer module. 60 sec purge, 5 and 10 sec TFI, early spark termination, use with 70D10, 20.	(800)356-8000
71D80	FIREYE	Programmer module. 30 sec purge, use with 70D30.	(800)356-8000
71D81	FIREYE	Programmer module. 15 sec purge, use with 70D30.	(800)356-8000
71D90	FIREYE	Programmer module. 90 sec purge, use with 70D30.	(800)356-8000
72D1R1	FIREYE	Infrared auto-check amplifier, 2-4 sec FFRT, use with 48PT2.	(800)356-8000
72D1R1T	FIREYE	Infrared auto-check amplifier, 1 sec FFRT, use with 48PT2.	(800)356-8000
72D1R3	FIREYE	Infrared auto-check amplifier (for special application - consult factory), use with 48PT2.	(800)356-8000
72D1R3T	FIREYE	Infrared auto-check amplifier (for special application - consult factory), 1 sec FFRT, use with 48PT2.	(800)356-8000
72DRT1	FIREYE	Flame rectification amplifier, 2-4 sec FFRT, use with 45CM or 69ND.	(800)356-8000
72DRT1T	FIREYE	Flame rectification amplifier, 1 sec FFRT, use with 45CM or 69ND.	(800)356-8000
72DUV1	FIREYE	Ultraviolet amplifier, 2-4 sec FFRT, use with UV1, UV2, 45UV3.	(800)356-8000
72DUV1T	FIREYE	Ultraviolet amplifier, 1 sec FFRT, use with UV1, UV2, 45UV3.	(800)356-8000
72DUVS1	FIREYE	Ultraviolet self-check amplifier, use with 45UV5-1006.	(800)356-8000
72DUVS1T	FIREYE	Ultraviolet self-check amplifier, 1 sec FFRT, use with 45UV5-1007, -1008, -1009.	(800)356-8000
72DUVS4	FIREYE	Ultraviolet self-check amplifier, 2-4 sec FFRT, use with 45UV5-1007, -1008, -1009.	(800)356-8000
78-465	FIREYE	SureFire 20 Combination Mounting Assembly	(800)356-8000
82-95	FIREYE	Lens holder for 45RM, 45UV scanners.	(800)356-8000
82-95	FIREYE	Lens holder for 45RM, 45UV scanners.	(800)356-8000
8-449	FIREYE	MB plug-in relays for RL1, RL2, RL3, 120 V.	(800)356-8000
8-485	FIREYE	Use 8-679 Relay	(800)356-8000
8-530	FIREYE	Use 8-679 Relay	(800)356-8000
85UVF1-1	FIREYE	Phoenix Integrated Scanner, 1 sec FFRT - Ultra-violet, with 10 foot cable. FM, CSA, CE Approved.	(800)356-8000
85UVF2-1	FIREYE	Phoenix Integrated Scanner, 2 sec FFRT - Ultra-violet, with 10 foot cable. FM, CSA, CE Approved.	(800)356-8000
85UVF3-1	FIREYE	Phoenix Integrated Scanner, 3 sec FFRT - Ultra-violet, with 10 foot cable. FM, CSA, CE Approved.	(800)356-8000
85UVF4-1	FIREYE	Phoenix Integrated Scanner, 4 sec FFRT - Ultra-violet, with 10 foot cable. FM, CSA, CE Approved.	(800)356-8000

85UVF4-1WR	FIREYE	Phoenix Integrated Scanner, 4 sec FFRT - Ultra-violet, with 10 foot cable. Includes 100 ohm, 1/2 watt resistor in series with flame relay contacts.	(800)356-8000
8-679	FIREYE	FE-5 plug-in relay, use with 27PH7.	(800)356-8000
8-705	FIREYE	Solenoid and Coil (for HEI Retraction Assembly), 110 VAC	(800)356-8000
8-706	FIREYE	Solenoid and Coil (for HEI Retraction Assembly), 220 VAC	(800)356-8000
92-28	FIREYE	Window for 45UV2-1020.	(800)356-8000
92-39	FIREYE	Use 92-84	(800)356-8000
92-45	FIREYE	Quartz window used in 60-1257 union.	(800)356-8000
92-48	FIREYE	Quartz window used in 60-1199 union.	(800)356-8000
92-55	FIREYE	Glass used with 61-4183.	(800)356-8000
92-84	FIREYE	Reflector for use with FE-4, 61-3689, 61-4183.	(800)356-8000
93-99	FIREYE	Smoke system escutcheon plate for 55AF recorders.	(800)356-8000
9-438	FIREYE	Quick Disconnect Socket, female, 1/2" NPT	(800)356-8000
95DSS1-1	FIREYE	Standard Model InSight Scanner - Dual detector (IR and UV) with quick disconnect. FM, CSA Approved.	(800)356-8000
95DSS1-1CG	FIREYE	Standard Model InSight Scanner - Dual detector (IR and UV) with 10' leads and cable gland. FM, CSA Approved.	(800)356-8000
95DSS1E-1	FIREYE	Standard Model InSight Scanner - Dual detector (IR and UV) with quick disconnect. CE Approved.	(800)356-8000
95DSS1E-1CEX	FIREYE	Standard Model InSight Scanner - Dual detector (IR and UV) with EExd IIC T6 housing. CE Approved.	(800)356-8000
95DSS1E-1CG	FIREYE	Standard Model InSight Scanner - Dual detector (IR and UV) with 10' leads and cable gland. CE Approved.	(800)356-8000
95DSS2-1	FIREYE	Enhanced Model InSight Scanner - Dual detector (IR and UV) with quick disconnect. FM, CSA Approved.	(800)356-8000
95DSS2-1CG	FIREYE	Enhanced Model InSight Scanner - Dual detector (IR and UV) with 10' leads and cable gland. FM, CSA Approved.	(800)356-8000
95DSS2E-1	FIREYE	Enhanced Model InSight Scanner - Dual detector (IR and UV) with quick disconnect. CE Approved.	(800)356-8000
95DSS2E-1CEX	FIREYE	Enhanced Model InSight Scanner - Dual detector (IR and UV) with EExd IIC T6 housing. CE Approved.	(800)356-8000
95DSS2E-1CG	FIREYE	Enhanced Model InSight Scanner - Dual detector (IR and UV) with 10' leads and cable gland. CE Approved.	(800)356-8000
95IRS1-1	FIREYE	Standard Model InSight Scanner - Infra-red with quick disconnect. FM, CSA Approved.	(800)356-8000
95IRS1-1CG	FIREYE	Standard Model InSight Scanner - Infra-red with 10' leads and cable gland. FM, CSA Approved.	(800)356-8000
95IRS1-2	FIREYE	Fiber-optic version of Standard Model InSight Scanner - Infra-red with quick disconnect. FM, CSA Approved.	(800)356-8000
95IRS1-2CG	FIREYE	Fiber-optic version of Standard Model InSight Scanner - Infra-red with 10' leads and cable gland. FM, CSA Approved.	(800)356-8000
95IRS1E-1	FIREYE	Standard Model InSight Scanner - Infra-red with quick disconnect. CE Approved.	(800)356-8000
95IRS1E-1CEX	FIREYE	Standard Model InSight Scanner - Infra-red with EExd IIC T6 housing. CE Approved.	(800)356-8000
95IRS1E-1CG	FIREYE	Standard Model InSight Scanner - Infra-red with 10' leads and cable gland. CE Approved.	(800)356-8000
95IRS1E-2	FIREYE	Fiber-optic version of Standard Model InSight Scanner - Infra-red with quick disconnect. CE Approved.	(800)356-8000
95IRS1E-2CG	FIREYE	Fiber-optic version of Standard Model InSight Scanner - Infra-red with 10' leads and cable gland. CE Approved.	(800)356-8000
95IRS2-1	FIREYE	Enhanced Model InSight Scanner - Infra-red with quick disconnect. FM, CSA Approved.	(800)356-8000
95IRS2-1CG	FIREYE	Enhanced Model InSight Scanner - Infra-red with 10' leads and cable gland. FM, CSA Approved.	(800)356-8000

95IRS2-2	FIREYE	Fiber-optic version of Enhanced Model InSight Scanner - Infra-red with quick disconnect. FM, CSA Approved.	(800)356-8000
95IRS2-2CG	FIREYE	Fiber-optic version of Enhanced Model InSight Scanner - Infra-red with 10' leads and cable gland. FM, CSA Approved.	(800)356-8000
95IRS2E-1	FIREYE	Enhanced Model InSight Scanner - Infra-red with quick disconnect. CE Approved.	(800)356-8000
95IRS2E-1CEX	FIREYE	Enhanced Model InSight Scanner - Infra-red with EExd IIC T6 housing. CE Approved.	(800)356-8000
95IRS2E-1CG	FIREYE	Enhanced Model InSight Scanner - Infra-red with 10' leads and cable gland. CE Approved.	(800)356-8000
95IRS2E-2	FIREYE	Fiber-optic version of Enhanced Model InSight Scanner - Infra-red with quick disconnect. CE Approved.	(800)356-8000
95IRS2E-2CG	FIREYE	Fiber-optic version of Enhanced Model InSight Scanner - Infra-red with 10' leads and cable gland. CE Approved.	(800)356-8000
95UVS1-1	FIREYE	Standard Model InSight Scanner - Ultra-violet with quick disconnect. FM, CSA Approved.	(800)356-8000
95UVS1-1CG	FIREYE	Standard Model InSight Scanner - Ultra-violet with 10' leads and cable gland. FM, CSA Approved.	(800)356-8000
95UVS1E-1	FIREYE	Standard Model InSight Scanner - Ultra-violet with quick disconnect. CE Approved.	(800)356-8000
95UVS1E-1CEX	FIREYE	Standard Model InSight Scanner - Ultra-violet with EExd IIC T6 housing. CE Approved.	(800)356-8000
95UVS1E-1CG	FIREYE	Standard Model InSight Scanner - Ultra-violet with 10' leads and cable gland. CE Approved.	(800)356-8000
95UVS2-1	FIREYE	Enhanced Model InSight Scanner - Ultra-violet with quick disconnect. FM, CSA Approved.	(800)356-8000
95UVS2-1CG	FIREYE	Enhanced Model InSight Scanner - Ultra-violet with 10' leads and cable gland. FM, CSA Approved.	(800)356-8000
95UVS2E-1	FIREYE	Enhanced Model InSight Scanner - Ultra-violet with quick disconnect. CE Approved.	(800)356-8000
95UVS2E-1CEX	FIREYE	Enhanced Model InSight Scanner - Ultra-violet with EExd IIC T6 housing. CE Approved.	(800)356-8000
95UVS2E-1CG	FIREYE	Enhanced Model InSight Scanner - Ultra-violet with 10' leads and cable gland. CE Approved.	(800)356-8000
97-1047	FIREYE	Heat Insulating Jacket for 45FS1 / 45UVFS1 / 45RM4 / 45UV5 scanners.	(800)356-8000
97-1048	FIREYE	Heat Insulating Jacket for InSight scanners.	(800)356-8000
97-1051	FIREYE	Insulating jacket for 65UV5.	(800)356-8000
C9501N5023	FIREYE	UV scanner with 3/4" purge hole and 50' lead wires. DE601-106 and DE601-104F.	(800)356-8000
C9501N5034	FIREYE	UV scanner with 3/4" purge hole and military connector. DE601-106 and DE601-104D.	(800)356-8000
C9502N5012	FIREYE	IR scanner with 3/4" purge hole and 50' lead wires. DE601-108A and DE601-104F.	(800)356-8000
C9502N5023	FIREYE	IR scanner with 3/4" purge hole and military connector. DE601-108A and DE601-104D.	(800)356-8000
C9502Q6001	FIREYE	Luminescent scanner with 3/4" purge hole and 50' lead wires. DE601-114 and DE601-104F.	(800)356-8000
C9502Q6012	FIREYE	Luminescent scanner with 3/4" purge hole and military connector. DE601-114 and DE601-104D.	(800)356-8000
C9503M-001	FIREYE	IR fiber optic scanner for heavy oil/coal: C9503M1032, C9503M1034, or C9503M1039. Includes DE601-110, DE601-112B, DE601-16, DE601-18, DE601-20A1.	(800)356-8000
C9503P-002	FIREYE	Non-incendive, adjustable frequency fiber optic scanner for heavy oil/coal: C9503P5001, C9503P5002, or C9503P5023. Includes DE701-019B, DE601-112E, DE601-16, DE601-18, DE601-20A1.	(800)356-8000

C9503P-003	FIREYE	Adjustable frequency fiber optic scanner for heavy oil/coal: C9503P5011, C9503P5022, or C9503P5033. Includes DE701-019A, DE601-112B, DE601-16, DE601-18, DE601-20A1.	(800)356-8000
C9504M-001	FIREYE	UV/Visible fiber optic scanner for gas/light oil: C9504M1041, C9504M1043, or C9504M1047. Includes DE601-111, DE601-112B, DE601-16, DE601-18, DE601-20A1.	(800)356-8000
C9504P-002	FIREYE	Non-incendive, adjustable frequency fiber optic scanner for gas/light oil: C9504P5001, C9504P5012, C9504P5023, or C9504P5034. Includes DE801-018B, DE601-112E, DE601-16, DE601-18, DE601-20A1.	(800)356-8000
C9504P-003	FIREYE	Adjustable frequency fiber optic scanner for gas/light oil: C9504P5011, C9504P5022, C9504P5033, or C9504P5044. Includes DE801-018A, DE601-112B, DE601-16, DE601-18, DE601-20A1.	(800)356-8000
C9506M1085	FIREYE	Non self-check pipe style scanner with 8' lead wires.	(800)356-8000
C9506M1096	FIREYE	Non self-check pipe style scanner with 50' lead wires.	(800)356-8000
C9507N4001	FIREYE	All fuel scanner with 50' lead wires. DE601-113 and DE601-104F.	(800)356-8000
C9507N4012	FIREYE	All fuel scanner with military connector. DE601-113 and DE601-104D.	(800)356-8000
C9508M2000	FIREYE	Pipe style UV scanner with military connector.	(800)356-8000
C9508M2011	FIREYE	Pipe style UV scanner with 3/4" NPT internal thread.	(800)356-8000
C9508M2022	FIREYE	Pipe style UV scanner with 25 mm internal thread.	(800)356-8000
C9509P1001	FIREYE	UV scanner with selectable frequency and military connector. DE901-108A and DE601-104D.	(800)356-8000
C9701A1012	FIREYE	Non-incendive UV scanner with 3/4" purge hole and military connector. DE701-107A and DE601-104G.	(800)356-8000
C9701A1023	FIREYE	Conformally coated, non-incendive UV scanner with 3/4" purge hole and military connector. DE701-107C and DE601-104G.	(800)356-8000
C9707A1012	FIREYE	Non-incendive, All Fuel scanner with 3/4" purge hole and military connector. DE701-007A and DE601-104G.	(800)356-8000
C9707A1023	FIREYE	Conformally coated, non-incendive, All Fuel scanner with 3/4" purge hole and military connector. DE701-007C and DE601-104G.	(800)356-8000
DE3420-001	FIREYE	1" blank filler plate.	(800)356-8000
DE3420-002	FIREYE	2" blank filler plate.	(800)356-8000
DE3420-003	FIREYE	3" blank filler plate.	(800)356-8000
DE3420-004	FIREYE	4" blank filler plate.	(800)356-8000
DE4360-010	FIREYE	Cable/connector clamp assembly, non PVC, 10 ft.	(800)356-8000
DE4360-020	FIREYE	Cable/connector clamp assembly, non PVC, 20 ft.	(800)356-8000
DE4360-040	FIREYE	Cable/connector clamp assembly, non PVC, 40 ft.	(800)356-8000
DE4360-060	FIREYE	Cable/connector clamp assembly, non PVC, 60 ft.	(800)356-8000
DE4360-080	FIREYE	Cable/connector clamp assembly, non PVC, 80 ft.	(800)356-8000
DE4360-100	FIREYE	Cable/connector clamp assembly, non PVC, 100 ft.	(800)356-8000
DE4599-010	FIREYE	Cable connector with conduit adaptor assembly, non PVC, 10 ft.	(800)356-8000
DE4599-020	FIREYE	Cable connector with conduit adaptor assembly, non PVC, 20 ft.	(800)356-8000
DE4599-040	FIREYE	Cable connector with conduit adaptor assembly, non PVC, 40 ft.	(800)356-8000
DE4599-060	FIREYE	Cable connector with conduit adaptor assembly, non PVC, 60 ft.	(800)356-8000
DE4599-080	FIREYE	Cable connector with conduit adaptor assembly, non PVC, 80 ft.	(800)356-8000
DE4599-100	FIREYE	Cable connector with conduit adaptor assembly, non PVC, 100 ft.	(800)356-8000
DE4599-120	FIREYE	Cable connector with conduit adaptor assembly, non PVC, 120 ft.	(800)356-8000

DE4599-140	FIREYE	Cable connector with conduit adaptor assembly, non PVC, 140 ft.	(800)356-8000
DE4599-160	FIREYE	Cable connector with conduit adaptor assembly, non PVC, 160 ft.	(800)356-8000
DE4599-180	FIREYE	Cable connector with conduit adaptor assembly, non PVC, 180 ft.	(800)356-8000
DE4599-200	FIREYE	Cable connector with conduit adaptor assembly, non PVC, 200 ft.	(800)356-8000
DE4606-001	FIREYE	Orifice kit for C9501, C9502, and C9507 scanners.	(800)356-8000
DE4643-001	FIREYE	4-20 mA board.	(800)356-8000
DE5213-001	FIREYE	Shutter tube assembly for C9508M scanners.	(800)356-8000
DE601-005	FIREYE	R9005 connector kit.	(800)356-8000
DE601-006	FIREYE	Connector for use with DE4360 cable. Exposed cable at burner front.	(800)356-8000
DE601-006B	FIREYE	Connector for use with DE4599 cable. Flex conduit at burner front.	(800)356-8000
DE601-007	FIREYE	Connector for AB rack controller.	(800)356-8000
DE601-08	FIREYE	Connector replacement for 8' lead wire.	(800)356-8000
DE601-104D	FIREYE	Front mount C9501/C9502/C9507/C9509 scanner base with 3/4" purge hole and military connector.	(800)356-8000
DE601-104F	FIREYE	Front mount C9501/C9502/C9507/C9509 scanner base with 3/4" purge hole and 50' lead wires.	(800)356-8000
DE601-104G	FIREYE	Front mount C9701/C9707 non-incendive scanner base with 3/4" purge hole and military connector.	(800)356-8000
DE601-106	FIREYE	Scanner electronics assembly C9501N Series.	(800)356-8000
DE601-106C	FIREYE	Conformally coated scanner electronics assembly C9501N Series.	(800)356-8000
DE601-107	FIREYE	Replacement UV tube for C9501M.	(800)356-8000
DE601-108A	FIREYE	Scanner electronics assembly C9502N Series.	(800)356-8000
DE601-108AC	FIREYE	Conformally coated scanner electronics assembly C9502N Series.	(800)356-8000
DE601-110	FIREYE	Electronics assembly for C9503M-001 fiber optic scanner Series.	(800)356-8000
DE601-111	FIREYE	Electronics assembly for C9504M-001 fiber optic scanner Series.	(800)356-8000
DE601-112B	FIREYE	Fiber optic scanner base with 3/4" purge hole and military connector for C9503M-001, C9503P-003, C9504M-001, and C9504P-003.	(800)356-8000
DE601-112C	FIREYE	Fiber optic scanner base with 3/4" purge hole and 8' lead wires.	(800)356-8000
DE601-112D	FIREYE	Fiber optic scanner base with 3/4" purge hole and 50' lead wires.	(800)356-8000
DE601-112E	FIREYE	Non-incendive fiber optic scanner base with 3/4" purge hole and military connector for C9503P-002 and C9504P-002.	(800)356-8000
DE601-113	FIREYE	Scanner electronics assembly C9507N Series.	(800)356-8000
DE601-113C	FIREYE	Conformally coated scanner electronics assembly C9507N Series.	(800)356-8000
DE601-114	FIREYE	Scanner electronics assembly C9502Q Series.	(800)356-8000
DE601-16	FIREYE	Stainless steel fiber optic termination assembly.	(800)356-8000
DE601-18	FIREYE	Cast metal compression fitting with graphite gasket.	(800)356-8000
DE601-20A1	FIREYE	0 degree offset lens assembly.	(800)356-8000
DE601-20B1	FIREYE	5 degree offset lens assembly.	(800)356-8000
DE601-20C1	FIREYE	9 degree offset lens assembly.	(800)356-8000
DE601-20D1	FIREYE	14 degree offset lens assembly.	(800)356-8000
DE701-007A	FIREYE	Scanner electronics assembly C9707A Series.	(800)356-8000
DE701-007C	FIREYE	Conformally coated scanner electronics assembly C9707A Series.	(800)356-8000
DE701-019A	FIREYE	Electronics assembly for C9503P-003 fiber optic scanner Series.	(800)356-8000

DE701-019B	FIREYE	Non-incendive electronics assembly for C9503P-002 fiber optic scanner Series.	(800)356-8000
DE701-107A	FIREYE	Scanner electronics assembly C9701A Series.	(800)356-8000
DE701-107C	FIREYE	Conformally coated scanner electronics assembly C9701A Series.	(800)356-8000
DE801-018A	FIREYE	Electronics assembly for C9504P-003 fiber optic scanner Series.	(800)356-8000
DE801-018B	FIREYE	Electronics assembly for C9504P-002 fiber optic scanner Series.	(800)356-8000
DE901-018A	FIREYE	Scanner electronics assembly C9509 Series.	(800)356-8000
E100	FIREYE	Control, consisting of ED500, EB700, 48-1805, EC600. 120 VAC UL, FM, CSA Approved.	(800)356-8000
E110	FIREYE	Control, consisting of EB700, 48-1836, EC600. 120 VAC. Display ordered separately. UL, FM, CSA Approved.	(800)356-8000
E120	FIREYE	Control, consisting of EB700, 48-1836, EC600. 220 VAC. FM Approval only.	(800)356-8000
E1R1	FIREYE	Infrared autocheck amplifier, use with 48PT2.	(800)356-8000
E1R2	FIREYE	Infrared autocheck amplifier, use with 48PT2. Special application only, consult factory.	(800)356-8000
E1R3	FIREYE	Infrared autocheck amplifier, use with 48PT2. Solid fuels only.	(800)356-8000
E200	FIREYE	Control, consisting of ED500, EB720, 48-1805, EC600. 220 VAC. Use with EP113 only. CE Approved.	(800)356-8000
E201	FIREYE	Control, consisting of ED500, EB721, 48-1805, EC600. 110 VAC. Use with EP113 only. CE Approved.	(800)356-8000
E210	FIREYE	Control, consisting of EB720, 48-1836, EC600. 220 VAC. Use with EP113 only. Display ordered separately. CE Approved.	(800)356-8000
E211	FIREYE	Control, consisting of EB721, 48-1836, EC600. 110 VAC. Use with EP113 only. Display ordered separately. CE Approved.	(800)356-8000
E300	FIREYE	Expansion module - use with E100/E110/E201/E211	(800)356-8000
E302	FIREYE	Timing card, 30 sec purge, 2 sec TFI, use with UVM4 only.	(800)356-8000
E305	FIREYE	Timing card, 30 sec purge, 5 sec TFI, use with UVM4 only.	(800)356-8000
E320	FIREYE	Expansion module - use with E200/E210 or E120 (wire per E110 for E120).	(800)356-8000
E340	FIREYE	Boiler control (Includes chassis, keypad/display module, dust cover, and 48-1805).	(800)356-8000
E343	FIREYE	Wiring base for E340 control (surface mounted - UL Listed).	(800)356-8000
E344	FIREYE	Wiring base for E340 control (cabinet mounted - UL Recognized).	(800)356-8000
E345	FIREYE	Keypad/display module for E340 boiler room control.	(800)356-8000
E346	FIREYE	Boiler control (Includes chassis, keypad/display module, dust cover, and 48-1805) for 230 VAC inputs. No agency approvals.	(800)356-8000
E350-3	FIREYE	Expansion module cable, 3 ft length.	(800)356-8000
E350-6	FIREYE	Expansion module cable, 6 ft length.	(800)356-8000
E500-1	FIREYE	Communication interface - single E100/E110.	(800)356-8000
E500-3	FIREYE	Communication interface - up to 4 E100's/E110's.	(800)356-8000
E602	FIREYE	Timing card, 60 sec purge, 2 sec TFI, use with UVM4 only.	(800)356-8000
E605	FIREYE	Timing card, 60 sec purge, 5 sec TFI, use with UVM4 only.	(800)356-8000
E720W-CD	FIREYE	BoilerWorx, Windows communication software for E340, CD ROM, (IBM compatible).	(800)356-8000
E720W-D	FIREYE	BoilerWorx, Windows communication software for E340, 3 1/2" diskette, (IBM compatible).	(800)356-8000
EB342	FIREYE	Chassis for E340 boiler control.	(800)356-8000

EB346	FIREYE	Chassis for E346 boiler control. No agency approvals.	(800)356-8000
EB500	FIREYE	Blank display module.	(800)356-8000
EB700	FIREYE	Replacement chassis for E100/E110	(800)356-8000
EB701	FIREYE	Replacement chassis for E120. 120 VAC. No agency approvals.	(800)356-8000
EB720	FIREYE	Replacement chassis for E200/E210	(800)356-8000
EB721	FIREYE	Replacement chassis for E201/E211	(800)356-8000
EC485	FIREYE	RS232/RS485 converter with power supply and RJ12 jack.	(800)356-8000
EC600	FIREYE	Red dust cover for E100/E110/E120/E200/E201/E210/E211.	(800)356-8000
EC601	FIREYE	High shock dust cover kit used with 60-1915 high shock wiring base.	(800)356-8000
ED150-15	FIREYE	Remote reset cable, 15 feet.	(800)356-8000
ED150-25	FIREYE	Remote reset cable, 25 feet.	(800)356-8000
ED150-3	FIREYE	Remote reset cable, 3 feet.	(800)356-8000
ED150-6	FIREYE	Remote reset cable, 6 feet.	(800)356-8000
ED400	FIREYE	Remote display housing (ED500).	(800)356-8000
ED500	FIREYE	OBSOLETE. Replace w/ ED510 and EP Programmer w/ Engr Code 26 or higher.	(800)356-8000
ED510	FIREYE	2 line x 16 character backlit LCD display with keypad.	(800)356-8000
ED512-2	FIREYE	RJ12 connector cable - 2 feet.	(800)356-8000
ED512-4	FIREYE	RJ12 connector cable - 4 feet.	(800)356-8000
ED512-8	FIREYE	RJ12 connector cable - 8 feet.	(800)356-8000
ED550-2	FIREYE	E500/remote display (ED500) cable, 18 inches.	(800)356-8000
ED550-3	FIREYE	E500/remote display (ED500) cable, 3 feet.	(800)356-8000
ED550-6	FIREYE	E500/remote display (ED500) cable, 6 feet.	(800)356-8000
ED580-1	FIREYE	ED510 remote display cable with RJ45 connector - 1 1/4 inch.	(800)356-8000
ED580-2	FIREYE	ED510 remote display cable with RJ45 connector - 2 feet.	(800)356-8000
ED580-4	FIREYE	ED510 remote display cable with RJ45 connector - 4 feet.	(800)356-8000
ED580-8	FIREYE	ED510 remote display cable with RJ45 connector - 8 feet.	(800)356-8000
ED600	FIREYE	Multi-port cable adaptor for E100 accessories.	(800)356-8000
ED610	FIREYE	Multi-port cable adaptor for E110 accessories.	(800)356-8000
ED611	FIREYE	Multi-port cable adaptor for E110 accessories without ED510 reset.	(800)356-8000
EP100F	FIREYE	Programmer. Selectable purge, selectable TFI, non-recycle, French language.	(800)356-8000
EP100S	FIREYE	Programmer. Selectable purge, selectable TFI, non-recycle, Spanish language.	(800)356-8000
EP113D	FIREYE	Programmer. Selectable pre-purge, non-recycle. For use with E200/E210/E201/E211 only. Messages in German.	(800)356-8000
EP113E	FIREYE	Programmer. Selectable pre-purge, non-recycle. For use with E200/E210/E201/E211 only. Messages in English.	(800)356-8000
EP113ES	FIREYE	Programmer. Selectable pre-purge, non-recycle. For use with E200/E210/E201/E211 only. Messages in Spanish.	(800)356-8000
EP113F	FIREYE	Programmer. Selectable pre-purge, non-recycle. For use with E200/E210/E201/E211 only. Messages in French.	(800)356-8000
EP113NL	FIREYE	Programmer. Selectable pre-purge, non-recycle. For use with E200/E210/E201/E211 only. Messages in Dutch.	(800)356-8000
EP113SW	FIREYE	Programmer. Selectable pre-purge, non-recycle. For use with E200/E210/E201/E211 only. Messages in Swedish.	(800)356-8000
EP160	FIREYE	Programmer. Selectable purge (30 sec min.), 10 and 15 sec. TFI, non-recycle.	(800)356-8000
EP161	FIREYE	Programmer. Selectable purge (30 sec min.), 10 and 30 sec. TFI, non-recycle.	(800)356-8000

EP162	FIREYE	OBSOLETE. Use EP100S.	(800)356-8000
EP163	FIREYE	Programmer. Selectable purge (30 sec min.), selectable TFI via ED510 display, non-recycle.	(800)356-8000
EP165	FIREYE	Programmer. Selectable purge (30 sec min.), pilot stabilization, non-recycle, 10 and 10 sec TFI.	(800)356-8000
EP166	FIREYE	Programmer. Selectable purge (30 sec min.), pilot stabilization, non-recycle, 10 and 15 sec TFI programmer.	(800)356-8000
EP170	FIREYE	Programmer. Selectable purge (30 sec min.), 5 and 10 sec. TFI, non-recycle, early spark termination.	(800)356-8000
EP174	FIREYE	Programmer. Selectable purge (30 sec min.), 5 and 10 sec. TFI, non-recycle, early spark termination. M-D circuit must be proven through the completion of MTFI.	(800)356-8000
EP177	FIREYE	Programmer. Early spark termination. ED510 to select purge (30 sec min.), prove air flow, prove high fire, prove low fire, and post purge. Early spark termination. Infinite hold on M-D circuit.	(800)356-8000
EP200F	FIREYE	Programmer. Selectable purge (30 sec min.), selectable TFI, recycle, French language.	(800)356-8000
EP200S	FIREYE	Programmer. Selectable purge (30 sec min.), selectable TFI, recycle, Spanish language.	(800)356-8000
EP260	FIREYE	Programmer. Selectable purge (30 sec min.), 10 and 15 sec. TFI, recycle.	(800)356-8000
EP261	FIREYE	Programmer. Selectable purge (30 sec min.), 10 and 30 sec. TFI, recycle.	(800)356-8000
EP265	FIREYE	Programmer. Selectable purge (30 sec min.), pilot stabilization, recycle, 10 and 10 sec TFI.	(800)356-8000
EP270	FIREYE	Programmer. Selectable purge (30 sec min.), 5 and 10 sec. TFI, recycle, early spark termination.	(800)356-8000
EP300F	FIREYE	Programmer. Selectable purge (30 sec min.), selectable recycle/non-recycle, 5 and 10 sec TFI, no modulation, French language.	(800)356-8000
EP300S	FIREYE	Programmer. Selectable purge (30 sec min.), selectable recycle/non-recycle, 5 and 10 sec TFI, no modulation, Spanish language.	(800)356-8000
EP340	FIREYE	Programmer module for E340 boiler control.	(800)356-8000
EP380	FIREYE	Programmer. Selectable purge (30 sec min), 5 and 10 sec TFI, selectable recycle/non-recycle, no modulation.	(800)356-8000
EP381	FIREYE	Programmer. Selectable purge (15 sec min), 5 and 10 sec TFI, selectable recycle/non-recycle, no modulation.	(800)356-8000
EP382	FIREYE	Programmer. Selectable purge (0 sec min), 5 and 10 sec TFI, selectable recycle/non-recycle, no modulation.	(800)356-8000
EP383	FIREYE	Programmer. Selectable purge, selectable TFI, selectable recycle/non-recycle via ED510, no modulation, no agency approvals.	(800)356-8000
EP387	FIREYE	Programmer. Selectable purge (15 sec min), 5 and 10 sec TFI, selectable recycle/non-recycle, no modulation, Infinite hold on M - D circuit..	(800)356-8000
EP390	FIREYE	Programmer. Selectable purge (90 sec min), 5 and 10 sec TFI, selectable recycle/non-recycle, no modulation.	(800)356-8000
EPD160	FIREYE	Programmer. 30 sec purge, 10 and 15 sec TFI, non-recycle.	(800)356-8000
EPD161	FIREYE	Programmer. 30 sec purge, 10 and 30 sec TFI, non-recycle.	(800)356-8000
EPD167	FIREYE	Programmer. 30 sec purge, 10 and 15 sec TFI, non-recycle. Infinite hold on M - D circuit.	(800)356-8000
EPD170	FIREYE	Programmer. 30 sec purge, 5 and 10 sec TFI, non-recycle, early spark termination.	(800)356-8000
EPD260	FIREYE	Programmer. 30 sec purge, 10 and 15 sec TFI, recycle.	(800)356-8000
EPD261	FIREYE	Programmer. 30 sec purge, 10 and 30 sec TFI, recycle.	(800)356-8000

EPD270	FIREYE	Programmer. 30 sec purge, 5 and 10 sec TFI, recycle, early spark termination.	(800)356-8000
EPD380	FIREYE	Programmer. 30 sec purge, 5 and 10 sec TFI, recycle, no modulation.	(800)356-8000
EPD381	FIREYE	Programmer. 15 sec purge, 5 and 10 sec TFI, recycle, no modulation.	(800)356-8000
EPD382	FIREYE	Programmer. 0 sec purge, 5 and 10 sec TFI, recycle, no modulation.	(800)356-8000
EPD390	FIREYE	Programmer. 90 sec purge, 5 and 10 sec TFI, recycle, no modulation.	(800)356-8000
ERT1	FIREYE	Flame rectification amplifier, use with 45CM or 69ND.	(800)356-8000
EUV1	FIREYE	Ultraviolet amplifier, use with UV1 or 45UV3.	(800)356-8000
EUVS4	FIREYE	Ultraviolet self check amplifier. Use with 45UV5-1007, -1008, -1009	(800)356-8000
FM-03026136	FIREYE	Replacement Fastening for FMVGP 10-15	(800)356-8000
FM-03089042	FIREYE	Outlet Pressure Adjustment Spring for FMGDJ15T yellow for pressure range 1-6 in. wc, (2-16 mbar)	(800)356-8000
FM-03089043	FIREYE	Outlet Pressure Adjustment Spring for FMGDJ15T black for pressure range 4-8 in. wc, (10-20 mbar)	(800)356-8000
FM-03089044	FIREYE	Outlet Pressure Adjustment Spring for FMGDJ15T orange for pressure range 7-11 in. wc, (16-28 mbar)	(800)356-8000
FM-03089045	FIREYE	Outlet Pressure Adjustment Spring for FMGDJ15T brown for pressure range 9-16 in. wc, (22-40 mbar)	(800)356-8000
FM-03089047	FIREYE	Outlet Pressure Adjustment Spring for FMGDJ15T light green/light blue for pressure range 16-22 in. wc, (40-50 mbar)	(800)356-8000
FM-03089048	FIREYE	Outlet Pressure Adjustment Spring for FMGDJ20T & FMGDJ25T yellow for pressure range 2-6 in. wc, (5-15 mbar)	(800)356-8000
FM-03089049	FIREYE	Outlet Pressure Adjustment Spring for FMGDJ20T & FMGDJ25T black for pressure range 5-10 in. wc, (12.5-25 mbar)	(800)356-8000
FM-03089050	FIREYE	Outlet Pressure Adjustment Spring for FMGDJ20T & FMGDJ25T orange for pressure range 9-14 in. wc, (22.5-35 mbar)	(800)356-8000
FM-03089051	FIREYE	Outlet Pressure Adjustment Spring for FMGDJ20T & FMGDJ25T yellow/black for pressure range 10-30 in. wc, (25-75 mbar)	(800)356-8000
FM-03089052	FIREYE	Outlet Pressure Adjustment Spring for FMGDJ20T & FMGDJ25T pink/gold for pressure range 28-40 in. wc, (70-100 mbar)	(800)356-8000
FM-03089053	FIREYE	Outlet Pressure Adjustment Spring for FMGDJ40T red/yellow for pressure range 2-6 in. wc, (5-15 mbar)	(800)356-8000
FM-03089054	FIREYE	Outlet Pressure Adjustment Spring for FMGDJ40T red/black for pressure range 5-10 in. wc, (12.5-25 mbar)	(800)356-8000
FM-03089055	FIREYE	Outlet Pressure Adjustment Spring for FMGDJ40T red/orange for pressure range 9-14 in. wc, (22.5-35 mbar)	(800)356-8000
FM-03089056	FIREYE	Outlet Pressure Adjustment Spring for FMGDJ20T & FMGDJ25T yellow/orange for pressure range 36-64 in. wc, (90-160 mbar) and for FMGDJ 40T for pressure range 10-30 in. wc, (25-75 mbar)	(800)356-8000
FM-03089057	FIREYE	Outlet Pressure Adjustment Spring for FMGDJ40T pink/silver for pressure range 28-40 in. wc, (70-100 mbar)	(800)356-8000
FM-03089058	FIREYE	Outlet Pressure Adjustment Spring for FMGDJ50T dark blue/yellow for pressure range 2-6 in. wc, (5-15 mbar)	(800)356-8000
FM-03089059	FIREYE	Outlet Pressure Adjustment Spring for FMGDJ50T dark blue/black for pressure range 5-10 in. wc, (12.5-25 mbar)	(800)356-8000
FM-03089060	FIREYE	Outlet Pressure Adjustment Spring for FMGDJ50T dark blue/orange for pressure range 9-14 in. wc, (22.5-35 mbar)	(800)356-8000

FM-03089061	FIREYE	Outlet Pressure Adjustment Spring for FMGDJ50T yellow/ dark green for pressure range 10-30 in. wc, (25-75 mbar)	(800)356-8000
FM-03089062	FIREYE	Outlet Pressure Adjustment Spring for FMGDJ40T grey/gold for pressure range 36-64 in. wc, (90-160 mbar) and for FMGDJ 50T for pressure range 28-40 in. wc, (70-100 mbar)	(800)356-8000
FM-03109412	FIREYE	Replacement O-ring for FMVGP 10-15	(800)356-8000
FM-03109455	FIREYE	Replacement O-ring for FMVGP 20-25	(800)356-8000
FM-03109489	FIREYE	Replacement Sealing for FMVGP 20-25	(800)356-8000
FM-03110012	FIREYE	Replacement O-Ring for use with FMGFK 80/100	(800)356-8000
FM-03110028	FIREYE	Replacement O-Ring for use with FMGFK 40/50/65	(800)356-8000
FM-03110031	FIREYE	Replacement O-Ring for use with FMGFK 25/32	(800)356-8000
FM-03110108	FIREYE	Replacement O-Ring for use with FMGFK 15/20	(800)356-8000
FM-03110337	FIREYE	Replacement O-Ring for FMVGP 20-25	(800)356-8000
FM-03110369	FIREYE	Replacement O-Ring for FMVGP 10-15	(800)356-8000
FM10CF	FIREYE	2 1/2 inch FM supervisory cock, flanged.	(800)356-8000
FM10CT	FIREYE	2 1/2 inch FM supervisory cock, threaded.	(800)356-8000
FM12AF	FIREYE	3 inch FM supervisory cock, flanged.	(800)356-8000
FM12AT	FIREYE	3 inch FM supervisory cock, threaded.	(800)356-8000
FM16AF	FIREYE	4 inch FM supervisory cock, flanged.	(800)356-8000
FM24AF	FIREYE	6 inch FM supervisory cock, flanged.	(800)356-8000
FM-34213465	FIREYE	Replacement Rect. Board for all FMVGP solenoid valves	(800)356-8000
FM-34328197	FIREYE	Grommet DL..E IP42	(800)356-8000
FM-34330703	FIREYE	Grommet DL..E IP44/45	(800)356-8000
FM-35442546	FIREYE	Replacement Seal for FMVGP 20-25	(800)356-8000
FM-35442777	FIREYE	Replacement Seal for FMVGP 10-15	(800)356-8000
FM-35449236	FIREYE	Replacement Sealing for FMVGP 10-15	(800)356-8000
FM-35452600	FIREYE	Replacement Coil for FMVGP 20-25	(800)356-8000
FM-35452601	FIREYE	Replacement Coil for FMVGP 10-15	(800)356-8000
FM-35454400	FIREYE	Replacement Connector for FMVGP 10-15	(800)356-8000
FM3GT	FIREYE	3/4 inch FM supervisory cock, threaded.	(800)356-8000
FM4GT	FIREYE	1 inch FM supervisory cock, threaded.	(800)356-8000
FM5GT	FIREYE	1 1/4 inch FM supervisory cock, threaded.	(800)356-8000
FM6GT	FIREYE	1 1/2 inch FM supervisory cock, threaded.	(800)356-8000
FM-71935010	FIREYE	10 Filter & O-ring pack for use with FMGFK 15/20	(800)356-8000
FM-71937010	FIREYE	10 Filter & O-ring pack for use with FMGFK 25/35	(800)356-8000
FM-71939010	FIREYE	5 Filter & O-ring pack for use with FMGFK 40/50	(800)356-8000
FM-74912952	FIREYE	DG,DL tube set with 2m PVC tube, connecting nipple with screws and tube liners	(800)356-8000
FM-74913661	FIREYE	Z-Shaped Angle Bracket with screws fastening set for DL 3- 15A, 3K, 1-3E	(800)356-8000
FM-74915366	FIREYE	DL tube set with 2m PVC tube and tube liners	(800)356-8000
FM-74916120	FIREYE	Pilot Lamp 24VDC green	(800)356-8000
FM-74916121	FIREYE	Pilot Lamp 110/240VAC green	(800)356-8000
FM-74916158	FIREYE	Z-Shaped Angle Bracket with screws fastening set for DL 5- 50E, 5-150K	(800)356-8000
FM-74916161	FIREYE	U-Shaped Angle Bracket with screws fastening set for DL 3- 150A, 3K, 1-3E	(800)356-8000
FM-74916185	FIREYE	U-Shaped Angle Bracket with screws fastening set for DG and DL	(800)356-8000
FM-75447998	FIREYE	Single filter pad for use with FMGFK 65	(800)356-8000
FM-75448577	FIREYE	Single filter pad for use with FMGFK 80	(800)356-8000
FM-75448579	FIREYE	Single filter pad for use with FMGFK 100	(800)356-8000
FM8CF	FIREYE	2 inch FM supervisory cock, flanged.	(800)356-8000
FM8GT	FIREYE	2 inch FM supervisory cock, threaded.	(800)356-8000
FMDG10HT	FIREYE	Gas or Air high pressure switch, locks with rising pressure. 0.4" wc to 4.0" wc hand wheel adjustable range. Manual Reset. 120V. UL and FM approved	(800)356-8000

FMDG10NT	FIREYE	Gas or Air low pressure switch, locks with falling pressure. 0.4" wc to 4.0" wc hand wheel adjustable range. Manual Reset. 120V. UL and FM approved	(800)356-8000
FMDG10T	FIREYE	Gas or Air pressure switch, with positive (gas or air), negative (air only), or differential (air only) operation. 0.4" wc to 4.0" wc hand wheel adjustable range. Automatic reset. 120V. UL and FM approved	(800)356-8000
FMDG10TG	FIREYE	Gas or Air pressure switch, with positive (gas or air), negative (air only), or differential (air only) operation. 0.4" wc to 4.0" wc hand wheel adjustable range. Automatic reset. 30V. UL and FM approved	(800)356-8000
FMDG110VT62W	FIREYE	Gas pressure switch, for gas and air, with hand wheel for switching point adjustment. Automatic reset. 1/8" NPT male fitting, 12-44"wc, 120V, UL and FM approved	(800)356-8000
FMDG110VT62WG	FIREYE	Gas pressure switch, for gas and air, with hand wheel for switching point adjustment. Automatic reset. 1/8" NPT male fitting, 12-44"wc, 30V, UL and FM approved	(800)356-8000
FMDG110VT82W	FIREYE	Gas pressure switch, for gas and air, with hand wheel for switching point adjustment. Automatic reset. 1/4" NPT male fitting, 12-44"wc, 120V, UL and FM approved	(800)356-8000
FMDG110VT82WG	FIREYE	Gas pressure switch, for gas and air, with hand wheel for switching point adjustment. Automatic reset. 1/4" NPT male fitting, 12-44"wc, 30V, UL and FM approved	(800)356-8000
FMDG150HT	FIREYE	Gas or Air high pressure switch, locks with rising pressure. 12" wc to 60" wc hand wheel adjustable range. Manual Reset. 120V. UL and FM approved	(800)356-8000
FMDG150NT	FIREYE	Gas or Air low pressure switch, locks with falling pressure. 12" wc to 60" wc hand wheel adjustable range. Manual Reset. 120V. UL and FM approved	(800)356-8000
FMDG150T	FIREYE	Gas or Air pressure switch, with positive (gas or air), negative (air only), or differential (air only) operation. 12" wc to 60" wc hand wheel adjustable range. Automatic reset. 120V. UL and FM approved	(800)356-8000
FMDG150TG	FIREYE	Gas or Air pressure switch, with positive (gas or air), negative (air only), or differential (air only) operation. 12" wc to 60" wc hand wheel adjustable range. Automatic reset. 30V. UL and FM approved	(800)356-8000
FMDG17VT62W	FIREYE	Gas pressure switch, for gas and air, with hand wheel for switching point adjustment. Automatic reset. 1/8" NPT male fitting, 1.2-7.2"wc, 120V, UL and FM approved	(800)356-8000
FMDG17VT62WG	FIREYE	Gas pressure switch, for gas and air, with hand wheel for switching point adjustment. Automatic reset. 1/8" NPT male fitting, 1.2-7.2"wc, 30V, UL and FM approved	(800)356-8000
FMDG17VT82W	FIREYE	Gas pressure switch, for gas and air, with hand wheel for switching point adjustment. Automatic reset. 1/4" NPT male fitting, 1.2-7.2"wc, 120V, UL and FM approved	(800)356-8000
FMDG17VT82WG	FIREYE	Gas pressure switch, for gas and air, with hand wheel for switching point adjustment. Automatic reset. 1/4" NPT male fitting, 1.2-7.2"wc, 30V, UL and FM approved	(800)356-8000
FMDG300VT62W	FIREYE	Gas pressure switch, for gas and air, with hand wheel for switching point adjustment. Automatic reset. 1/8" NPT male fitting, 40-120"wc, 120V, UL and FM approved	(800)356-8000

FMDG300VT62WG	FIREYE	Gas pressure switch, for gas and air, with hand wheel for switching point adjustment. Automatic reset. 1/8" NPT male fitting, 40-120"wc, 30V, UL and FM approved	(800)356-8000
FMDG300VT82W	FIREYE	Gas pressure switch, for gas and air, with hand wheel for switching point adjustment. Automatic reset. 1/4" NPT male fitting, 40-120"wc, 120V, UL and FM approved	(800)356-8000
FMDG300VT82WG	FIREYE	Gas pressure switch, for gas and air, with hand wheel for switching point adjustment. Automatic reset. 1/4" NPT male fitting, 40-120"wc, 30V, UL and FM approved	(800)356-8000
FMDG40VT62W	FIREYE	Gas pressure switch, for gas and air, with hand wheel for switching point adjustment. Automatic reset. 1/8" NPT male fitting, 3-17"wc, 120V, UL and FM approved	(800)356-8000
FMDG40VT62WG	FIREYE	Gas pressure switch, for gas and air, with hand wheel for switching point adjustment. Automatic reset. 1/8" NPT male fitting, 3-17"wc, 30V, UL and FM approved	(800)356-8000
FMDG40VT82W	FIREYE	Gas pressure switch, for gas and air, with hand wheel for switching point adjustment. Automatic reset. 1/4" NPT male fitting, 3-17"wc, 120V, UL and FM approved	(800)356-8000
FMDG40VT82WG	FIREYE	Gas pressure switch, for gas and air, with hand wheel for switching point adjustment. Automatic reset. 1/4" NPT male fitting, 3-17"wc, 30V, UL and FM approved	(800)356-8000
FMDG500HT	FIREYE	Gas or Air high pressure switch, locks with rising pressure. 40" wc to 200" wc hand wheel adjustable range. Manual Reset. 120V. UL and FM approved	(800)356-8000
FMDG500NT	FIREYE	Gas or Air low pressure switch, locks with falling pressure. 40" wc to 200" wc hand wheel adjustable range. Manual Reset. 120V. UL and FM approved	(800)356-8000
FMDG500T	FIREYE	Gas or Air pressure switch, with positive (gas or air), negative (air only), or differential (air only) operation. 40" wc to 200" wc hand wheel adjustable range. Automatic reset. 120V. UL and FM approved	(800)356-8000
FMDG500TG	FIREYE	Gas or Air pressure switch, with positive (gas or air), negative (air only), or differential (air only) operation. 40" wc to 200" wc hand wheel adjustable range. Automatic reset. 30V. UL and FM approved	(800)356-8000
FMDG50HT	FIREYE	Gas or Air high pressure switch, locks with rising pressure. 1" wc to 20" wc hand wheel adjustable range. Manual Reset. 120V. UL and FM approved	(800)356-8000
FMDG50NT	FIREYE	Gas or Air low pressure switch, locks with falling pressure. 1" wc to 20" wc hand wheel adjustable range. Manual Reset. 120V. UL and FM approved	(800)356-8000
FMDG50T	FIREYE	Gas or Air pressure switch, with positive (gas or air), negative (air only), or differential (air only) operation. 1" wc to 20" wc hand wheel adjustable range. Automatic reset. 120V. UL and FM approved	(800)356-8000
FMDG50TG	FIREYE	Gas or Air pressure switch, with positive (gas or air), negative (air only), or differential (air only) operation. 1" wc to 20" wc hand wheel adjustable range. Automatic reset. 30V. UL and FM approved	(800)356-8000
FMDG6T	FIREYE	Gas or Air pressure switch, with positive (gas or air), negative (air only), or differential (air only) operation. 0.2" wc to 2.4" wc hand wheel adjustable range. Automatic reset. 120V. UL and FM approved	(800)356-8000
FMDG6TG	FIREYE	Gas or Air pressure switch, with positive (gas or air), negative (air only), or differential (air only) operation. 0.2" wc to 2.4" wc hand wheel adjustable range. Automatic reset. 30V. UL and FM approved	(800)356-8000

FMDL10ET	FIREYE	Air pressure switch, with positive, negative, or differential operation. 0.4" wc to 4.0" wc fixed setpoint. Automatic reset. 120V. Spade-type wiring terminals. Hose barb fittings. UL and FM approved	(800)356-8000
FMDL1ET	FIREYE	Air pressure switch, with positive, negative, or differential operation. .08" wc to 0.4" wc fixed setpoint. Automatic reset. 120V. Spade-type wiring terminals. Hose barb fittings. UL and FM approved	(800)356-8000
FMDL3AT	FIREYE	Air pressure switch, with positive, negative, or differential operation. 1" wc to 20" wc fixed setpoint. Automatic reset. 120V. Screw terminals. 1/4" female NPT pipe fitting as well as hose barb fittings. UL and FM approved	(800)356-8000
FMDL3ET	FIREYE	Air pressure switch, with positive, negative, or differential operation. 0.12" wc to 1.2" wc fixed setpoint. Automatic reset. 120V. Spade-type wiring terminals. Hose barb fittings. UL and FM approved	(800)356-8000
FMDL50ET	FIREYE	Air pressure switch, with positive, negative, or differential operation. 1" wc to 20" wc fixed setpoint. Automatic reset. 120V. Spade-type wiring terminals. Hose barb fittings. UL and FM approved	(800)356-8000
FMDL5ET	FIREYE	Air pressure switch, with positive, negative, or differential operation. 0.2" wc to 2.0" wc fixed setpoint. Automatic reset. 120V. Spade-type wiring terminals. Hose barb fittings. UL and FM approved	(800)356-8000
FMGDJ15TN04-0	FIREYE	Gas pressure regulator, 5psig inlet pressure (max), 9"wc to 16"wc adjustable outlet pressure as standard, 1"wc to 22"wc adjustable ranges available via optional regulator springs. 1/2" female NPT fittings. CSA	(800)356-8000
FMGDJ20TN04-0	FIREYE	Gas pressure regulator, 5psig inlet pressure (max), 9"wc to 14"wc adjustable outlet pressure as standard, 2"wc to 64"wc adjustable ranges available via optional regulator springs. 3/4" female NPT fittings. CSA	(800)356-8000
FMGDJ25TN04-0	FIREYE	Gas pressure regulator, 5psig inlet pressure (max), 9"wc to 14"wc adjustable outlet pressure as standard, 2"wc to 64"wc adjustable ranges available via optional regulator springs. 1" female NPT fittings. CSA	(800)356-8000
FMGDJ40TN04-0	FIREYE	Gas pressure regulator, 5psig inlet pressure (max), 9"wc to 14"wc adjustable outlet pressure as standard, 2"wc to 64"wc adjustable ranges available via optional regulator springs. 1 1/2" female NPT fittings. CSA	(800)356-8000
FMGDJ50TN04-0	FIREYE	Gas pressure regulator, 5psig inlet pressure (max), 9"wc to 14"wc adjustable outlet pressure as standard, 2"wc to 40"wc adjustable ranges available via optional regulator springs. 2" female NPT fittings. CSA	(800)356-8000
FMGFK100TA10-3	FIREYE	Gas Filter, 15psig, 4" flange, 50 micron filter	(800)356-8000
FMGFK15TN10-0	FIREYE	Gas Filter, 15psig, 1/2" NPT, 50 micron filter	(800)356-8000
FMGFK20TN10-0	FIREYE	Gas Filter, 15psig, 3/4" NPT, 50 micron filter	(800)356-8000
FMGFK25TN10-0	FIREYE	Gas Filter, 15psig, 1" NPT, 50 micron filter	(800)356-8000
FMGFK40TN10-0	FIREYE	Gas Filter, 15psig, 1 1/2" NPT, 50 micron filter	(800)356-8000
FMGFK50TA10-0	FIREYE	Gas Filter, 15psig, 2" flange, 50 micron filter	(800)356-8000
FMGFK50TN10-0	FIREYE	Gas Filter, 15psig, 2" NPT, 50 micron filter	(800)356-8000
FMGFK65TA10-0	FIREYE	Gas Filter, 15psig, 2 1/2" flange, 50 micron filter	(800)356-8000
FMGFK80TA10-3	FIREYE	Gas Filter, 15psig, 3" flange, 50 micron filter	(800)356-8000
FMTC218TN05-N	FIREYE	Valve Leak Detection system for field installation with fast opening valves. UL and FM approved.	(800)356-8000
FMTC318TN05-N	FIREYE	Valve Leak Detection system for field installation with slow or manual opening valves. UL and FM approved.	(800)356-8000
FMTC410T-10N	FIREYE	Valve Leak Detection system for panel mount (additional field components such as KSDG pressure switches required). UL and FM approved.	(800)356-8000

FMTC410T-1N	FIREYE	Valve Leak Detection system for panel mount (additional field components such as KSDG pressure switches required). UL and FM approved.	(800)356-8000
FMVGP10TN02Q6	FIREYE	Gas Solenoid Valve, Normally Closed, 3/8" NPT, 120VAC, 2.2psig. UL and FM approved.	(800)356-8000
FMVGP15TN02Q6	FIREYE	Gas Solenoid Valve, Normally Closed, 1/2" NPT, 120VAC, 2.2 psig. UL and FM approved.	(800)356-8000
FMVGP20TN01Q6	FIREYE	Gas Solenoid Valve, Normally Closed, 3/4" NPT, 120VAC, 3psig. UL and FM approved.	(800)356-8000
FMVGP25TN01Q6	FIREYE	Gas Solenoid Valve, Normally Closed, 1" NPT, 120VAC, 3psig. UL and FM approved.	(800)356-8000
FS700W-1	FIREYE	Windows communication software for 45FS1/45UVFS1 - CD.	(800)356-8000
FS950W-1	FIREYE	Windows communication software for InSight scanners/45FS1/45UVFS1 - CD.	(800)356-8000
GH20-04	FIREYE	Gas Hose, 1/2" flexible stainless steel braid, 3/4" NPT, 4 ft.	(800)356-8000
GH20-06	FIREYE	Gas Hose, 1/2" flexible stainless steel braid, 3/4" NPT, 6 ft.	(800)356-8000
GH20-08	FIREYE	Gas Hose, 1/2" flexible stainless steel braid, 3/4" NPT, 8 ft.	(800)356-8000
IC485	FIREYE	Opto-isolated RS232/RS485 converter.	(800)356-8000
LA221419-002	FIREYE	Replace with LA221419-006	(800)356-8000
LA221419-003	FIREYE	Replace with LA221419-008	(800)356-8000
LA221419-004	FIREYE	O2 probe assembly (for flues 300mm to 1000mm). Includes ambient temperature sensor, flange kit, and transformer.	(800)356-8000
LA221419-006	FIREYE	O2 probe assembly (for flues 600mm to 2000mm). Includes ambient temperature sensor, flange kit, and transformer.	(800)356-8000
LA221419-008	FIREYE	O2 probe assembly (for flues 1200mm to 4000mm). Includes ambient temperature sensor, flange kit, and transformer.	(800)356-8000
MART1	FIREYE	Flame rect amp. 2-4 sec FFRT. Use with 69ND, 45CM.	(800)356-8000
MART1T	FIREYE	Flame rect amp. .8 sec FFRT. Use with 69ND, 45CM.	(800)356-8000
MART3	FIREYE	Flame rect amp. 3 sec FFRT. Use with 69ND, 45CM.	(800)356-8000
MAUV1	FIREYE	UV amp, 2-4 sec FFRT. Use with UV1, UV2, 45UV3.	(800)356-8000
MAUV1T	FIREYE	UV amp, .8 sec FFRT. Use with UV1, UV2, 45UV3.	(800)356-8000
MAUV3	FIREYE	UV amp, 3 sec FFRT. Use with UV1, UV2, 45UV3.	(800)356-8000
MB500	FIREYE	Alpha-numeric remote display without keypad	(800)356-8000
MB510	FIREYE	Alpha-numeric remote display with keypad	(800)356-8000
MB-600L	FIREYE	Replacement Logic module for Multi-flame system.	(800)356-8000
MB-600M	FIREYE	Replacement Mother board for Multi-flame system.	(800)356-8000
MB-600P	FIREYE	Replacement Power Module for Multi-flame system.	(800)356-8000
MB-600PF	FIREYE	Flame sensor module, UV/Self check UV, or FR with screw tabs for mounting on MB-600S multi-burner control system.	(800)356-8000
MB-600R	FIREYE	Replacement Relay module for Multi-flame system.	(800)356-8000
MB-600S	FIREYE	Multi-Flame System, 120 VAC, 50/60 Hz consisting of motherboard (MB-600M), relay board (MB-600R), logic module (MB-600L), and power module (MB-600P), contains 4 aux inputs, purge modulation, valve leak testing	(800)356-8000
MB-604E	FIREYE	Expansion module for up to 4 additional burners	(800)356-8000
MB-608E	FIREYE	Expansion module for up to 8 additional burners	(800)356-8000
MB-632M	FIREYE	Replacement Mother board with RS232 communications for MB-632S.	(800)356-8000
MB-632S	FIREYE	Same as MB-600S except motherboard is MB-632M for RS-232 communications.	(800)356-8000
MB-685M	FIREYE	Replacement Mother board with RS485 communications for MB-685S.	(800)356-8000

MB-685S	FIREYE	Same as MB-600S except motherboard is MB-685M for RS-485 communications.	(800)356-8000
MBB-300D	FIREYE	Wiring base for FlameWorx II DIN rail mount modules.	(800)356-8000
MBFR-100D	FIREYE	OBSOLETE	(800)356-8000
MBFR-100R	FIREYE	Flame rectification FlameWorx module - 19" rack mount.	(800)356-8000
MBHPS-100D	FIREYE	120 VAC power supply for UV, UV self-check, and FR scanners.	(800)356-8000
MBHPS-200D	FIREYE	230 VAC power supply for UV, UV self-check, and FR scanners.	(800)356-8000
MBIR-100D	FIREYE	OBSOLETE	(800)356-8000
MBIR-100R	FIREYE	Infrared FlameWorx module - 19" rack mount.	(800)356-8000
MBLPS-100D	FIREYE	120 VAC power supply for FlameWorxs modules.	(800)356-8000
MBLPS-200D	FIREYE	230 VAC power supply for FlameWorx modules.	(800)356-8000
MBPF-100S	FIREYE	Flame sensor module, UV/Self check UV, or FR to be used with stand-alone wiring base (60-2726).	(800)356-8000
MBPS-100R	FIREYE	120 VAC power supply for FlameWorx modules and flame scanners - 19" rack mount.	(800)356-8000
MBPS-200R	FIREYE	230 VAC power supply for FlameWorx modules and flame scanners - 19" rack mount.	(800)356-8000
MBUV-100D	FIREYE	Replace with MBUV-300D	(800)356-8000
MBUV-100R	FIREYE	Ultra-violet FlameWorx module - 19" rack mount.	(800)356-8000
MBUV-300D	FIREYE	Ultra-violet (UV1A) FlameWorx II module with test jacks - DIN rail mount.	(800)356-8000
MBUV-310D	FIREYE	Ultra-violet (UV1A) FlameWorx II module without test jacks - DIN rail mount.	(800)356-8000
MBUV-310DC	FIREYE	Ultra-violet (UV1A) FlameWorx II module without test jacks with remote communications. - DIN rail mount.	(800)356-8000
MBUVS-100D	FIREYE	Replace with MBUVS-301D	(800)356-8000
MBUVS-100R	FIREYE	Ultra-violet self-check FlameWorx module - 19" rack mount.	(800)356-8000
MBUVS-301D	FIREYE	Ultra-violet self check (45UV5-1007, -1008, -1009) FlameWorx II module with test jacks - DIN rail mount.	(800)356-8000
MBUVS-311D	FIREYE	Ultra-violet self check (45UV5-1007, -1008, -1009) FlameWorx II module without test jacks - DIN rail mount.	(800)356-8000
MBUVS-311DC	FIREYE	Ultra-violet self check (45UV5-1007, -1008, -1009) FlameWorx II module without test jacks with remote communications - DIN rail mount.	(800)356-8000
MC120	FIREYE	120 VAC, 50/60 Hz Chassis.	(800)356-8000
MC120E	FIREYE	120 VAC, 50/60 Hz Chassis. Meets European EN230, EN298 approval.	(800)356-8000
MC120P	FIREYE	120 VAC, 50/60 Hz Chassis with remote reset and post purge.	(800)356-8000
MC120R	FIREYE	120 VAC, 50/60 Hz Chassis with remote reset.	(800)356-8000
MC120RE	FIREYE	120 VAC, 50/60 Hz Chassis with remote reset. Meets European EN230, EN298 approval.	(800)356-8000
MC230	FIREYE	230 VAC Chassis. Meets European EN230, EN298 approval.	(800)356-8000
MC230R	FIREYE	230 VAC Chassis with remote reset. Meets European EN230, EN298 approval.	(800)356-8000
MEC120	FIREYE	120 VAC, 50/60 Hz Chassis with standard plug-in daughter board	(800)356-8000
MEC120C	FIREYE	120 VAC, 50/60 Hz Chassis with interface to E500 Communication Interface and Modbus capability.	(800)356-8000
MEC120D	FIREYE	120 VAC, 50/60 Hz Chassis with alpha-numeric display interface to ED510.	(800)356-8000
MEC120R	FIREYE	120 VAC, 50/60 Hz Chassis with remote reset.	(800)356-8000
MEC120RC	FIREYE	120 VAC, 50/60 Hz Chassis with remote reset capability, interface to ED510, interface to E500 Comm. Interface, and Modbus capability.	(800)356-8000

MEC120RD	FIREYE	120 VAC, 50/60 Hz Chassis with remote reset capability and interface to ED510.	(800)356-8000
MEC230	FIREYE	230 VAC, 50/60 Hz Chassis with standard plug-in board.	(800)356-8000
MEC230RC	FIREYE	230 VAC, 50/60 Hz Chassis with remote reset capability, interface to ED510, interface to E500 Comm. Interface, and Modbus capability.	(800)356-8000
MEC320	FIREYE	MicroM chassis with local reset; 120 VAC, 50/60 Hz, provides independent relay outputs on terminals 3 and 4. For use with MEP300, 400, and 600 series programmers.	(800)356-8000
MEC320C	FIREYE	MicroM MEC320 chassis with interface to E500 Communication Interface and Modbus capability. For use with MEP300, 400, and 600 series programmers.	(800)356-8000
MEC320D	FIREYE	MicroM MEC320 chassis with alpha-numeric display interface to ED510. For use with MEP300, 400, and 600 series programmers.	(800)356-8000
MEC320R	FIREYE	MicroM MEC320 chassis with remote reset. For use with MEP300, 400, and 600 series programmers.	(800)356-8000
MEC320RC	FIREYE	MicroM MEC320 chassis with remote reset capability, interface to ED510, interface to E500 Comm. Interface, and Modbus capability. For use with MEP300, 400, and 600 series programmers.	(800)356-8000
MEC320RD	FIREYE	MicroM MEC320 chassis with remote reset capability and interface to ED510. For use with MEP300, 400, and 600 series programmers.	(800)356-8000
MEC480	FIREYE	MicroM chassis with local reset; 230 VAC, 50/60 Hz, provides independent relay outputs on terminals 3 and 4. For use with MEP300, 400, and 600 series programmers.	(800)356-8000
MECD1	FIREYE	Cadmium sulphide amp, 0.8 sec FFRT. Use with CS1A5 scanner.	(800)356-8000
MECD4	FIREYE	Cadmium sulphide amp, 3 sec FFRT. Use with CS1A5 scanner.	(800)356-8000
MED1	FIREYE	Standard daughter board, local reset switch.	(800)356-8000
MED2	FIREYE	Daughter board with local reset switch, display output.	(800)356-8000
MED3	FIREYE	Daughter board with local reset switch, remote reset.	(800)356-8000
MED4	FIREYE	Daughter board with local reset switch, display output and remote reset.	(800)356-8000
MED5	FIREYE	Daughter board with local reset switch, display output and communications.	(800)356-8000
MED6	FIREYE	Daughter board with local reset switch, display output, remote reset, and communications.	(800)356-8000
MED7	FIREYE	Daughter board with local reset switch, communications.	(800)356-8000
MEDC2	FIREYE	Amplifier for use with dry contact input from 85UVF flame scanner, 0.30 sec FFRT.	(800)356-8000
MEIR1	FIREYE	Infrared amp, 0.8 sec FFRT. Use with 48PT2 scanner.	(800)356-8000
MEIR4	FIREYE	Infrared amp, 3 sec FFRT. Use with 48PT2 scanner.	(800)356-8000
MEP100	FIREYE	Programmer, Relight function, 10 sec PTFI.	(800)356-8000
MEP100P	FIREYE	Programmer, Relight operation, 10 sec PTFI, 15 sec post purge.	(800)356-8000
MEP101	FIREYE	Programmer, Relight function, allow flame signal until 60 seconds after interlock circuit closes.	(800)356-8000
MEP102	FIREYE	Programmer, Non-recycle on flame fail, 5 second PTFI.	(800)356-8000
MEP103	FIREYE	Programmer, Fixed 10 sec SISP*, 10 sec MTFI, re-try once on pilot failure, fixed 30 sec post purge. *Spark Igniter Sensing Period	(800)356-8000
MEP104	FIREYE	Programmer, Non-recycle on flame fail, 10 second PTFI.	(800)356-8000
MEP105	FIREYE	Programmer, Non-recycle on flame fail, lockout on air-flow open with flame present, 10 second PTFI.	(800)356-8000

MEP106	FIREYE	Relight operation, 12 sec purge, 10 sec PTFI, reset lockout on line power interruption.	(800)356-8000
MEP107	FIREYE	5 sec purge, 10 second PTFI, 5 minute delay following flame failure. For natural draft atmospheric gas burners	(800)356-8000
MEP108	FIREYE	Non-recycle operation, 0 sec purge, 15 second PTFI, 10 second post purge, no FM Approval.	(800)356-8000
MEP109	FIREYE	Programmer, Immediate ignition and pilot after limits are closed, 10 sec PTFI (fixed), 10 sec MTFI, intermittent pilot, non-recycle on flame fail.	(800)356-8000
MEP130	FIREYE	Programmer, Relight operation, 30 sec PTFI, no agency approvals	(800)356-8000
MEP230	FIREYE	Programmer, Selectable recycle/non-recycle function, TFI timing, purge timing, post purge, prove open at start.	(800)356-8000
MEP230H	FIREYE	Programmer, Selectable recycle/non-recycle function, TFI timing, purge timing, post purge, prove open at start, 8 sec pilot stabilization.	(800)356-8000
MEP235	FIREYE	Programmer, Selectable recycle/non-recycle function, TFI timing, purge timing, post purge, prove open at start, lockout on air flow open 10 seconds after the start of a cycle, selectable recycle/non-recycle lockout on air flow open after flame is proven, and dedicated lockout after loss of flame.	(800)356-8000
MEP236	FIREYE	Programmer, Selectable recycle/non-recycle function, TFI timing, purge timing, post purge, prove open at start with additional 6 second ignitor on time with main fuel. To be used with intermittent pilot only,	(800)356-8000
MEP237	FIREYE	Programmer, Selectable recycle/non-recycle function, TFI timing, purge timing, post purge, prove open at start. Provides 0.30 second flame failure response time, for use with 85UVF flame scanner and MEDC2 amplifier.	(800)356-8000
MEP238	FIREYE	Programmer, Selectable recycle/non-recycle function, TFI timing, purge timing, post purge, prove open at start. Ignition de-energized 3 seconds after pilot detected. Provides 8 second pilot stabilization period.	(800)356-8000
MEP290	FIREYE	Programmer, Selectable recycle/non-recycle function, TFI timing, purge timing, prove open at start, and post purge (0 to 90 seconds).	(800)356-8000
MEP300	FIREYE	Programmer, relight operation on main flame fail, lockout on PTFI and MTFI flame fail, 10 sec PTFI (fixed), 5 sec pilot proving, 5 sec MTFI.	(800)356-8000
MEP304	FIREYE	Programmer, 5 sec purge, 10 sec PTFI (fixed), 5 sec pilot proving, 10 sec MTFI, interrupted pilot, interrupted ignition, non-recycle on flame fail.	(800)356-8000
MEP397	FIREYE	Programmer, 15 sec purge, provides interrupted ignition, interrupted pilot, non re-cycle on flame fail.	(800)356-8000
MEP536	FIREYE	Programmer, Selectable recycle/non-recycle function, TFI timing, purge timing, post purge, prove open at start, 10 sec main trial for ignition, run-check switch.	(800)356-8000
MEP537	FIREYE	Programmer, Selectable purge, PTFI, post purge, prove open at start, recycle/non-recycle (with one recycle on flame fail), 10 sec MTFI.	(800)356-8000
MEP560	FIREYE	Programmer, Selectable recycle/non-recycle function, TFI timing, purge timing, post purge, prove open at start, 8 sec pilot stabilization, 10 sec main trial for ignition, run-check switch.	(800)356-8000
MEP561	FIREYE	Programmer, Selectable recycle/non-recycle function, TFI timing, purge timing, post purge (30 sec max), prove open at start, 10 sec main trial for ignition, run-check switch.	(800)356-8000

MEP562		Programmer, Selectable TFI timing, purge timing, post purge, prove open at start, 8 sec pilot stabilization, 10 sec main trial for ignition, with lockout on loss of air flow. Non-recycle, run-check switch.	(800)356-8000
	FIREYE		
MERT1	FIREYE	Flame rect amp. 0.8 sec FFRT. Use with 69ND, 45CM.	(800)356-8000
MERT4	FIREYE	Flame rect amp. 3 sec FFRT. Use with 69ND, 45CM.	(800)356-8000
MEUV1	FIREYE	UV amp, 0.8 sec FFRT. Use with UV1, UV2, 45UV3.	(800)356-8000
MEUV4	FIREYE	UV amp, 3 sec FFRT. Use with UV1, UV2, 45UV3.	(800)356-8000
MEUVS1			
	FIREYE	UV self check amp, 0.8 sec FFRT. Use with 45UV5-1008, -1009.	(800)356-8000
MEUVS4			
	FIREYE	UV self check amp, 3 sec FFRT. Use with 45UV5-1008, -1009.	(800)356-8000
MP100	FIREYE	Programmer, Relight function.	(800)356-8000
MP100E	FIREYE	Programmer, Relight function. For MC230 only.	(800)356-8000
MP101			
	FIREYE	Programmer, Relight function. Will ignore flame signal during "off" cycle.	(800)356-8000
MP102	FIREYE	Programmer, 5 sec TFI, lockout on flame failure.	(800)356-8000
MP102E			
	FIREYE	Programmer, 5 sec TFI, lockout on flame failure. For MC230 only	(800)356-8000
MP230			
	FIREYE	Programmer, Selectable recycle/non-recycle function, TFI, and purge timing.	(800)356-8000
MP230H			
	FIREYE	Programmer, Selectable recycle/non-recycle function, TFI, and purge timing. Pilot stabilization, two stage capability.	(800)356-8000
MP560			
	FIREYE	Programmer, Selectable recycle/non-recycle function, TFI, and purge timing. Pilot cutoff, pilot stabilization, check-run switch.	(800)356-8000
MP561			
	FIREYE	Programmer, Selectable recycle/non-recycle function, TFI, and purge timing. Pilot cutoff, check-run switch.	(800)356-8000
MP562			
	FIREYE	Programmer, Selectable TFI, and purge timing. Pilot cutoff, pilot stabilization, lockout on loss of air flow, non-recycle, check-run switch.	(800)356-8000
MT1-006	FIREYE	Mount Tube 6" long (ignitor lengths 014 through 020)	(800)356-8000
MT1-016	FIREYE	Mount Tube 16" long (ignitor lengths 022 through 030)	(800)356-8000
MT1-026	FIREYE	Mount Tube 26" long (ignitor lengths 032 through 040)	(800)356-8000
MT1-036	FIREYE	Mount Tube 36" long (ignitor lengths 042 through 050)	(800)356-8000
MT1-046	FIREYE	Mount Tube 46" long (ignitor lengths 052 through 060)	(800)356-8000
MT1-056	FIREYE	Mount Tube 56" long (ignitor lengths 062 through 070)	(800)356-8000
MT1-066	FIREYE	Mount Tube 66" long (ignitor lengths 072 through 080)	(800)356-8000
MT1-076	FIREYE	Mount Tube 76" long (ignitor lengths 082 through 090)	(800)356-8000
MT1-086	FIREYE	Mount Tube 86" long (ignitor lengths 092 through 100)	(800)356-8000
MT1-096	FIREYE	Mount Tube 96" long (ignitor lengths 102 through 110)	(800)356-8000
MT1-106	FIREYE	Mount Tube 106" long (ignitor lengths 112 through 120)	(800)356-8000
MT1-116	FIREYE	Mount Tube 116" long (ignitor lengths 122 through 130)	(800)356-8000
MT1-126	FIREYE	Mount Tube 126" long (ignitor lengths 132 through 140)	(800)356-8000
MT1-136	FIREYE	Mount Tube 136" long (ignitor lengths 142 through 150)	(800)356-8000
MT1-146	FIREYE	Mount Tube 146" long (ignitor lengths 152 through 160)	(800)356-8000
MT1-156	FIREYE	Mount Tube 156" long (ignitor lengths 162 through 170)	(800)356-8000
MT1-166	FIREYE	Mount Tube 166" long (ignitor lengths 172 through 180)	(800)356-8000
MT1R-028	FIREYE	Retraction Mounting Tube, 28"	(800)356-8000
MT1R-030	FIREYE	Retraction Mounting Tube, 30"	(800)356-8000
MT1R-032	FIREYE	Retraction Mounting Tube, 32"	(800)356-8000
MT1R-034	FIREYE	Retraction Mounting Tube, 34"	(800)356-8000
MT1R-036	FIREYE	Retraction Mounting Tube, 36"	(800)356-8000
MT1R-038	FIREYE	Retraction Mounting Tube, 38"	(800)356-8000
MT1R-040	FIREYE	Retraction Mounting Tube, 40"	(800)356-8000
MT1R-042	FIREYE	Retraction Mounting Tube, 42"	(800)356-8000
MT1R-044	FIREYE	Retraction Mounting Tube, 44"	(800)356-8000
MT1R-046	FIREYE	Retraction Mounting Tube, 46"	(800)356-8000
MT1R-048	FIREYE	Retraction Mounting Tube, 48"	(800)356-8000
MT1R-050	FIREYE	Retraction Mounting Tube, 50"	(800)356-8000

MT1R-052	FIREYE	Retraction Mounting Tube, 52"	(800)356-8000
MT1R-054	FIREYE	Retraction Mounting Tube, 54"	(800)356-8000
MT1R-056	FIREYE	Retraction Mounting Tube, 56"	(800)356-8000
MT1R-058	FIREYE	Retraction Mounting Tube, 58"	(800)356-8000
MT1R-060	FIREYE	Retraction Mounting Tube, 60"	(800)356-8000
MT1R-062	FIREYE	Retraction Mounting Tube, 62"	(800)356-8000
MT1R-064	FIREYE	Retraction Mounting Tube, 64"	(800)356-8000
MT1R-066	FIREYE	Retraction Mounting Tube, 66"	(800)356-8000
MT1R-068	FIREYE	Retraction Mounting Tube, 68"	(800)356-8000
MT1R-070	FIREYE	Retraction Mounting Tube, 70"	(800)356-8000
MT1R-072	FIREYE	Retraction Mounting Tube, 72"	(800)356-8000
MT1R-074	FIREYE	Retraction Mounting Tube, 74"	(800)356-8000
MT1R-076	FIREYE	Retraction Mounting Tube, 76"	(800)356-8000
MT1R-078	FIREYE	Retraction Mounting Tube, 78"	(800)356-8000
MT1R-080	FIREYE	Retraction Mounting Tube, 80"	(800)356-8000
MT1R-082	FIREYE	Retraction Mounting Tube, 82"	(800)356-8000
MT1R-084	FIREYE	Retraction Mounting Tube, 84"	(800)356-8000
MT1R-086	FIREYE	Retraction Mounting Tube, 86"	(800)356-8000
MT1R-088	FIREYE	Retraction Mounting Tube, 88"	(800)356-8000
MT1R-090	FIREYE	Retraction Mounting Tube, 90"	(800)356-8000
MT1R-092	FIREYE	Retraction Mounting Tube, 92"	(800)356-8000
MT1R-094	FIREYE	Retraction Mounting Tube, 94"	(800)356-8000
MT1R-096	FIREYE	Retraction Mounting Tube, 96"	(800)356-8000
MT1R-098	FIREYE	Retraction Mounting Tube, 98"	(800)356-8000
MT1R-100	FIREYE	Retraction Mounting Tube, 100"	(800)356-8000
MT1R-102	FIREYE	Retraction Mounting Tube, 102"	(800)356-8000
MT1R-104	FIREYE	Retraction Mounting Tube, 104"	(800)356-8000
MT1R-106	FIREYE	Retraction Mounting Tube, 106"	(800)356-8000
MT1R-108	FIREYE	Retraction Mounting Tube, 108"	(800)356-8000
MT1R-110	FIREYE	Retraction Mounting Tube, 110"	(800)356-8000
MT1R-112	FIREYE	Retraction Mounting Tube, 112"	(800)356-8000
MT1R-114	FIREYE	Retraction Mounting Tube, 114"	(800)356-8000
MT1R-116	FIREYE	Retraction Mounting Tube, 116"	(800)356-8000
MT1R-118	FIREYE	Retraction Mounting Tube, 118"	(800)356-8000
MT1R-120	FIREYE	Retraction Mounting Tube, 120"	(800)356-8000
MT1R-122	FIREYE	Retraction Mounting Tube, 122"	(800)356-8000
MT1R-124	FIREYE	Retraction Mounting Tube, 124"	(800)356-8000
MT1R-126	FIREYE	Retraction Mounting Tube, 126"	(800)356-8000
MT1R-128	FIREYE	Retraction Mounting Tube, 128"	(800)356-8000
MT1R-130	FIREYE	Retraction Mounting Tube, 130"	(800)356-8000
MT1R-132	FIREYE	Retraction Mounting Tube, 132"	(800)356-8000
MT1R-134	FIREYE	Retraction Mounting Tube, 134"	(800)356-8000
MT1R-136	FIREYE	Retraction Mounting Tube, 136"	(800)356-8000
MT1R-138	FIREYE	Retraction Mounting Tube, 138"	(800)356-8000
MT1R-140	FIREYE	Retraction Mounting Tube, 140"	(800)356-8000
MT1R-142	FIREYE	Retraction Mounting Tube, 142"	(800)356-8000
MT1R-144	FIREYE	Retraction Mounting Tube, 144"	(800)356-8000
MT1R-146	FIREYE	Retraction Mounting Tube, 146"	(800)356-8000
MT1R-148	FIREYE	Retraction Mounting Tube, 148"	(800)356-8000
MT1R-150	FIREYE	Retraction Mounting Tube, 150"	(800)356-8000
MT1R-152	FIREYE	Retraction Mounting Tube, 152"	(800)356-8000
MT1R-154	FIREYE	Retraction Mounting Tube, 154"	(800)356-8000
MT1R-156	FIREYE	Retraction Mounting Tube, 156"	(800)356-8000
MT1R-158	FIREYE	Retraction Mounting Tube, 158"	(800)356-8000
MT1R-160	FIREYE	Retraction Mounting Tube, 160"	(800)356-8000
MT1R-162	FIREYE	Retraction Mounting Tube, 162"	(800)356-8000
MT1R-164	FIREYE	Retraction Mounting Tube, 164"	(800)356-8000
MT1R-166	FIREYE	Retraction Mounting Tube, 166"	(800)356-8000
MT1R-168	FIREYE	Retraction Mounting Tube, 168"	(800)356-8000
MT1R-170	FIREYE	Retraction Mounting Tube, 170"	(800)356-8000
MT20-004	FIREYE	Mount Tube 4" long (ignitor lengths 014 through 020)	(800)356-8000

MT20-012	FIREYE	Mount Tube 12" long (ignitor lengths 022 through 030)	(800)356-8000
MT20-022	FIREYE	Mount Tube 22" long (ignitor lengths 032 through 040)	(800)356-8000
MT20-032	FIREYE	Mount Tube 32" long (ignitor lengths 042 through 050)	(800)356-8000
MT20-042	FIREYE	Mount Tube 42" long (ignitor lengths 052 through 060)	(800)356-8000
MT20-052	FIREYE	Mount Tube 52" long (ignitor lengths 062 through 070)	(800)356-8000
MT20-062	FIREYE	Mount Tube 62" long (ignitor lengths 072 through 080)	(800)356-8000
MT20-072	FIREYE	Mount Tube 72" long (ignitor lengths 082 through 090)	(800)356-8000
MT20-082	FIREYE	Mount Tube 82" long (ignitor lengths 092 through 100)	(800)356-8000
MT20-092	FIREYE	Mount Tube 92" long (ignitor lengths 102 through 110)	(800)356-8000
MT20-102	FIREYE	Mount Tube 102" long (ignitor lengths 112 through 120)	(800)356-8000
MT20-112	FIREYE	Mount Tube 112" long (ignitor lengths 122 through 130)	(800)356-8000
MT20-122	FIREYE	Mount Tube 122" long (ignitor lengths 132 through 140)	(800)356-8000
MT20-132	FIREYE	Mount Tube 132" long (ignitor lengths 142 through 150)	(800)356-8000
MT20-142	FIREYE	Mount Tube 142" long (ignitor lengths 152 through 160)	(800)356-8000
MT20-152	FIREYE	Mount Tube 152" long (ignitor lengths 162 through 170)	(800)356-8000
MT20-162	FIREYE	Mount Tube 162" long (ignitor lengths 172 through 180)	(800)356-8000
MT3010	FIREYE	Timing card, 30 sec purge, 10 sec TFI.	(800)356-8000
MT304	FIREYE	Timing card, 30 sec purge, 4 sec TFI.	(800)356-8000
MT55	FIREYE	Timing card, 5 sec purge, 5 sec TFI.	(800)356-8000
MT6010	FIREYE	Timing card, 60 sec purge, 10 sec TFI.	(800)356-8000
MT710	FIREYE	Timing card, 7 sec purge, 10 sec TFI.	(800)356-8000
MT74	FIREYE	Timing card, 7 sec purge, 4 sec TFI.	(800)356-8000
MT9010	FIREYE	Timing card, 90 sec purge, 10 sec TFI.	(800)356-8000
MT904	FIREYE	Timing card, 90 sec purge, 4 sec TFI.	(800)356-8000
MT905	FIREYE	Timing card, 90 sec purge, 5 sec TFI.	(800)356-8000
NX04-1	FIREYE	Servo-motor, 3 ft lbs., 4 Nm, 50/60 Hz, 120 VAC.	(800)356-8000
NX0410BV	FIREYE	Assembly - 2-1/2" Butterfly valve with NX04-1 servo.	(800)356-8000
NX0412BV	FIREYE	Assembly - 3" Butterfly valve with NX04-1 servo.	(800)356-8000
NX0416BV	FIREYE	Assembly - 4" Butterfly valve with NX04-1 servo.	(800)356-8000
NX04-2	FIREYE	Servo-motor, 3 ft lbs., 4 Nm, 50/60 Hz, 230 VAC.	(800)356-8000
NX044BV	FIREYE	Assembly - 1" Butterfly valve with NX04-1 servo.	(800)356-8000
NX045BV	FIREYE	Assembly - 1-1/4" Butterfly valve with NX04-1 servo.	(800)356-8000
NX046BV	FIREYE	Assembly - 1-1/2" Butterfly valve with NX04-1 servo.	(800)356-8000
NX048BV	FIREYE	Assembly - 2" Butterfly valve with NX04-1 servo.	(800)356-8000
NX1020-1	FIREYE	Replace with NX1021-1	(800)356-8000
NX1020-2	FIREYE	Replace with NX1021-2	(800)356-8000
NX1021-1	FIREYE	Gas Pressure Sensor: 0 - 8.8 PSI, 0 - 244" w.c., 0 - 600 millibar, 1/2" NPT. For use with Nexus only.	(800)356-8000
NX1021-2	FIREYE	Gas Pressure Sensor: 0 - 8.8 PSI, 0 - 244" w.c., 0 - 600 millibar, 1/4" BSP. For use with Nexus only.	(800)356-8000
NX1025-1	FIREYE	Replace with NX1034-1	(800)356-8000
NX1025-2	FIREYE	Replace with NX1034-2	(800)356-8000
NX1030-1	FIREYE	Steam Pressure Sensor: 0 - 362.5 PSI, 0 - 25 bars, 1/2" NPT. For use with Nexus only.	(800)356-8000
NX1030-2	FIREYE	Steam Pressure Sensor: 0 - 362.5 PSI, 0 - 25 bars, 1/4" BSP. For use with Nexus only.	(800)356-8000
NX1034-1	FIREYE	Steam Pressure Sensor: 0 - 58 PSI, 0 - 4 bar, 1/2" NPT. For use with Nexus only.	(800)356-8000
NX1034-2	FIREYE	Steam Pressure Sensor: 0 - 58 PSI, 0 - 4 bar, 1/4" BSP. For use with Nexus only.	(800)356-8000
NX1040-1	FIREYE	Boiler Temperature Sensor: 32 - 302 F, 0 - 150 C, 6" length, 1/4" dia., thermowell required, not provided.	(800)356-8000
NX1044-1	FIREYE	Boiler Temperature Sensor: 32 - 752 F, 0 - 400 C, 6" length, 1/4" dia., thermowell required, not provided.	(800)356-8000
NX1386-1	FIREYE	Closed wiring base for surface mtg., 120 VAC, UL listed.	(800)356-8000
NX1386-2	FIREYE	Closed wiring base for surface mtg., 230 VAC, UL listed.	(800)356-8000
NX1466-1	FIREYE	Open wiring base for cabinet mtg., 120 VAC, UL recognized.	(800)356-8000
NX1466-2	FIREYE	Open wiring base for cabinet mtg., 230 VAC, UL recognized.	(800)356-8000
NX20-1	FIREYE	Servo-motor, 15 ft lbs., 20 Nm., 50/60 Hz, 120 VAC.	(800)356-8000

NX2010BV	FIREYE	Assembly - 2-1/2" Butterfly valve with NX20-1 servo.	(800)356-8000
NX2012BV	FIREYE	Assembly - 3" Butterfly valve with NX20-1 servo.	(800)356-8000
NX2016BV	FIREYE	Assembly - 4" Butterfly valve with NX20-1 servo.	(800)356-8000
NX20-2	FIREYE	Servo-motor, 15 ft lbs., 20 Nm., 50/60 Hz, 230 VAC.	(800)356-8000
NX204BV	FIREYE	Assembly - 1" Butterfly valve with NX20-1 servo.	(800)356-8000
NX205BV	FIREYE	Assembly - 1-1/4" Butterfly valve with NX20-1 servo.	(800)356-8000
NX206BV	FIREYE	Assembly - 1-1/2" Butterfly valve with NX20-1 servo.	(800)356-8000
NX208BV	FIREYE	Assembly - 2" Butterfly valve with NX20-1 servo.	(800)356-8000
NX280ATI	FIREYE	Trim and Analyzer Interface passcodes - included with NX280HW.	(800)356-8000
NX280HW	FIREYE	Expansion Interface Hardware: 4 AI, 4 AO, Additional Channel, O2 trim and Variable Speed Drive	(800)356-8000
NX280HW	FIREYE	Expansion Interface Hardware: 4 AI, 4 AO, Additional Channel, O2 trim and Variable Speed Drive. Includes NX280VSD and NX280ATI passcodes.	(800)356-8000
NX280PK	FIREYE	Zirconia Exhaust Gas Probe Assembly.	(800)356-8000
NX280PK	FIREYE	Zirconia Exhaust Gas Probe Assembly.	(800)356-8000
NX280VSD	FIREYE	Variable Speed Drive Interface passcodes - included with NX280HW.	(800)356-8000
NX3000	FIREYE	CE Approved Controller (3 channel) for up to 3 independent servo-motors (2 fuel, 1 air). Selectable purge, PTFI, and MTFI timings.	(800)356-8000
NX3100	FIREYE	UL Approved Controller (3 channel) for up to 3 independent servo-motors (2 fuel, 1 air). Selectable purge, PTFI, and MTFI timings.	(800)356-8000
NX31CPUN	FIREYE	Replacement CPU board for NX3100.	(800)356-8000
NX4000	FIREYE	CE Approved Controller (4 channel) for up to 4 independent servo-motors (2 fuel, 2 air). Selectable purge, PTFI, and MTFI timings.	(800)356-8000
NX4100	FIREYE	UL Approved Controller (4 channel) for up to 4 independent servo-motors (2 fuel, 2 air). Selectable purge, PTFI, and MTFI timings.	(800)356-8000
NX41CPUN	FIREYE	Replacement CPU board for NX4100.	(800)356-8000
NX50-1	FIREYE	Servo-motor, 37 ft lbs., 50 Nm, 50/60 Hz, 120 VAC.	(800)356-8000
NX50-2	FIREYE	Servo-motor, 37 ft lbs., 50 Nm, 50/60 Hz, 230 VAC.	(800)356-8000
NX5100	FIREYE	UL Approved Controller (3 channel gas, staged firing of oil) for up to 3 independent servo-motors (1 gas, 2 air). Selectable purge, PTFI, and MTFI timings.	(800)356-8000
NX550	FIREYE	Panel mount, 2 line by 20 character vacuum fluorescent display with 8 multi-function key keypad - OPTIONAL	(800)356-8000
NX550	FIREYE	Panel mount, 2 line by 20 character vacuum fluorescent display with 8 multi-function key keypad for NX3000 / NX3100 / NX4000 / NX4100 / NX5100 / PPC5000.	(800)356-8000
NX552	FIREYE	Panel mount LED display for PPC5001	(800)356-8000
NX98-1	FIREYE	Servo-motor, 72 ft lbs., 98 Nm, 50/60 Hz, 120 VAC.	(800)356-8000
NXA-CAB10	FIREYE	Interconnecting cable from O2 probe to NX280HW, 33 feet (10 m.)	(800)356-8000
NXA-CAB20	FIREYE	Interconnecting cable from O2 probe to controller, 66 feet (20 m.)	(800)356-8000
NXA-CAB30	FIREYE	Interconnecting cable from O2 probe to controller, 99 feet (30 m.)	(800)356-8000
NXAM	FIREYE	ComFire software for PPC5000 / NX280. Includes 1 passcode for Nexus and/or PPC5000. One per site.	(800)356-8000
NXAMS	FIREYE	ComFire software with sequencing for PPC5000 / NX280. Includes passcode for Nexus and/or PPC5000. One per site.	(800)356-8000
NXA-PS1000	FIREYE	Angled gas sampling tube (1000mm) for NX280PK for flues 1200mm to 4000mm.	(800)356-8000
NXA-PS500	FIREYE	Angled gas sampling tube (500mm) for NX280PK for flues 600mm to 2000mm.	(800)356-8000
NXA-PWS	FIREYE	Weather shield for O2 probe.	(800)356-8000

NXATS	FIREYE		(800)356-8000
NXCAP1	FIREYE	Calibration pump for Nexus O2 probe.	(800)356-8000
NXF16-2	FIREYE	Assembly - Oil metering valve, F-1/2-16 with NX20-1 servo.	(800)356-8000
NXF18-1	FIREYE	Assembly - Oil metering valve, F-1/2-18 with NX04-1 servo.	(800)356-8000
NXF18-2	FIREYE	Assembly - Oil metering valve, F-1/2-18 with NX20-1 servo.	(800)356-8000
NXF20-1	FIREYE	Assembly - Oil metering valve, F-1/2-20 with NX04-1 servo.	(800)356-8000
NXF20-2	FIREYE	Assembly - Oil metering valve, F-1/2-20 with NX20-1 servo.	(800)356-8000
NXF24-1	FIREYE	Assembly - Oil metering valve, F-1/2-24 with NX04-1 servo.	(800)356-8000
NXF24-2	FIREYE	Assembly - Oil metering valve, F-1/2-24 with NX20-1 servo.	(800)356-8000
NXMBI	FIREYE	"Modbus RTU" interface, standard DIN rail mount. Networks up to 15 Fireye Nexus Systems. 7-35 VDC power supply required.	(800)356-8000
NXPBI	FIREYE	"Profibus" interface, standard DIN rail mount. Networks up to 15 Fireye Nexus Systems. 7-35 VDC power supply required.	(800)356-8000
NXPSU	FIREYE	Replacement power supply board for NX3100/NX4100.	(800)356-8000
NXS11-1	FIREYE	Assembly - Oil metering valve, S-3-11 with NX04-1 servo.	(800)356-8000
NXS11-2	FIREYE	Assembly - Oil metering valve, S-3-11 with NX20-1 servo.	(800)356-8000
NXS3-1	FIREYE	Assembly - Oil metering valve, S-3-3 with NX04-1 servo.	(800)356-8000
NXS3-2	FIREYE	Assembly - Oil metering valve, S-3-3 with NX20-1 servo.	(800)356-8000
NXS5-1	FIREYE	Assembly - Oil metering valve, S-3-5 with NX04-1 servo.	(800)356-8000
NXS5-2	FIREYE	Assembly - Oil metering valve, S-3-5 with NX20-1 servo.	(800)356-8000
NXS7-1	FIREYE	Assembly - Oil metering valve, S-3-7 with NX04-1 servo.	(800)356-8000
NXS7-2	FIREYE	Assembly - Oil metering valve, S-3-7 with NX20-1 servo.	(800)356-8000
NXS9-1	FIREYE	Assembly - Oil metering valve, S-3-9 with NX04-1 servo.	(800)356-8000
NXS9-2	FIREYE	Assembly - Oil metering valve, S-3-9 with NX20-1 servo.	(800)356-8000
NXSO	FIREYE	Sequencing software only for PPC5000 / NX280. Includes passcode for Nexus and/or PPC5000. One per site.	(800)356-8000
PD4R	FIREYE	Modernization kit.	(800)356-8000
PFM10R	FIREYE	P-Series to FLAME-MONITOR Modernization kit.	(800)356-8000
PFM1R	FIREYE	P-Series to FLAME-MONITOR Modernization kit.	(800)356-8000
PFM260IR	FIREYE	Replacement kit consists of E110, ED510, EP260, E1R1, 4-263, 60-1386-2 (does not include adaptor).	(800)356-8000
PFM2R	FIREYE	P-Series to FLAME-MONITOR Modernization kit.	(800)356-8000
PFM2UV	FIREYE	P-Series to FLAME-MONITOR Modernization kit.	(800)356-8000
PFM3R	FIREYE	P-Series to FLAME-MONITOR Modernization kit.	(800)356-8000
PFM3UV	FIREYE	P-Series to FLAME-MONITOR Modernization kit.	(800)356-8000
PFM9R	FIREYE	P-Series to FLAME-MONITOR Modernization kit.	(800)356-8000
PPC5000	FIREYE	Stand-alone parallel positioning controller with four selectable function servo-motor outputs. Includes NX550 display.	(800)356-8000
PPC5001	FIREYE	Stand-alone parallel positioning controller with four selectable function servo-motor outputs. Includes NX552 display.	(800)356-8000
PS348-1	FIREYE	Gas pressure sensor, Range: 0-16" W.C.	(800)356-8000
PS348-2	FIREYE	Gas pressure sensor, Range: 0-32" W.C.	(800)356-8000
PS348-3	FIREYE	Gas pressure sensor, Range: 0-160" W.C.	(800)356-8000
PS348-4	FIREYE	Steam pressure sensor, Range: 1-17 PSIG.	(800)356-8000
PS348-5	FIREYE	Steam pressure sensor, Range: 1-33 PSIG.	(800)356-8000
PS348-6	FIREYE	Steam/Oil pressure sensor, Range: 10-170 PSIG.	(800)356-8000
PS348-7	FIREYE	Steam/Oil pressure sensor, Range: 10-330 PSIG.	(800)356-8000
PS348-8	FIREYE	Steam pressure sensor, Range: 50-850 PSIG.	(800)356-8000

PXMS-15	FIREYE	Steam Pressure Sensor: 0 - 15 PSI, 0 - 1 bar, 4-20mA output, 1/2" NPT, non self-check (for use with PPC5000 and Nexus).	(800)356-8000
PXMS-200	FIREYE	Steam Pressure Sensor: 0 - 200 PSI, 0 - 14 bar, 4-20mA output, 1/2" NPT, non self-check (for use with PPC5000 and Nexus).	(800)356-8000
PXMS-300	FIREYE	Steam Pressure Sensor: 0 - 300 PSI, 0 - 21 bar, 4-20mA output, 1/2" NPT, non self-check (for use with PPC5000 and Nexus).	(800)356-8000
Q2625A1303	FIREYE	Swivel mount assembly with flange.	(800)356-8000
Q2625A1314	FIREYE	Swivel mount assembly without flange.	(800)356-8000
Q2625A1316	FIREYE	Two plate swivel mount assembly with flange.	(800)356-8000
Q9050A1000	FIREYE	Mounting adaptor for CE scanner.	(800)356-8000
Q9062A	FIREYE	Style F mounting adaptor, coffin head.	(800)356-8000
Q9065A1000	FIREYE	B Style mounting adaptor.	(800)356-8000
Q9105	FIREYE	Rack only.	(800)356-8000
Q9801C1124	FIREYE	8 position mounting rack for R9101M, R9105, R9108, and R9107.	(800)356-8000
Q9801C1126	FIREYE	8 position mounting rack with jumpers for R9105, R9108, and R9107.	(800)356-8000
R9005P5001	FIREYE	Controller, panel mounted, for C9501, C9502, C9507, C9503M, C9503P, C9504M, and C9504P scanners.	(800)356-8000
R9006M3000	FIREYE	Panel mounted controller (120 VAC) for non self-check C9506 Series scanners.	(800)356-8000
R9006M3011	FIREYE	Panel mounted controller (220 VAC) for non self-check C9506 Series scanners.	(800)356-8000
R9008M4001	FIREYE	Panel mounted controller (120 VAC) for C9508 Series scanners.	(800)356-8000
R9105N222C	FIREYE	Replaced by R9105P5002	(800)356-8000
R9105N223C	FIREYE	Replaced by R9105P5002	(800)356-8000
R9105N224C	FIREYE	Replaced by R9105P5002	(800)356-8000
R9105N225C	FIREYE	Replaced by R9105P5002	(800)356-8000
R9105P5002	FIREYE	Rack mounted controller, jumper selectable voltage and FFRT.	(800)356-8000
R9107A1001	FIREYE	Rack mounted controller for C9701 and C9707 non-incendive scanners.	(800)356-8000
R9108M1001	FIREYE	Rack mounted controller for C9508 Series scanners.	(800)356-8000
SF1-1	FIREYE	SureFire HEI Power Pack, 110 VAC, NEMA 4 (painted steel)	(800)356-8000
SF1-2	FIREYE	SureFire HEI Power Pack, 220 VAC, NEMA 4 (painted steel)	(800)356-8000
SF1-3	FIREYE	SureFire HEI Power Pack, 110 VAC, NEMA 4X (stainless)	(800)356-8000
SF1-4	FIREYE	SureFire HEI Power Pack, 220 VAC, NEMA 4X (stainless)	(800)356-8000
SF1-CA1-06	FIREYE	SureFire HEI Interconnecting cable with connectors, 6 ft.	(800)356-8000
SF1-CA1-09	FIREYE	SureFire HEI Interconnecting cable with connectors, 9 ft.	(800)356-8000
SF1-CA1-12	FIREYE	SureFire HEI Interconnecting cable with connectors, 12 ft.	(800)356-8000
SF1-CA1-15	FIREYE	SureFire HEI Interconnecting cable with connectors, 15 ft.	(800)356-8000
SF1-CA1-20	FIREYE	SureFire HEI Interconnecting cable with connectors, 20 ft.	(800)356-8000
SF1-CA1-25	FIREYE	SureFire HEI Interconnecting cable with connectors, 25 ft.	(800)356-8000
SF1-RET-1	FIREYE	Retractor Assembly, 6" Stroke, 110 VAC solenoid.	(800)356-8000
SF1-RET-2	FIREYE	Retractor Assembly, 6" Stroke, 220 VAC solenoid.	(800)356-8000
SF1-RET-3	FIREYE	Retractor Assembly, 9" Stroke, 110 VAC solenoid.	(800)356-8000
SF1-RET-4	FIREYE	Retractor Assembly, 9" Stroke, 220 VAC solenoid.	(800)356-8000
SF1-RET-5	FIREYE	Retractor Assembly, 12" Stroke, 110 VAC solenoid.	(800)356-8000
SF1-RET-6	FIREYE	Retractor Assembly, 12" Stroke, 220 VAC solenoid.	(800)356-8000

SF20-136	FIREYE	SureFire Gas Ignitor, 136"	(800)356-8000
SF20-138	FIREYE	SureFire Gas Ignitor, 138"	(800)356-8000
SF20-140	FIREYE	SureFire Gas Ignitor, 140"	(800)356-8000
SF20-142	FIREYE	SureFire Gas Ignitor, 142"	(800)356-8000
SF20-144	FIREYE	SureFire Gas Ignitor, 144"	(800)356-8000
SF20-146	FIREYE	SureFire Gas Ignitor, 146"	(800)356-8000
SF20-148	FIREYE	SureFire Gas Ignitor, 148"	(800)356-8000
SF20-150	FIREYE	SureFire Gas Ignitor, 150"	(800)356-8000
SF20-152	FIREYE	SureFire Gas Ignitor, 152"	(800)356-8000
SF20-154	FIREYE	SureFire Gas Ignitor, 154"	(800)356-8000
SF20-156	FIREYE	SureFire Gas Ignitor, 156"	(800)356-8000
SF20-158	FIREYE	SureFire Gas Ignitor, 158"	(800)356-8000
SF20-160	FIREYE	SureFire Gas Ignitor, 160"	(800)356-8000
SF20-162	FIREYE	SureFire Gas Ignitor, 162"	(800)356-8000
SF20-164	FIREYE	SureFire Gas Ignitor, 164"	(800)356-8000
SF20-166	FIREYE	SureFire Gas Ignitor, 166"	(800)356-8000
SF20-168	FIREYE	SureFire Gas Ignitor, 168"	(800)356-8000
SF20-170	FIREYE	SureFire Gas Ignitor, 170"	(800)356-8000
SF20-172	FIREYE	SureFire Gas Ignitor, 172"	(800)356-8000
SF20-174	FIREYE	SureFire Gas Ignitor, 174"	(800)356-8000
SF20-176	FIREYE	SureFire Gas Ignitor, 176"	(800)356-8000
SF20-178	FIREYE	SureFire Gas Ignitor, 178"	(800)356-8000
SF20-180	FIREYE	SureFire Gas Ignitor, 180"	(800)356-8000
SFR-014	FIREYE	HEI Spark Rod, 14 inches	(800)356-8000
SFR-016	FIREYE	HEI Spark Rod, 16 inches	(800)356-8000
SFR-018	FIREYE	HEI Spark Rod, 18 inches	(800)356-8000
SFR-020	FIREYE	HEI Spark Rod, 20 inches	(800)356-8000
SFR-022	FIREYE	HEI Spark Rod, 22 inches	(800)356-8000
SFR-024	FIREYE	HEI Spark Rod, 24 inches	(800)356-8000
SFR-026	FIREYE	HEI Spark Rod, 26 inches	(800)356-8000
SFR-028	FIREYE	HEI Spark Rod, 28 inches	(800)356-8000
SFR-030	FIREYE	HEI Spark Rod, 30 inches	(800)356-8000
SFR-032	FIREYE	HEI Spark Rod, 32 inches	(800)356-8000
SFR-034	FIREYE	HEI Spark Rod, 34 inches	(800)356-8000
SFR-036	FIREYE	HEI Spark Rod, 36 inches	(800)356-8000
SFR-038	FIREYE	HEI Spark Rod, 38 inches	(800)356-8000
SFR-040	FIREYE	HEI Spark Rod, 40 inches	(800)356-8000
SFR-042	FIREYE	HEI Spark Rod, 42 inches	(800)356-8000
SFR-044	FIREYE	HEI Spark Rod, 44 inches	(800)356-8000
SFR-046	FIREYE	HEI Spark Rod, 46 inches	(800)356-8000
SFR-048	FIREYE	HEI Spark Rod, 48 inches	(800)356-8000
SFR-050	FIREYE	HEI Spark Rod, 50 inches	(800)356-8000
SFR-052	FIREYE	HEI Spark Rod, 52 inches	(800)356-8000
SFR-054	FIREYE	HEI Spark Rod, 54 inches	(800)356-8000
SFR-056	FIREYE	HEI Spark Rod, 56 inches	(800)356-8000
SFR-058	FIREYE	HEI Spark Rod, 58 inches	(800)356-8000
SFR-060	FIREYE	HEI Spark Rod, 60 inches	(800)356-8000
SFR-062	FIREYE	HEI Spark Rod, 62 inches	(800)356-8000
SFR-064	FIREYE	HEI Spark Rod, 64 inches	(800)356-8000
SFR-066	FIREYE	HEI Spark Rod, 66 inches	(800)356-8000
SFR-068	FIREYE	HEI Spark Rod, 68 inches	(800)356-8000
SFR-070	FIREYE	HEI Spark Rod, 70 inches	(800)356-8000
SFR-072	FIREYE	HEI Spark Rod, 72 inches	(800)356-8000
SFR-074	FIREYE	HEI Spark Rod, 74 inches	(800)356-8000
SFR-076	FIREYE	HEI Spark Rod, 76 inches	(800)356-8000
SFR-078	FIREYE	HEI Spark Rod, 78 inches	(800)356-8000
SFR-080	FIREYE	HEI Spark Rod, 80 inches	(800)356-8000
SFR-082	FIREYE	HEI Spark Rod, 82 inches	(800)356-8000
SFR-084	FIREYE	HEI Spark Rod, 84 inches	(800)356-8000
SFR-086	FIREYE	HEI Spark Rod, 86 inches	(800)356-8000
SFR-088	FIREYE	HEI Spark Rod, 88 inches	(800)356-8000

SFR-090	FIREYE	HEI Spark Rod, 90 inches	(800)356-8000
SFR-092	FIREYE	HEI Spark Rod, 92 inches	(800)356-8000
SFR-094	FIREYE	HEI Spark Rod, 94 inches	(800)356-8000
SFR-096	FIREYE	HEI Spark Rod, 96 inches	(800)356-8000
SFR-098	FIREYE	HEI Spark Rod, 98 inches	(800)356-8000
SFR-100	FIREYE	HEI Spark Rod, 100 inches	(800)356-8000
SFR-102	FIREYE	HEI Spark Rod, 102 inches	(800)356-8000
SFR-104	FIREYE	HEI Spark Rod, 104 inches	(800)356-8000
SFR-106	FIREYE	HEI Spark Rod, 106 inches	(800)356-8000
SFR-108	FIREYE	HEI Spark Rod, 108 inches	(800)356-8000
SFR-110	FIREYE	HEI Spark Rod, 110 inches	(800)356-8000
SFR-112	FIREYE	HEI Spark Rod, 112 inches	(800)356-8000
SFR-114	FIREYE	HEI Spark Rod, 114 inches	(800)356-8000
SFR-116	FIREYE	HEI Spark Rod, 116 inches	(800)356-8000
SFR-118	FIREYE	HEI Spark Rod, 118 inches	(800)356-8000
SFR-120	FIREYE	HEI Spark Rod, 120 inches	(800)356-8000
SFR-122	FIREYE	HEI Spark Rod, 122 inches	(800)356-8000
SFR-124	FIREYE	HEI Spark Rod, 124 inches	(800)356-8000
SFR-126	FIREYE	HEI Spark Rod, 126 inches	(800)356-8000
SFR-128	FIREYE	HEI Spark Rod, 128 inches	(800)356-8000
SFR-130	FIREYE	HEI Spark Rod, 130 inches	(800)356-8000
SFR-132	FIREYE	HEI Spark Rod, 132 inches	(800)356-8000
SFR-134	FIREYE	HEI Spark Rod, 134 inches	(800)356-8000
SFR-136	FIREYE	HEI Spark Rod, 136 inches	(800)356-8000
SFR-138	FIREYE	HEI Spark Rod, 138 inches	(800)356-8000
SFR-140	FIREYE	HEI Spark Rod, 140 inches	(800)356-8000
SFR-142	FIREYE	HEI Spark Rod, 142 inches	(800)356-8000
SFR-144	FIREYE	HEI Spark Rod, 144 inches	(800)356-8000
SFR-146	FIREYE	HEI Spark Rod, 146 inches	(800)356-8000
SFR-148	FIREYE	HEI Spark Rod, 148 inches	(800)356-8000
SFR-150	FIREYE	HEI Spark Rod, 150 inches	(800)356-8000
SFR-152	FIREYE	HEI Spark Rod, 152 inches	(800)356-8000
SFR-154	FIREYE	HEI Spark Rod, 154 inches	(800)356-8000
SFR-156	FIREYE	HEI Spark Rod, 156 inches	(800)356-8000
SFR-158	FIREYE	HEI Spark Rod, 158 inches	(800)356-8000
SFR-160	FIREYE	HEI Spark Rod, 160 inches	(800)356-8000
SFR-162	FIREYE	HEI Spark Rod, 162 inches	(800)356-8000
SFR-164	FIREYE	HEI Spark Rod, 164 inches	(800)356-8000
SFR-166	FIREYE	HEI Spark Rod, 166 inches	(800)356-8000
SFR-168	FIREYE	HEI Spark Rod, 168 inches	(800)356-8000
SFR-170	FIREYE	HEI Spark Rod, 170 inches	(800)356-8000
SFR-172	FIREYE	HEI Spark Rod, 172 inches	(800)356-8000
SFR-174	FIREYE	HEI Spark Rod, 174 inches	(800)356-8000
SFR-176	FIREYE	HEI Spark Rod, 176 inches	(800)356-8000
SFR-178	FIREYE	HEI Spark Rod, 178 inches	(800)356-8000
SFR-180	FIREYE	HEI Spark Rod, 180 inches	(800)356-8000
SMDK-1004	FIREYE	Service man's display kit. Consists of ED510 with back plate, MED2, and ED580-4.	(800)356-8000
SP14	FIREYE	Battery pads	(800)356-8000
TFM1D	FIREYE	Use MEC120, MEP100, MERT1	(800)356-8000
TFM1DE	FIREYE	Use MEC230, MEP100, MERT1	(800)356-8000
TFM1F	FIREYE	Use MEC120, MEP100, MERT4	(800)356-8000
TFM1FE	FIREYE	Use MEC230, MEP100, MERT4	(800)356-8000
TFM2	FIREYE	Use MEC120, MEP230, MERT4	(800)356-8000
TFM3	FIREYE	Use MEC120, MEP230, MERT4	(800)356-8000
TFM3H	FIREYE	Use MEC120, MEP230H, MERT4	(800)356-8000
TS348-2	FIREYE	Temperature sensor, Range: 32 - 750F/0-400C, 2" probe.	(800)356-8000
TS348-4	FIREYE	Temperature sensor, Range: 32 - 750F/0-400C, 4" probe.	(800)356-8000
TS348-8	FIREYE	Temperature sensor, Range: 32 - 750F/0-400C, 8" probe.	(800)356-8000
UR7A4	FIREYE	1/2" NPT, solid state UV/IR scanner, 6 ft shielded cable	(800)356-8000

UV1A12	FIREYE	UV scanner, 1/2" NPT connector, 12 ft. flex conduit (3600 mm).	(800)356-8000
UV1A-1-CEX	FIREYE	Cenelec EExd IIC explosion proof housing with UV1A scanner.	(800)356-8000
UV1A3	FIREYE	UV scanner, 1/2" NPT connector, 3 ft. flex conduit (900 mm).	(800)356-8000
UV1A50	FIREYE	UV scanner, 1/2" NPT connector, 50 ft. flex conduit.	(800)356-8000
UV1A50-EX	FIREYE	NEMA 7, Class 1, Div 1 and 2, Groups C and D; Class 2, Div 1 and 2, Groups E, F, and G explosion proof housing with UV1A50 scanner.	(800)356-8000
UV1A6	FIREYE	UV scanner, 1/2" NPT connector, 6 ft. flex conduit (1800 mm).	(800)356-8000
UV1A6-EX	FIREYE	NEMA 7, Class 1, Div 1 and 2, Groups C and D; Class 2, Div 1 and 2, Groups E, F, and G explosion proof housing with UV1A6 scanner.	(800)356-8000
UV1A8	FIREYE	UV scanner, 1/2" NPT connector, 8 ft. flex conduit (2400 mm).	(800)356-8000
UV1AC20	FIREYE	UV scanner, 1/2" NPT connector, axial mount, 20 foot cable (6100 mm), no flex conduit.	(800)356-8000
UV1B3	FIREYE	Replace with UV1A3	(800)356-8000
UV1B6	FIREYE	Replace with UV1A6	(800)356-8000
UV2	FIREYE	UV scanner, 3/8" NPT connector, 3 ft. flex conduit (900 mm).	(800)356-8000
UV2C	FIREYE	UV scanner, 3/8" NPT connector, 3 ft. no armor flex.	(800)356-8000
UV7A4	FIREYE	1'2" NPT straight UV scanner, 4 ft flex conduit with insulated nylon coupling.	(800)356-8000
UV7A4W	FIREYE	NEMA 4 UV Scanner, 1/2" NPT, 4 ft flex conduit with insulated nylon coupling.	(800)356-8000
UV7R4	FIREYE	1/2" NPT, 90 degree UV Scanner. 6 ft shielded cable	(800)356-8000
UV7SC	FIREYE	1" NPT self-check UV scanner	(800)356-8000
UV8A	FIREYE	UV scanner, 1/2" NPT connector, 90 degree angle head, 6 ft. cable, no armor flex.	(800)356-8000
UV8A20	FIREYE	UV scanner, 1/2" NPT connector, 90 degree angle head, 20 ft. cable, no armor flex.	(800)356-8000
UV90-3	FIREYE	UV non-self check scanner for frontal or side (90 degree) viewing. Complete with mounting fixture and 3 foot flex conduit (900 mm).	(800)356-8000
UV90-6	FIREYE	UV non-self check scanner for frontal or side (90 degree) viewing. Complete with mounting fixture and 6 foot flex conduit (1800 mm).	(800)356-8000
UV90-9	FIREYE	UV non-self check scanner for frontal or side (90 degree) viewing. Complete with mounting fixture and 9 foot flex conduit (2700 mm).	(800)356-8000
UVM1D	FIREYE	Use MEC120, MEP100, MEUV1	(800)356-8000
UVM1DE	FIREYE	Use MEC230, MEP100, MEUV1	(800)356-8000
UVM1F	FIREYE	Use MEC120, MEP100, MEUV4	(800)356-8000
UVM1FE	FIREYE	Use MEC230, MEP100, MEUV4	(800)356-8000
UVM2	FIREYE	Use MEC120, MEP230, MEUV4	(800)356-8000
UVM3	FIREYE	Use MEC120, MEP230, MEUV4	(800)356-8000
UVM3H	FIREYE	Use MEC120, MEP230H, MEUV4	(800)356-8000
UVM4	FIREYE	Use MEC120, MEP234, MEUV4	(800)356-8000
UVM4E	FIREYE	Use MEC230, MEP234, MEUV4	(800)356-8000
UVM5	FIREYE	Use MEC120, MEP560, MEUV4	(800)356-8000
UVM6	FIREYE	Use MEC120, MEP560, MEUV4	(800)356-8000